


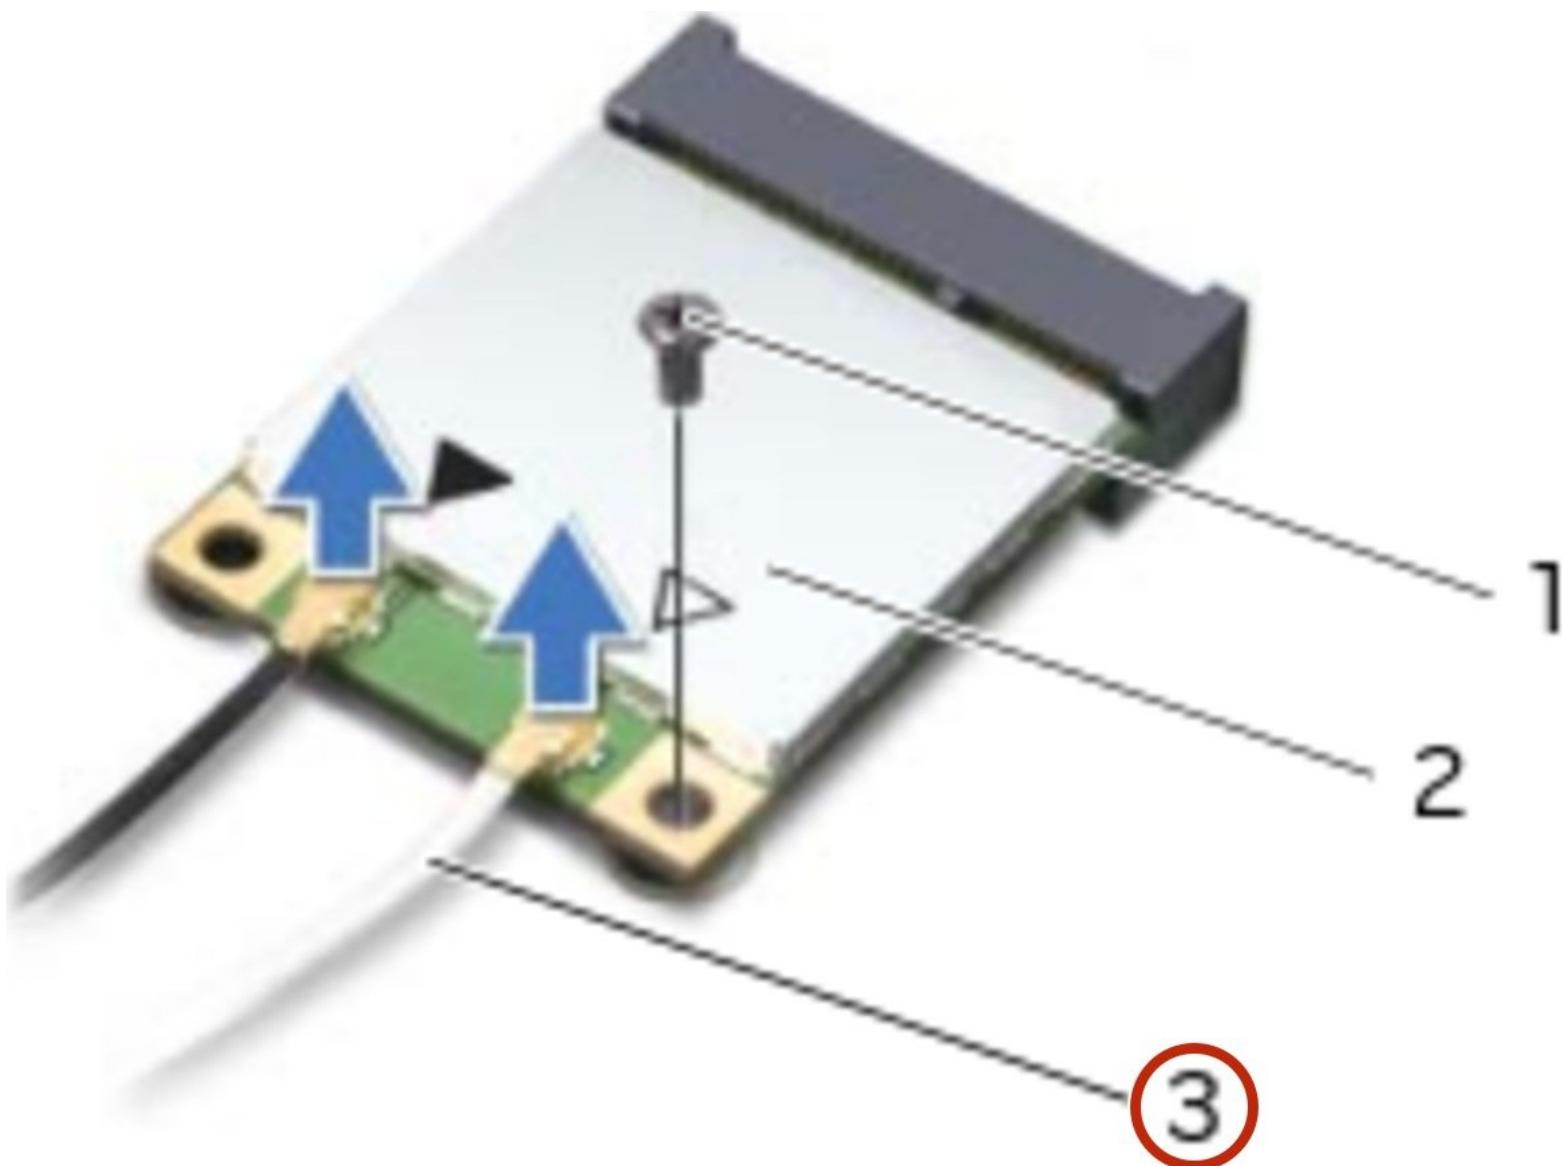

Dell Alienware 14 Wireless Mini-Card Replacement

Follow this guide to remove and replace the wireless card for the Dell Alienware 14.

Written By: Terrence15




INTRODUCTION

in this guide, we will be showing you how to remove and replace the Wireless Mini-Card.

TOOLS:

- Pro Tech Toolkit (1)



Step 1 — Close the Display

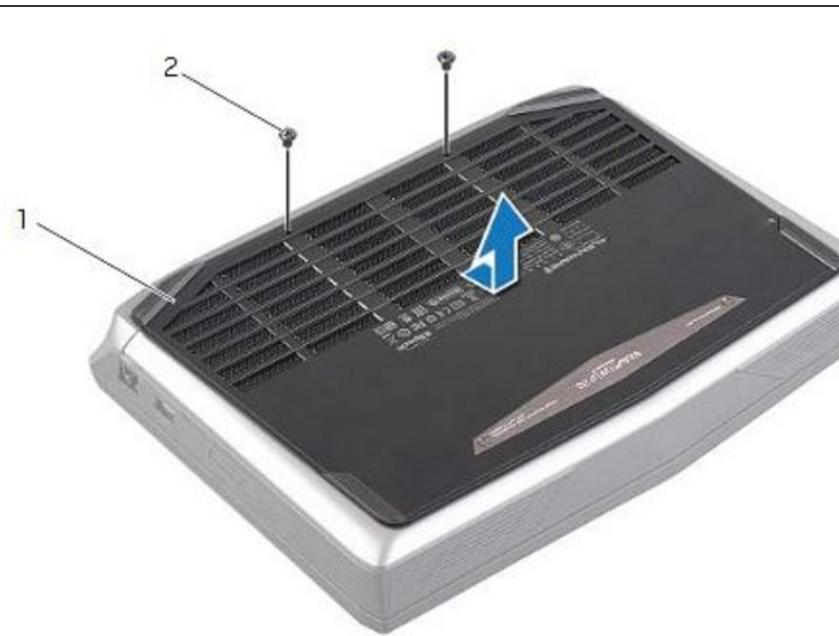

⚠️ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before You Begin](#). After working inside your computer, follow the instructions in ["After Working Inside Your Computer"](#).


- Close the display, and turn the computer over.

Step 2 — Remove the Screws

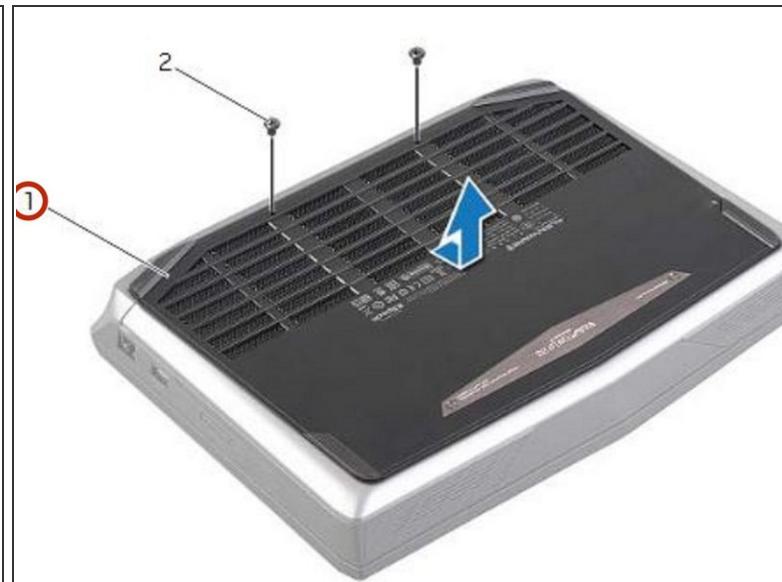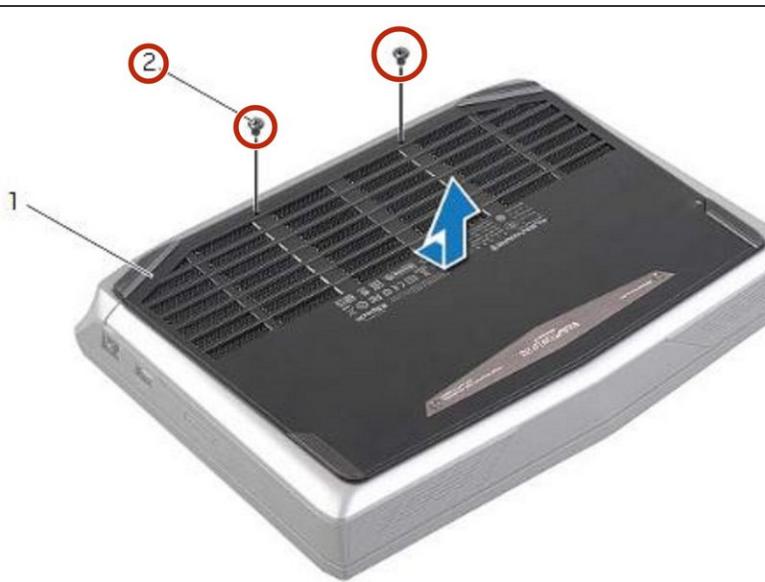


- Remove the screws that secure the base cover to the computer base.

Step 3 — Slide and Lift the Base Cover

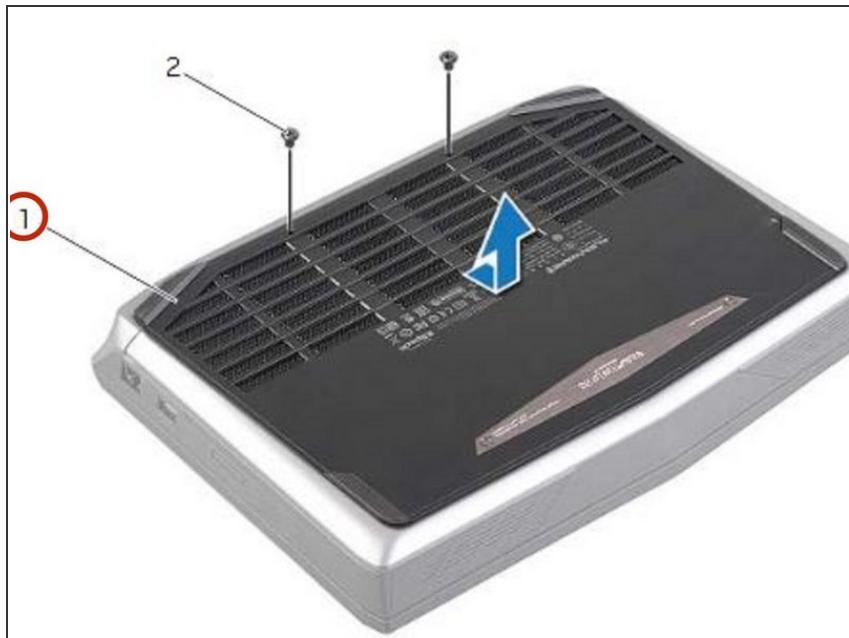


- Slide and lift the base cover off the computer base.

Step 4 — Align the Tabs

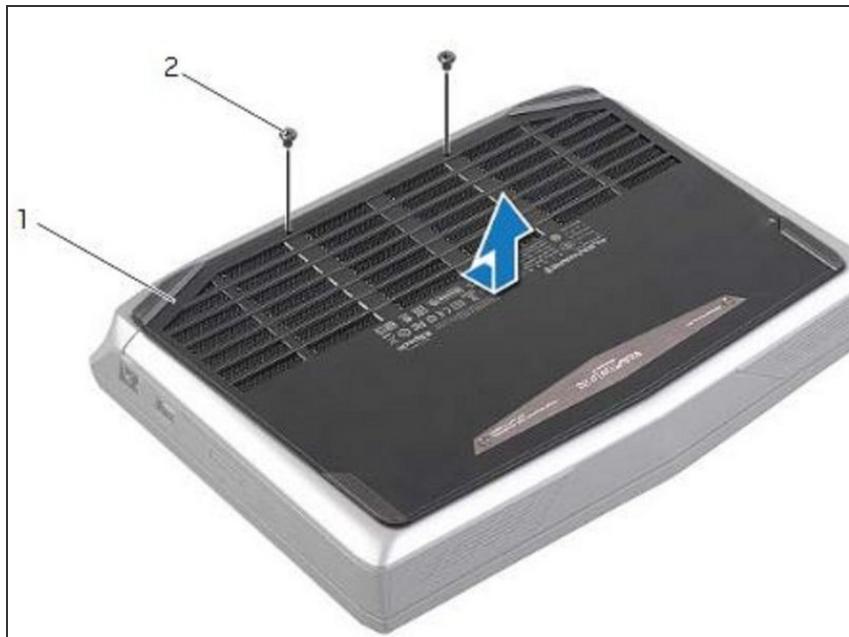


- Align the tabs on the **NEW** base cover with the slots on the computer base and slide the base cover into place.

Step 5 — Replace the Screws

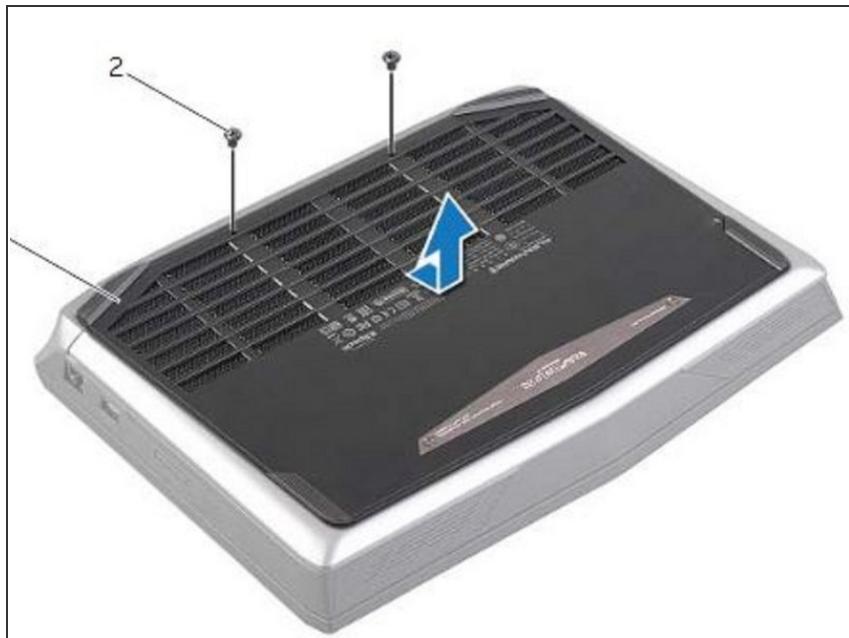


- Replace the screws that secure the base cover to the computer base.

Step 6 — Turn the Computer Over

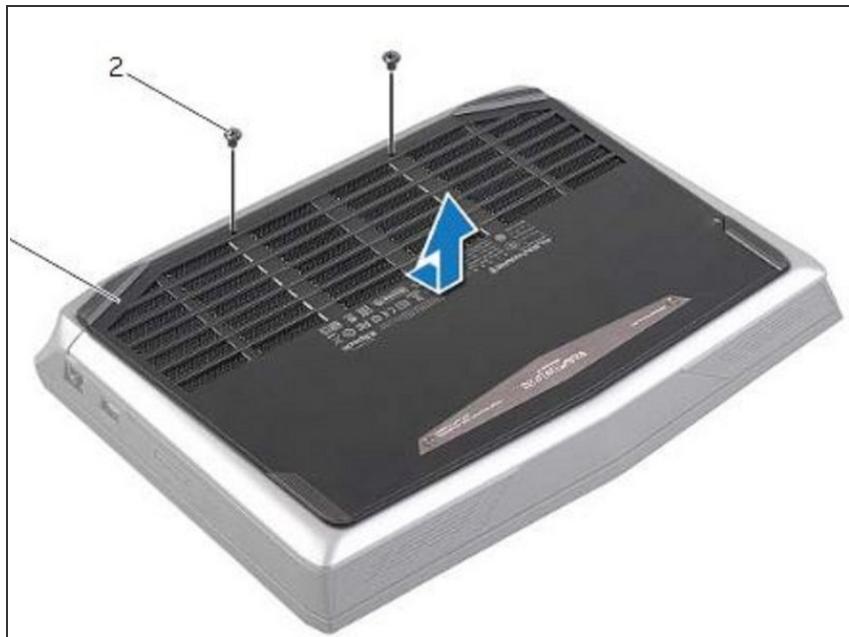

- Turn the computer over and open the display.


Step 7 — Disconnecting the Battery Cable

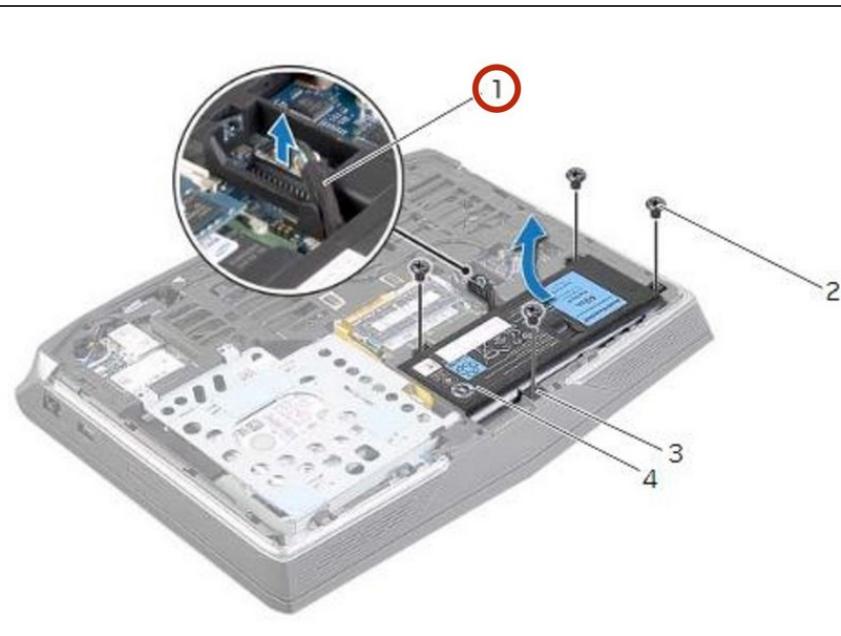

⚠️ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Disconnect the battery cable from the system-board connector.

Step 8 — Remove the Screws

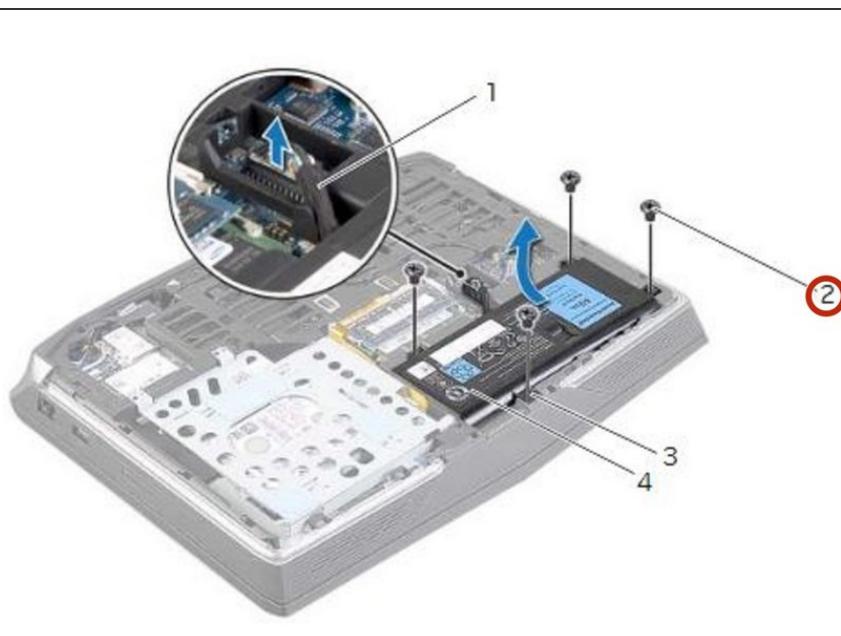


- Remove the screws that secure the battery to the computer base.

Step 9 — Using the Battery Cable

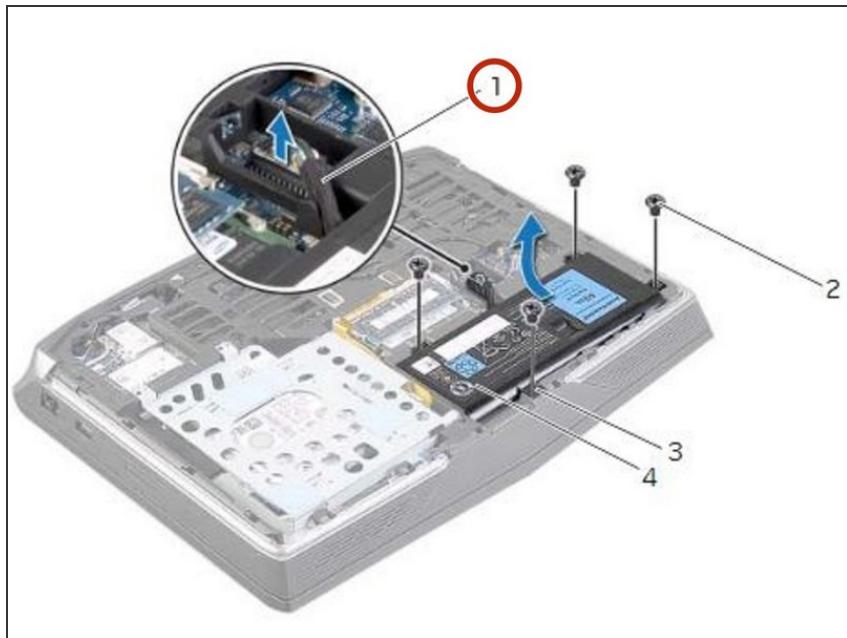


- Using the battery cable, lift the battery and release it from the tabs on the computer base.

Step 10 — Turn the Computer Over

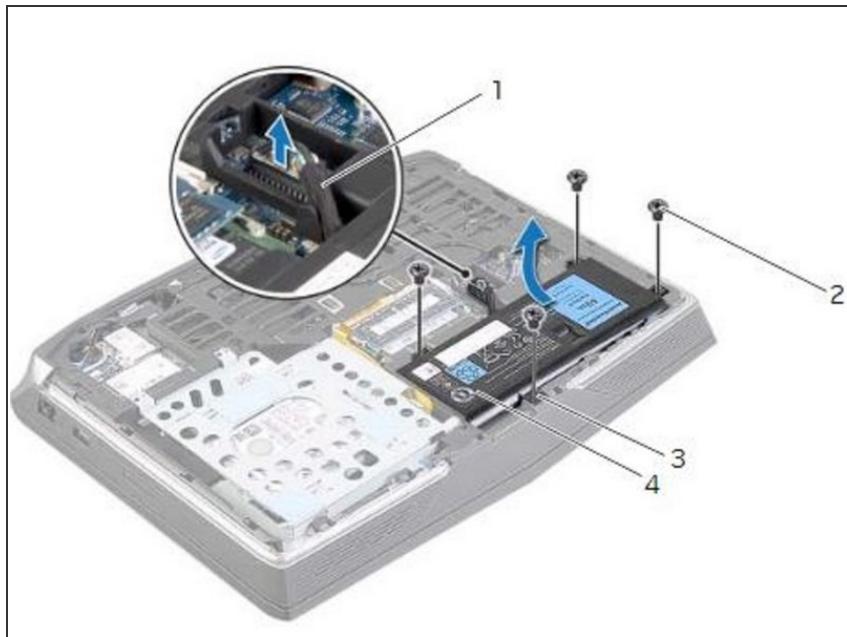

- Turn the computer over and open the display as far as possible.

Step 11 — The Power Button

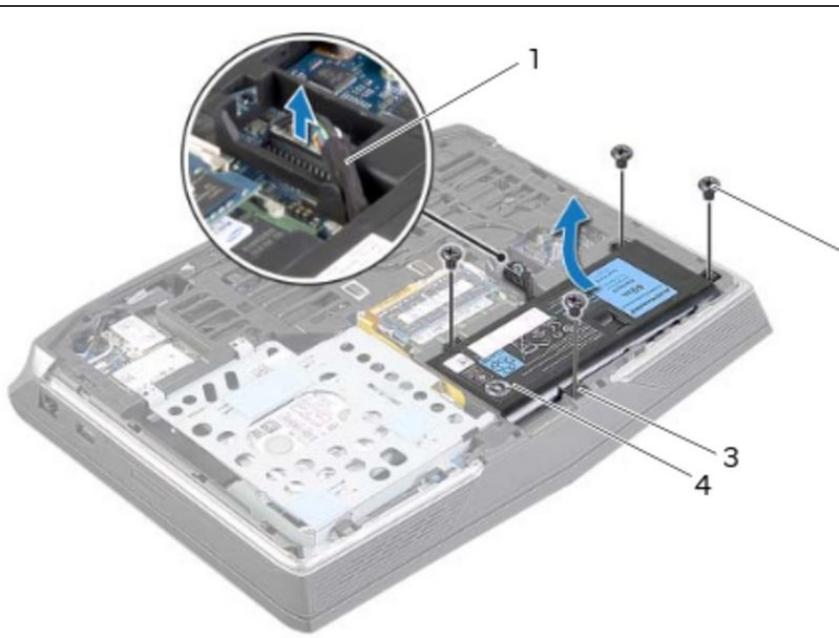


- Press and hold the power button for five seconds to ground the system board.

Step 12 — Close the Display




- Close the display and turn the computer over.

Step 13 — Align the Tabs

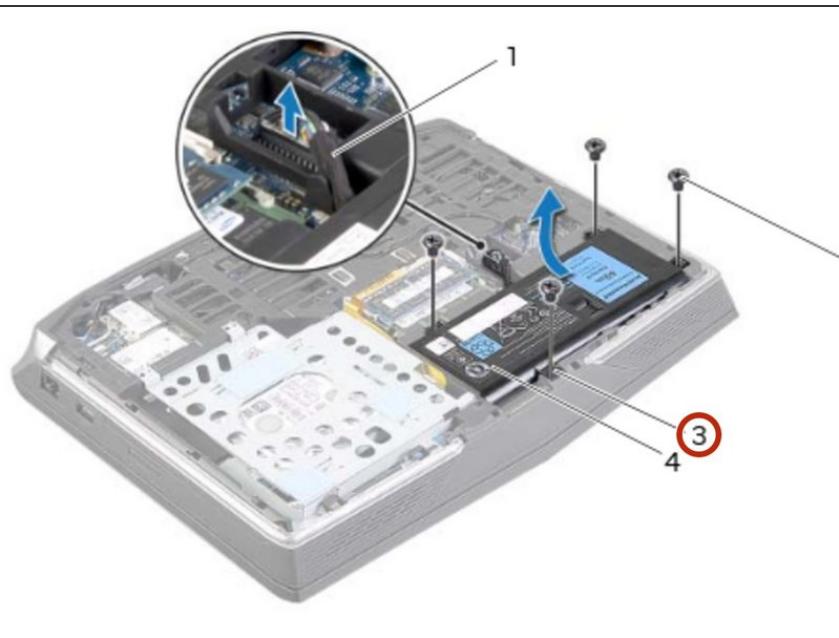


- Align the tabs on the **NEW** battery with the slots on the computer base.

Step 14 — Align the Screw Holes

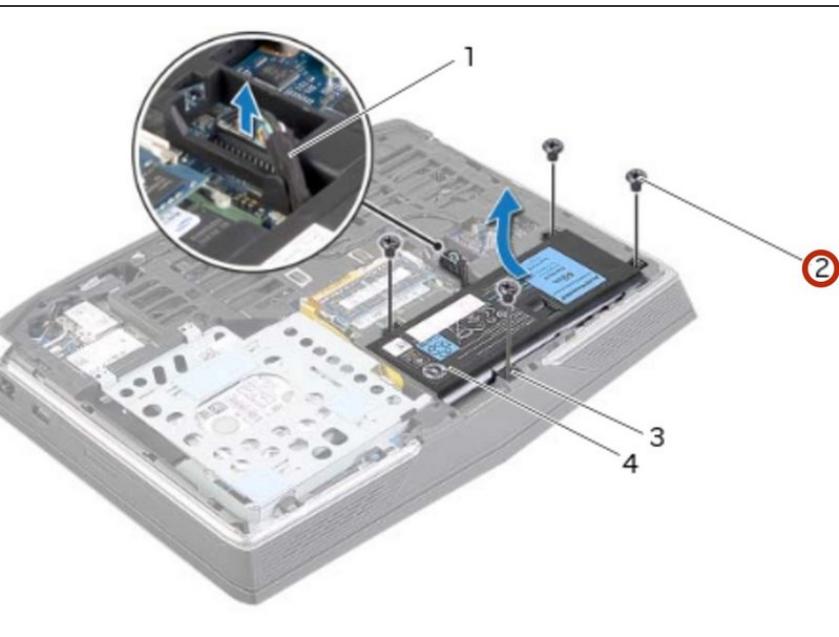


- Align the screw holes on the battery with the screw holes on the computer base.

Step 15 — Replace the Screws

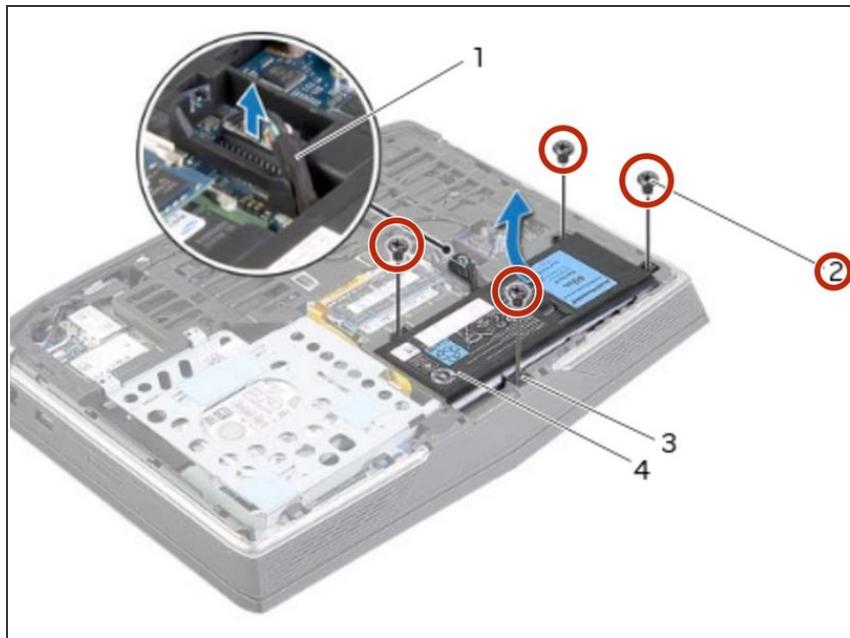


- Replace the screws that secure the battery to the computer base.

Step 16 — Connect the Battery Cable

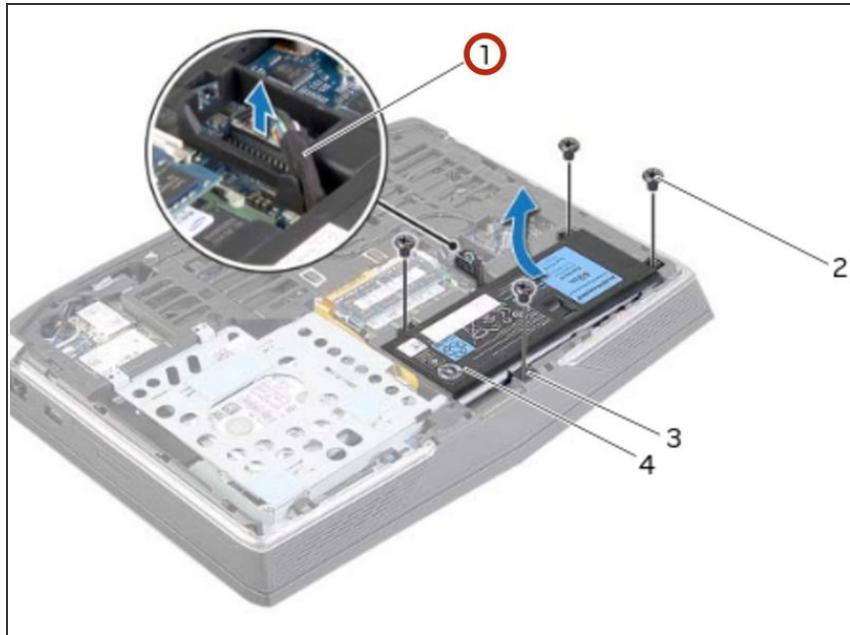

- Connect the battery cable to the system-board connector.


Step 17 — Disconnect the Antenna Cables

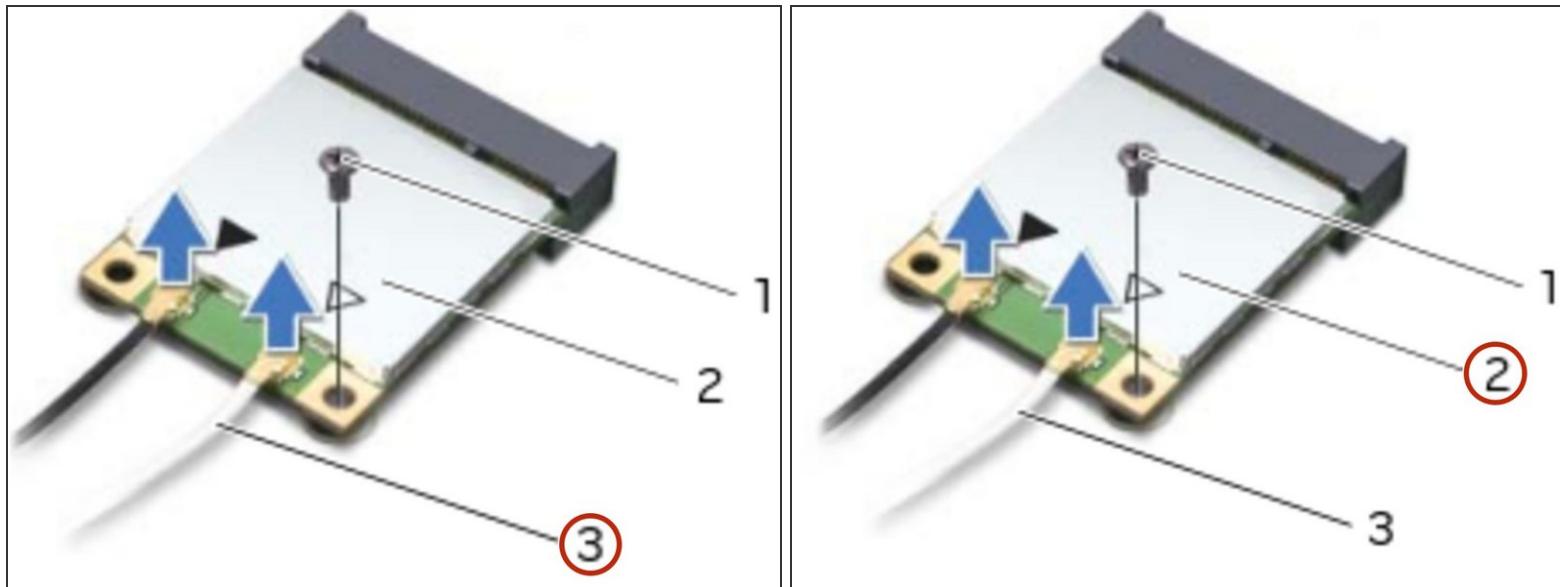

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Disconnect the antenna cables from the wireless mini-card.

Step 18 — Remove the Screw

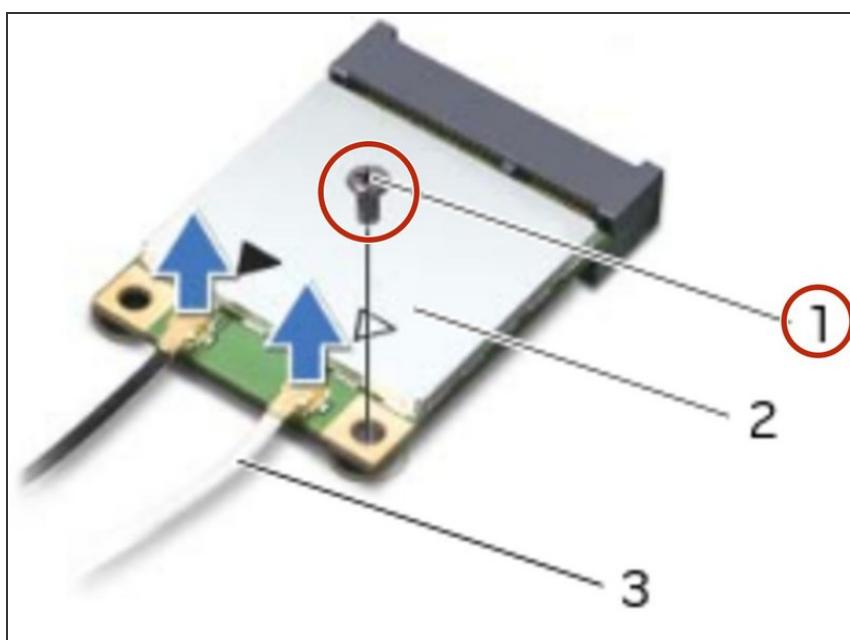


- Remove the screw that secures the wireless mini-card to the system board.

Step 19 — Remove the Wireless-Mini Card

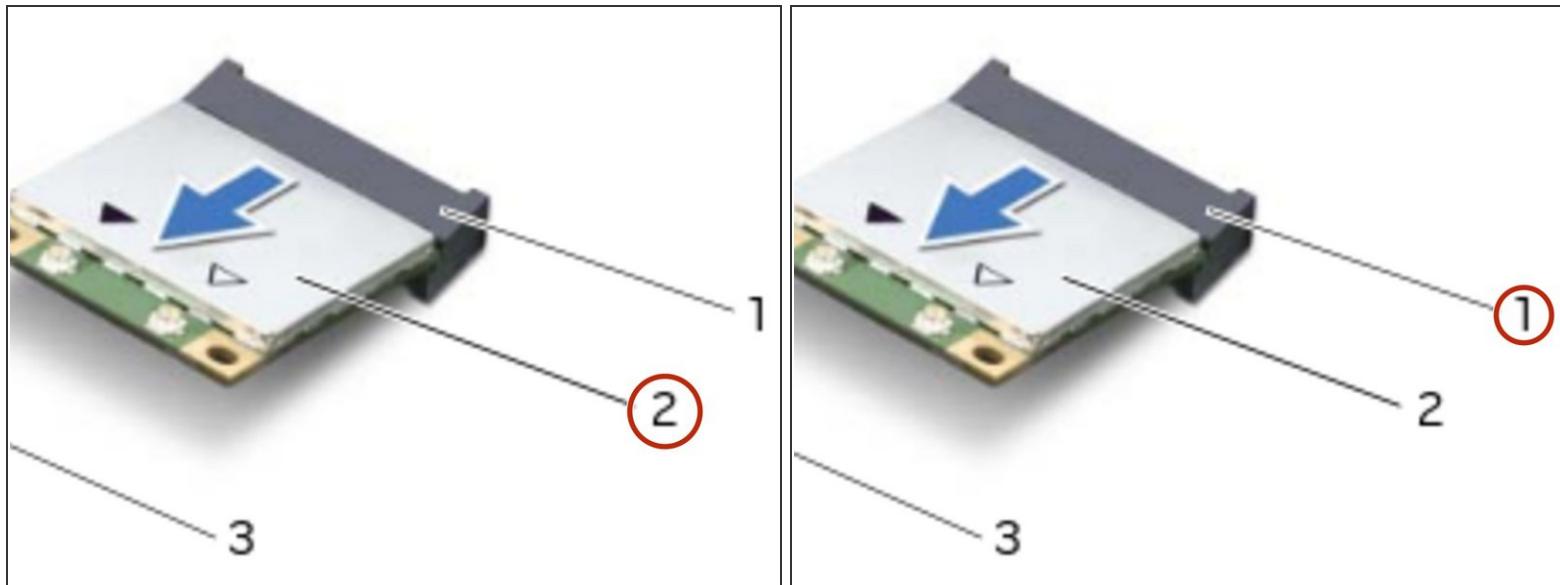

- Slide and remove the wireless-mini card from the system-board connector.

Step 20 — Align the Notch

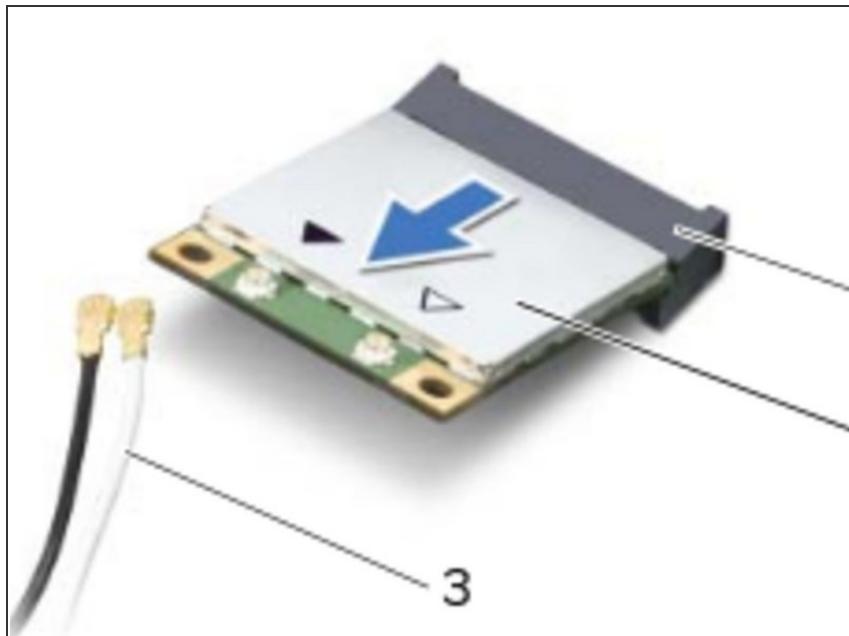


- Align the notch on the **NEW** wireless mini-card with the tab on the system-board connector.

⚠ CAUTION: Use firm and even pressure to slide the wireless mini-card into place. If you use excessive force, you may damage the connector.

⚠ CAUTION: The connectors are keyed to ensure correct insertion. If you feel resistance, check the connectors on the wireless mini-card and on the system-board connector, and realign the wireless mini-card.


⚠ CAUTION: To avoid damage to the wireless mini-card, never place cables under the wireless mini-card.

Step 21 — Inserting the Wireless Mini-Card

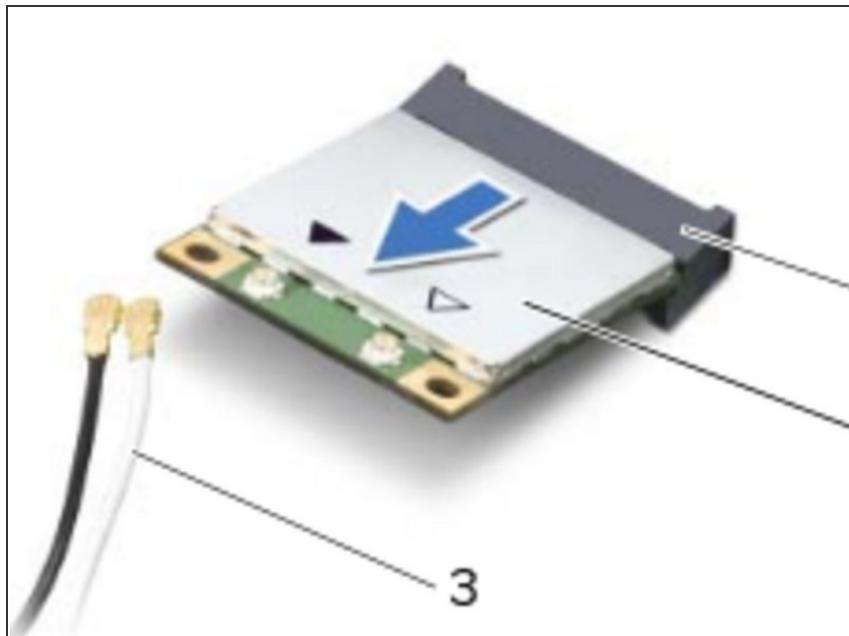


- Insert the wireless mini-card at a 45-degree angle into the system-board connector.

Step 22 — Securing the Wireless Mini-Card

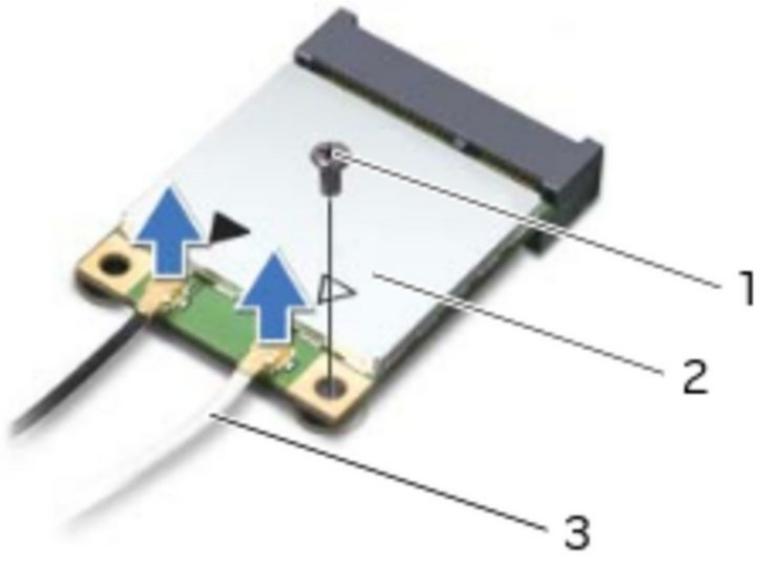

- Press the other end of the wireless mini-card down into the slot on the system board and replace the screw that secures the wireless mini-card to the system board.

Step 23 — Connect the Antenna Cables

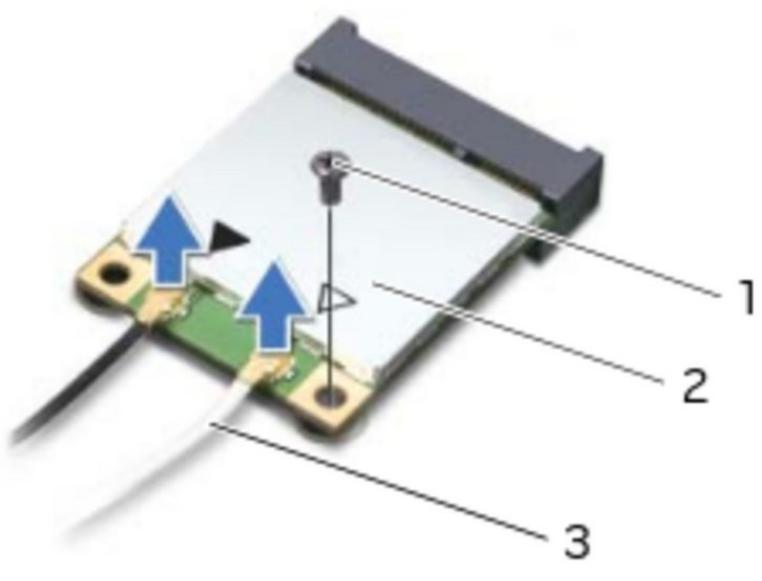

- Connect the antenna cables to the connectors on the wireless mini-card.

To reassemble your device, follow these instructions in reverse order.