




Dell Alienware 15 R2 Solid-State Drives Replacement

Written By: Terrence15

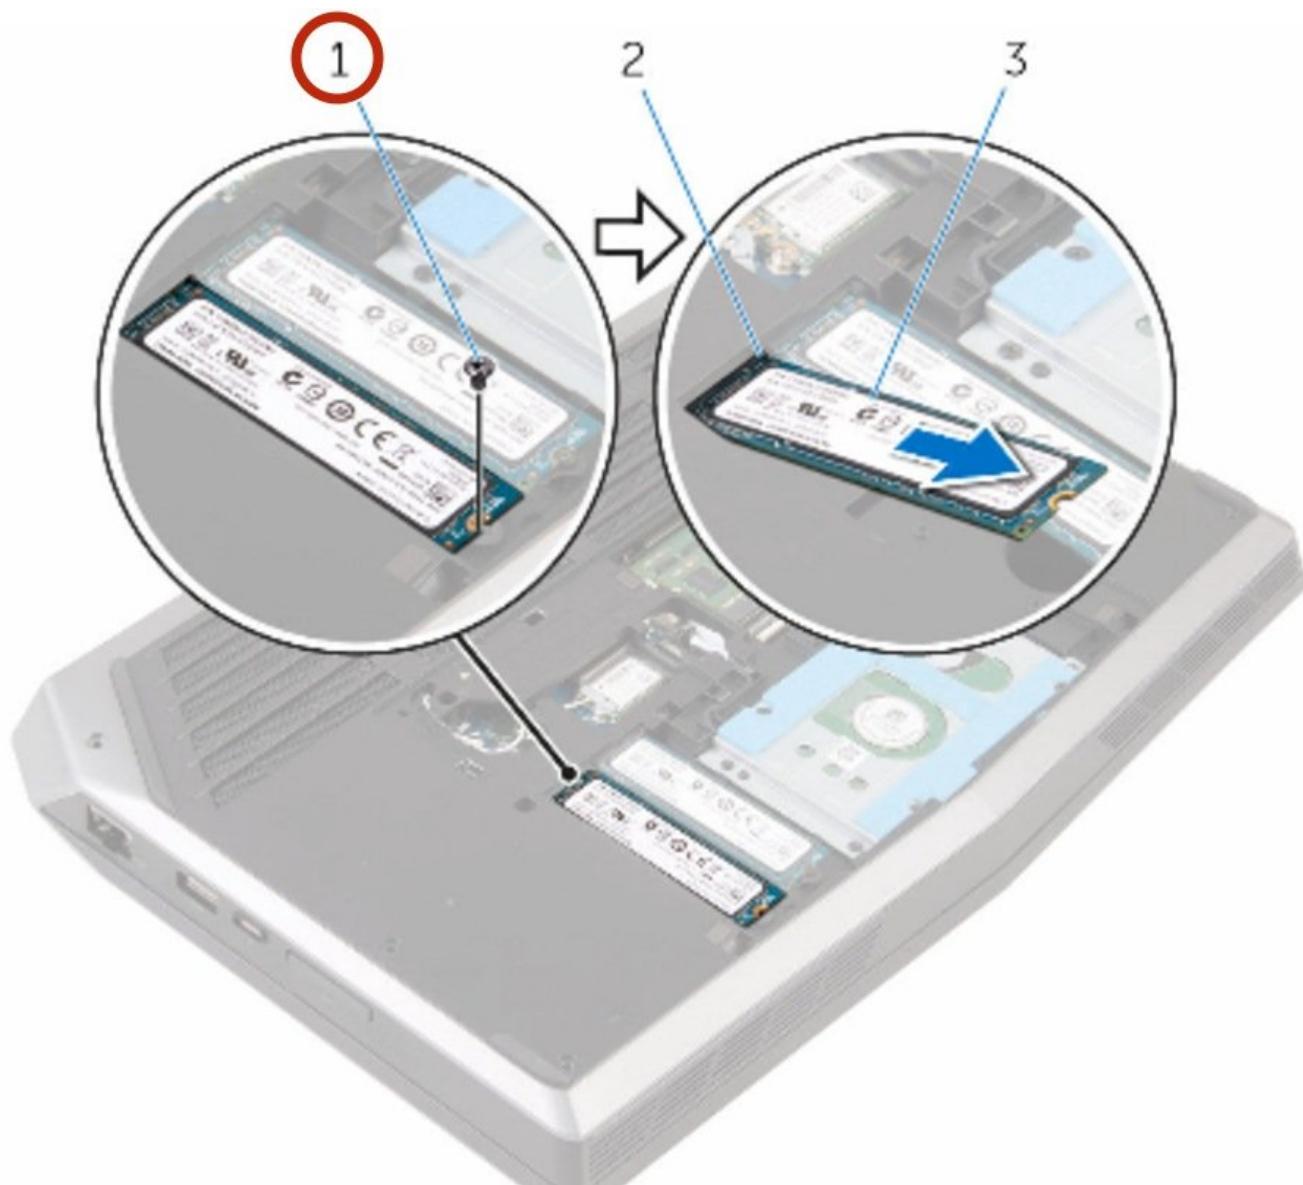


INTRODUCTION

In this guide, we will be showing you how to remove and replace the Solid-State Drives.

TOOLS:

- Pro Tech Toolkit (1)

Step 1 — Remove the Screw

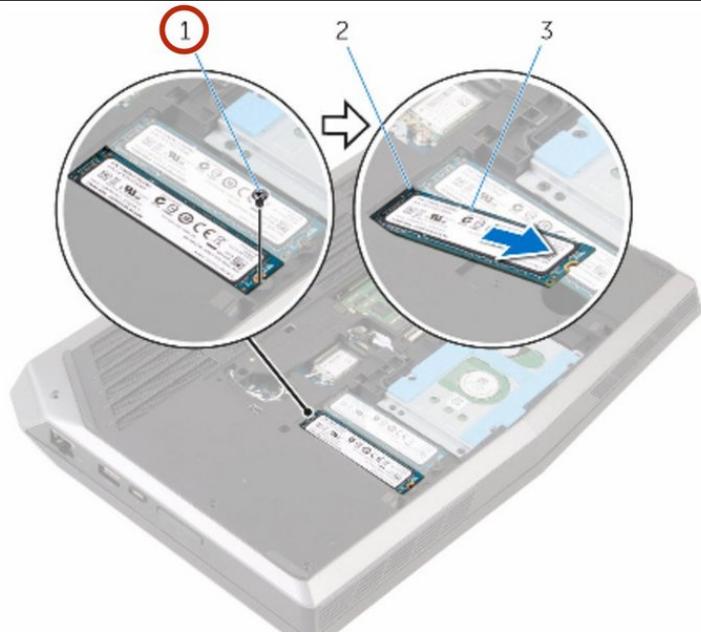


⚠ **WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).

⚠ **CAUTION:** Solid-state drives are fragile. Exercise care when handling the hard drive.

⚠ **CAUTION:** To avoid data loss, do not remove the solid-state drive while the computer is in sleep or on state.


- Remove the screw that secures the solid-state drive to the computer base.

Step 2 — Removing the Solid-State Drive

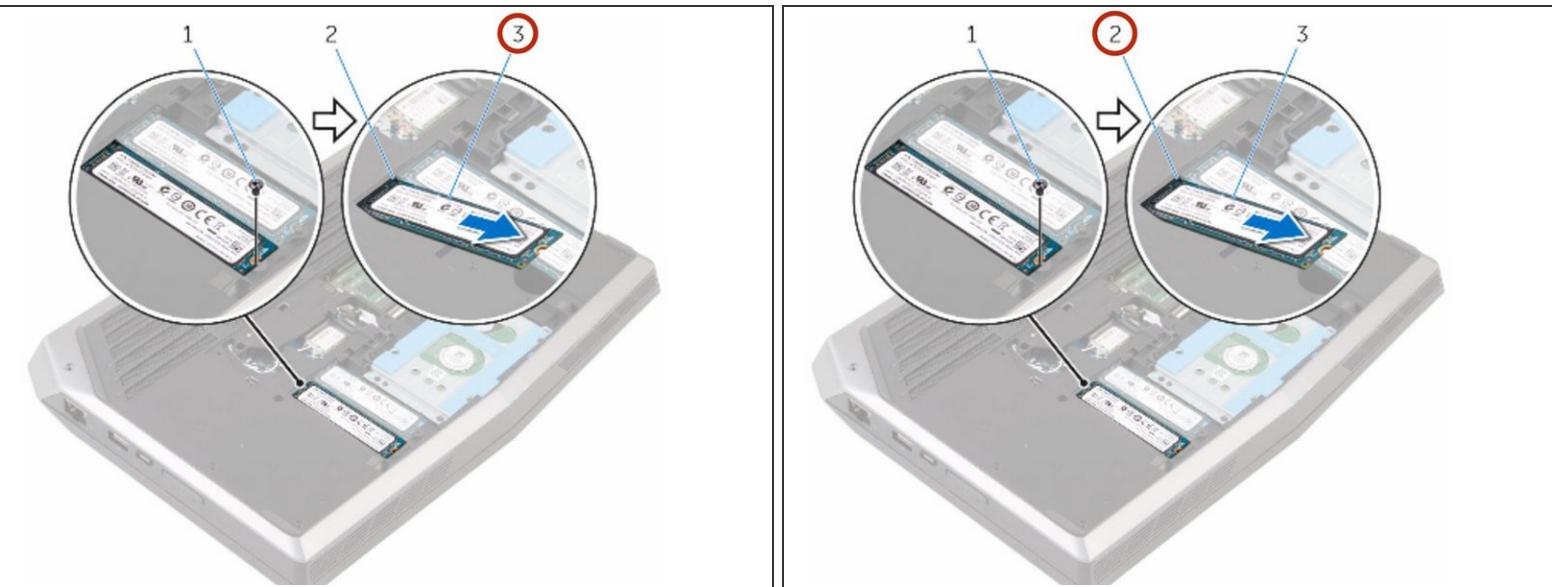


- Slide and remove the solid-state drive from the solid-state drive slot.

Step 3 — Sliding the Solid-State Drive

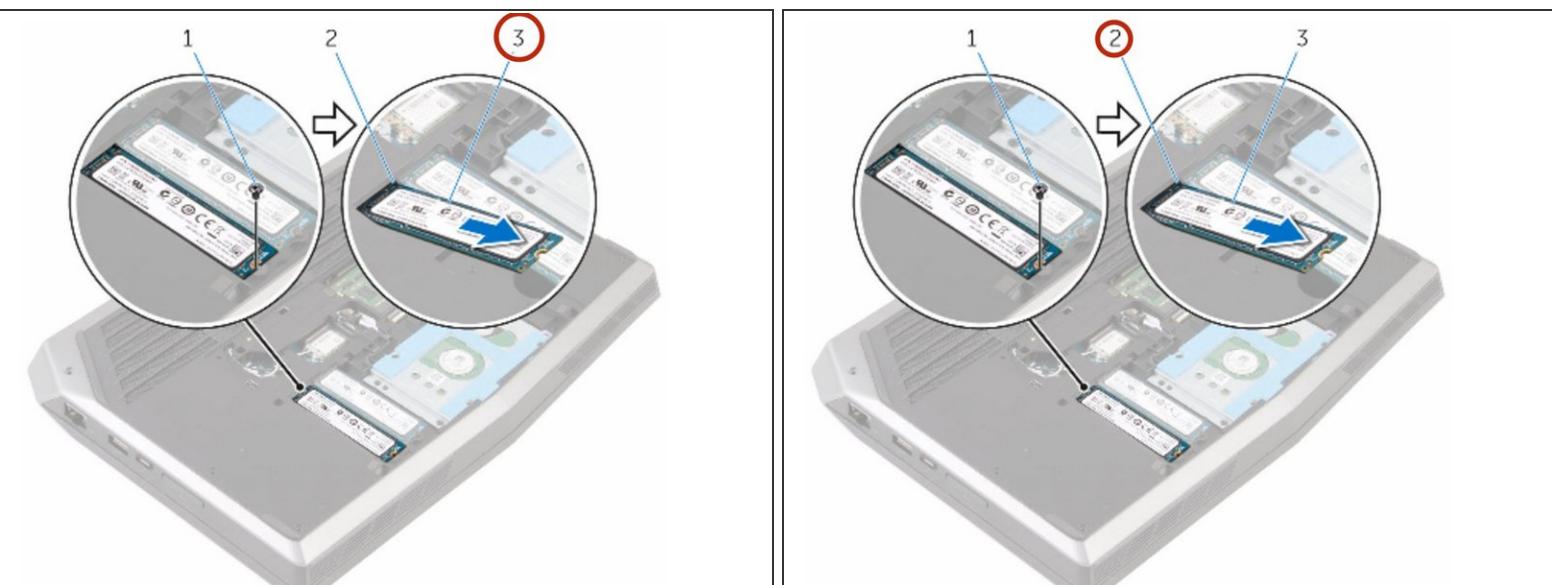


- Slide the **NEW** solid-state drive into the solid-state drive slot.

Step 4 — Align the Screw Hole

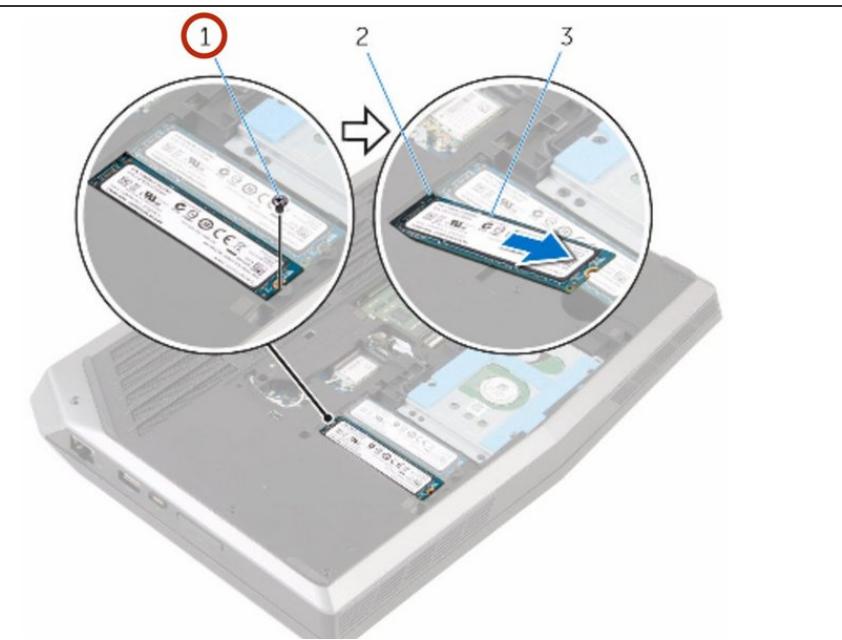

- Align the screw hole on the solid-state drive with the screw hole on the computer base.

Step 5 — Replace the Screw

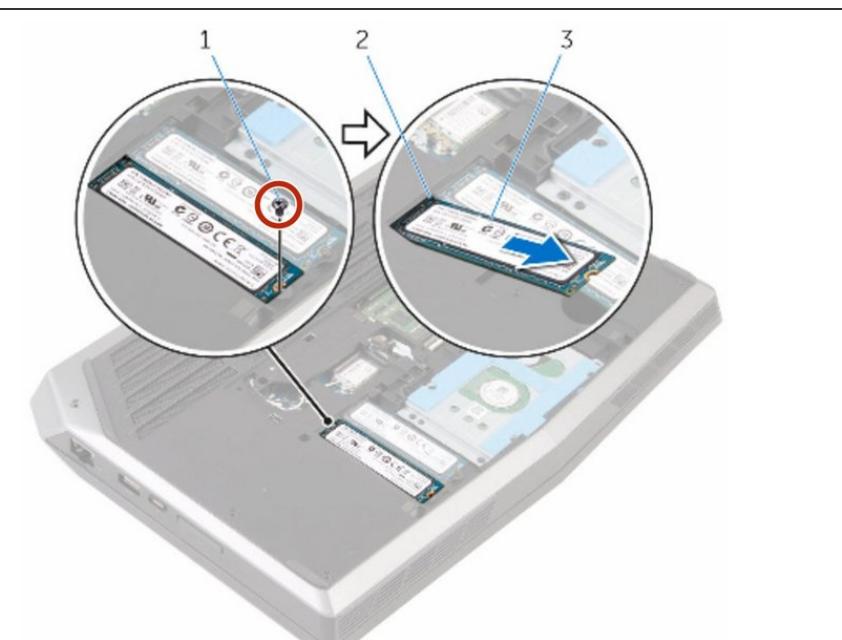

- Replace the screw that secures the solid-state drive to the computer base.

To reassemble your device, follow these instructions in reverse order.