



Dell Alienware 15 R3 Battery Replacement

Written By: Terrence15



INTRODUCTION

In this guide, we will show you how to remove and replace the Battery.

TOOLS:

- Pro Tech Toolkit (1)


Step 1 — Remove the Screw



⚠️ **WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).

- Remove the screw (M2.5x5) that secures the battery to the palm-rest assembly.

Step 2 — Lifting the Battery

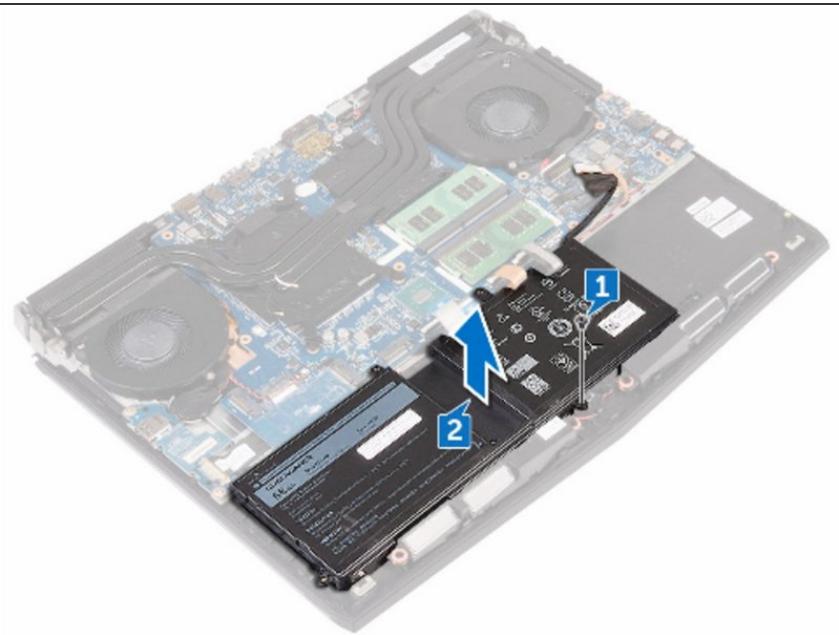

- Lift the battery off the palm-rest assembly.

Step 3 — Align the Screw Hole



- Align the screw hole on the **NEW** battery with the screw hole on the palm-rest assembly.

Step 4 — Replace the Screw



- Replace the screw (M2.5x5) that secures the battery to the palm-rest assembly.

To reassemble your device, follow these instructions in reverse order.