




Dell Alienware 15 R3 Memory Modules Replacement


Written By: Terrence15

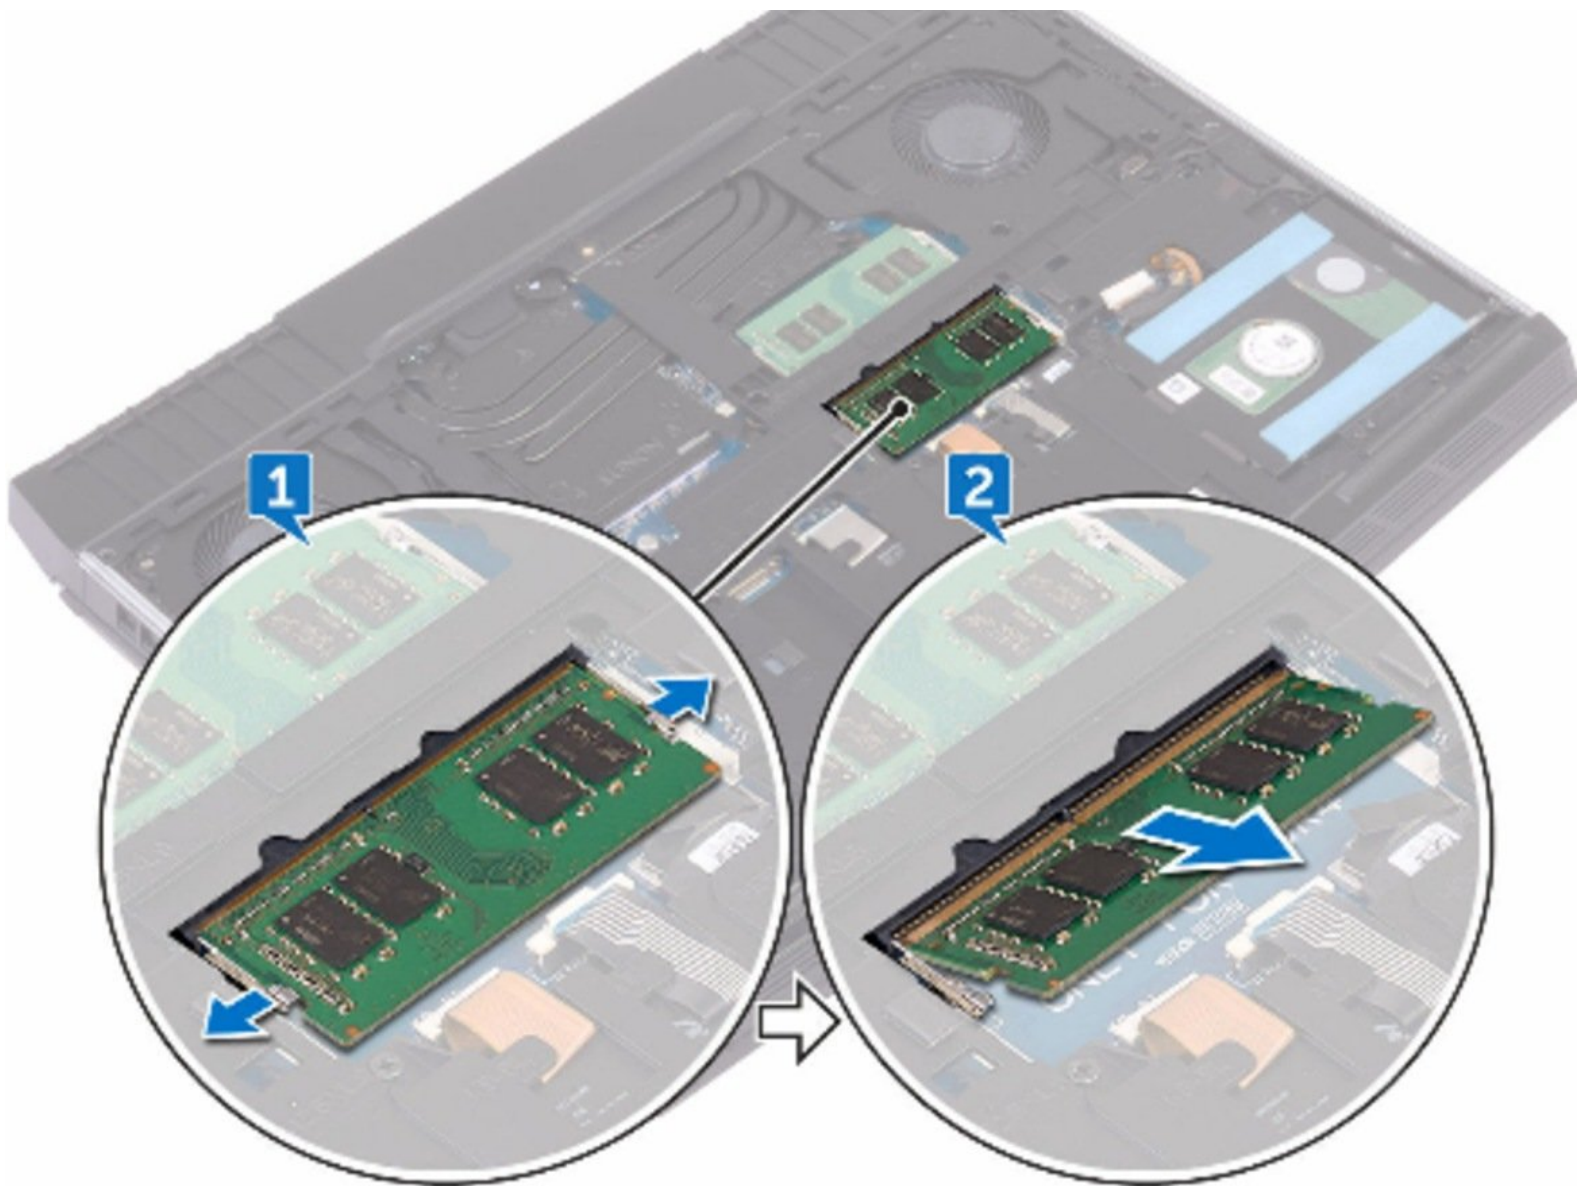

INTRODUCTION

In this guide, we will show you how to remove and replace the Memory Modules.


Step 1 — Popping up the Memory Module

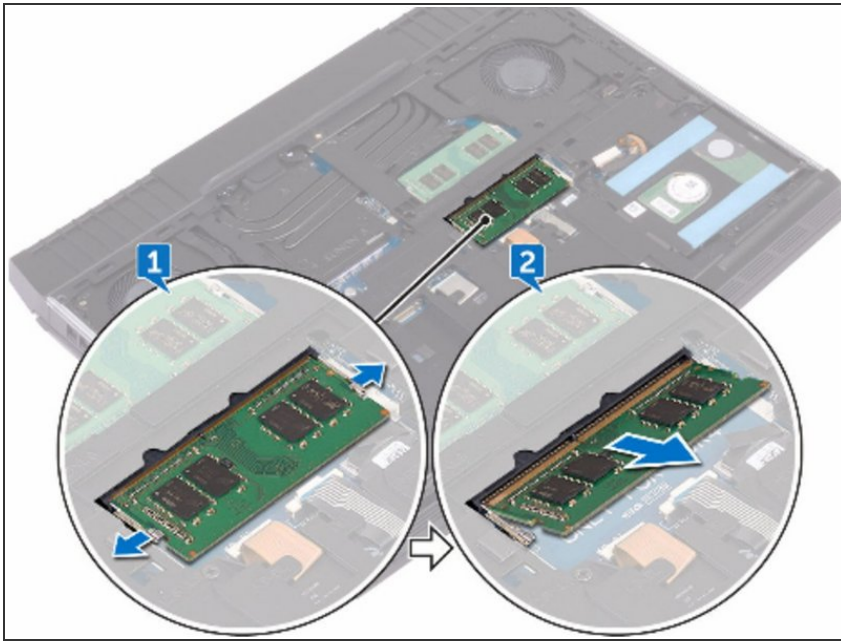

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Using your fingertips, carefully spread apart the securing clips on each end of the memory-module slot until the memory module pops up.

Step 2 — Slide and Remove the Memory Module

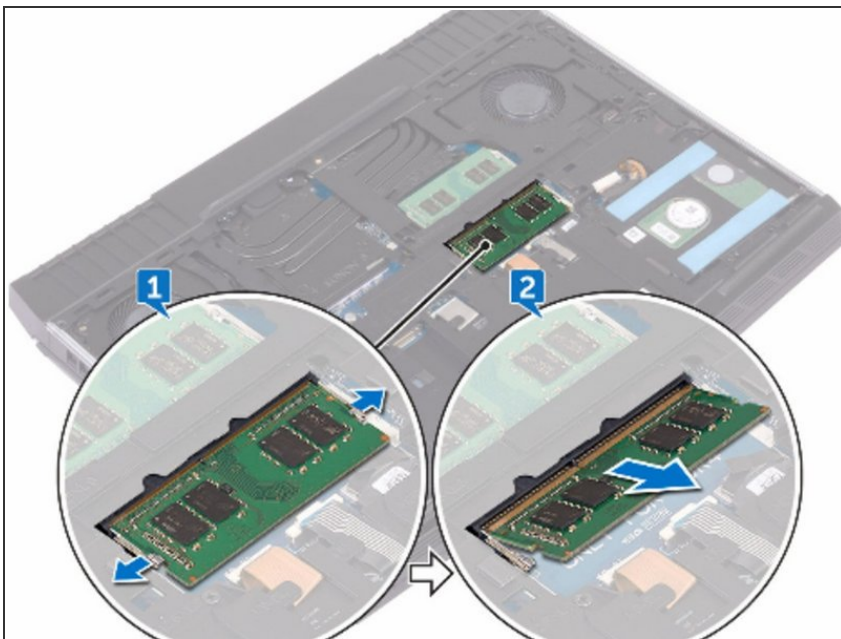


- Slide and remove the memory module from the memory-module slot.

Step 3 — Align the Notch

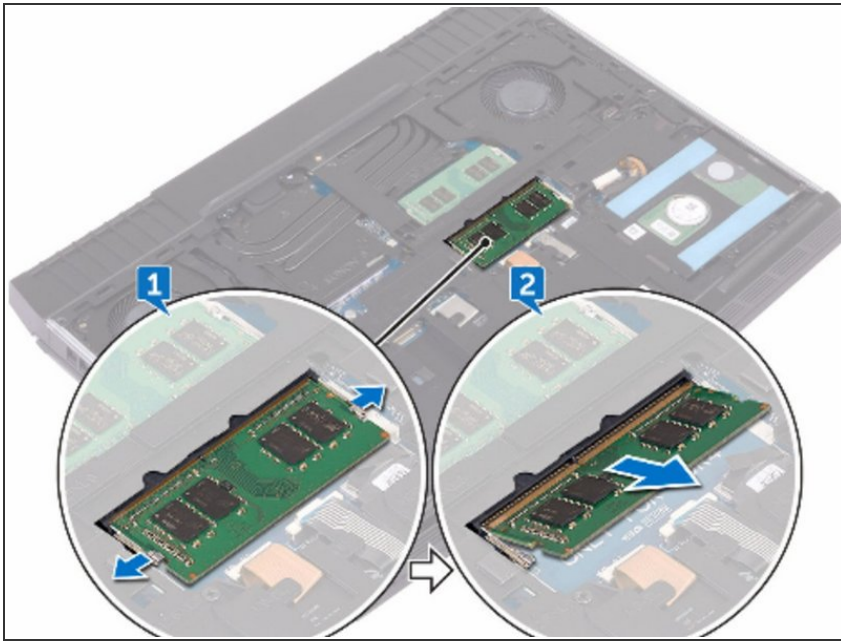

- Align the notch on the **NEW** memory module with the tab on the memory-module slot and slide the memory module firmly into the slot at an angle.

Step 4 — Press the Memory Module Down

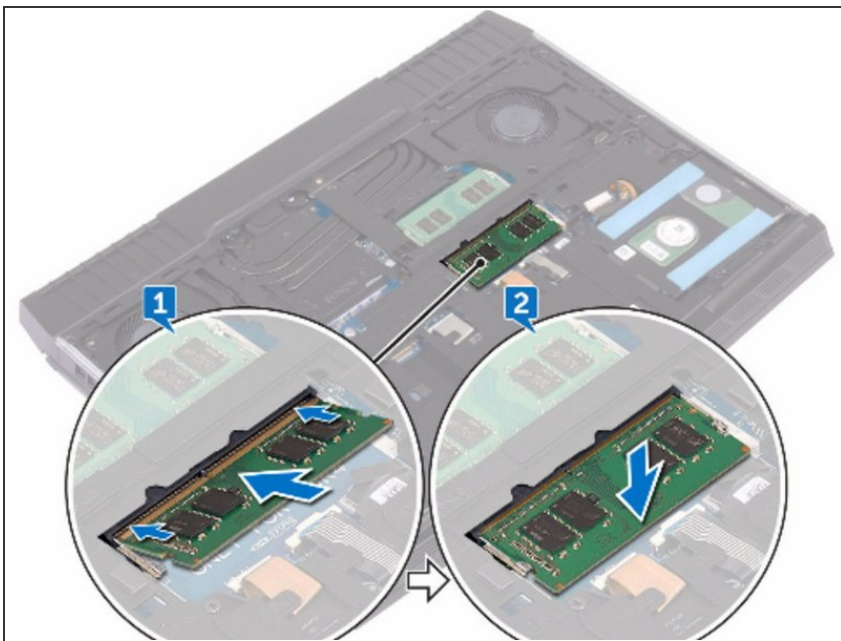

- Press the memory module down until it clicks into place.
- ⓘ NOTE: If you do not hear the click, remove the memory module and reinstall it.

To reassemble your device, follow these instructions in reverse order.