




# Dell Alienware 17 Battery Replacement

Written By: Terrence15

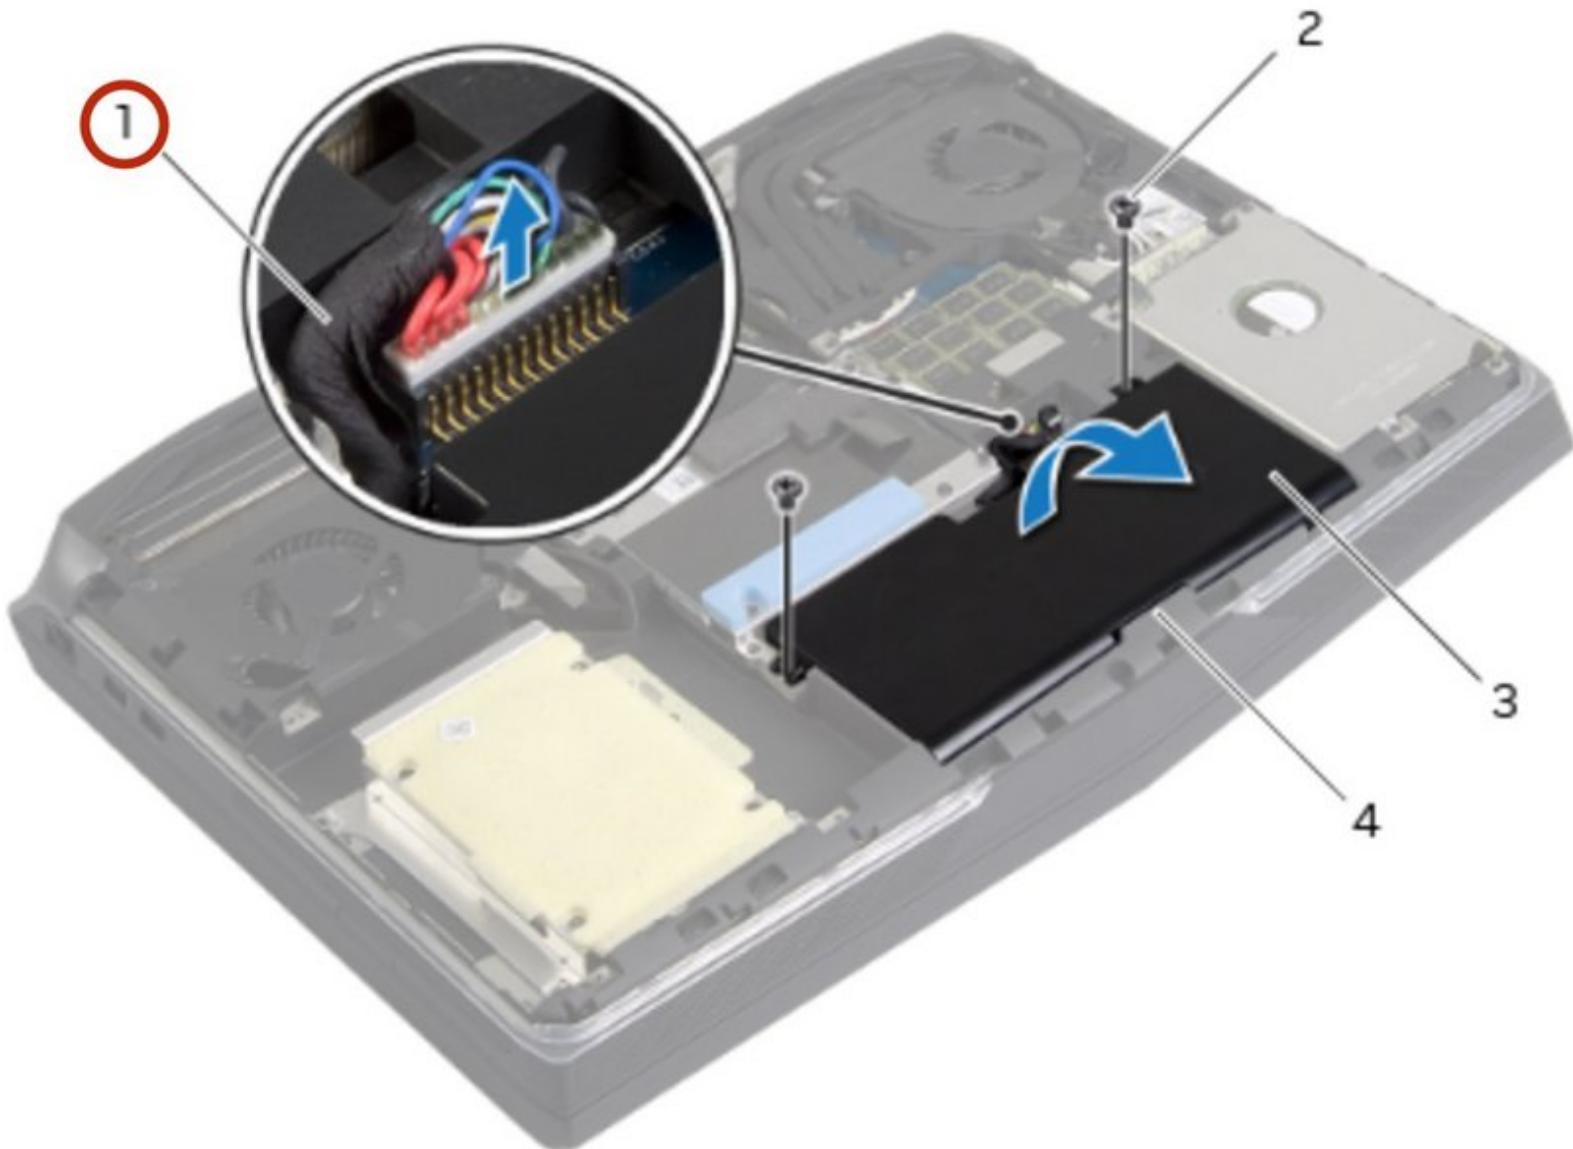


## INTRODUCTION

In this guide, we will be showing you how to remove and replace the Battery.

### TOOLS:

- Pro Tech Toolkit (1)


## Step 1 — Disconnecting the Battery Cable

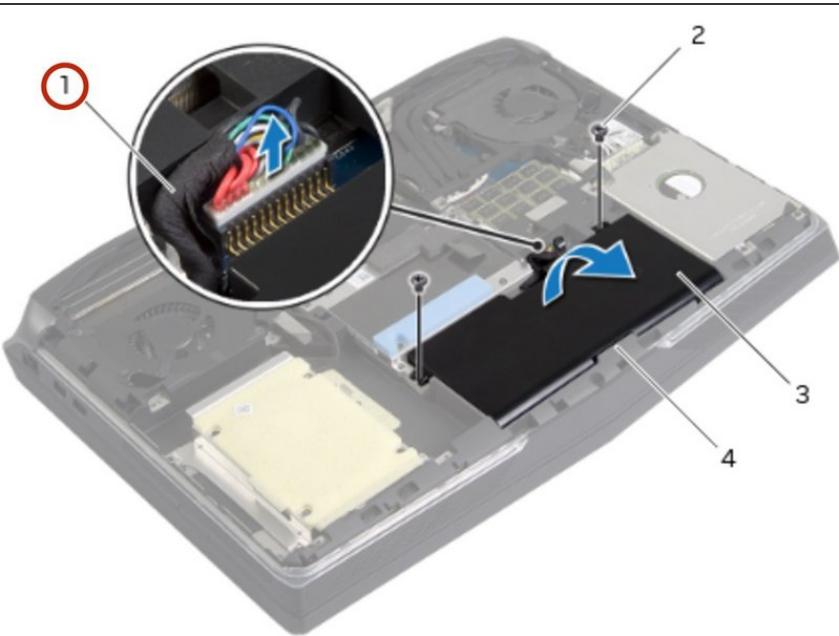

⚠️ **WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Disconnect the battery cable from the system board.

## Step 2 — Remove the Screws

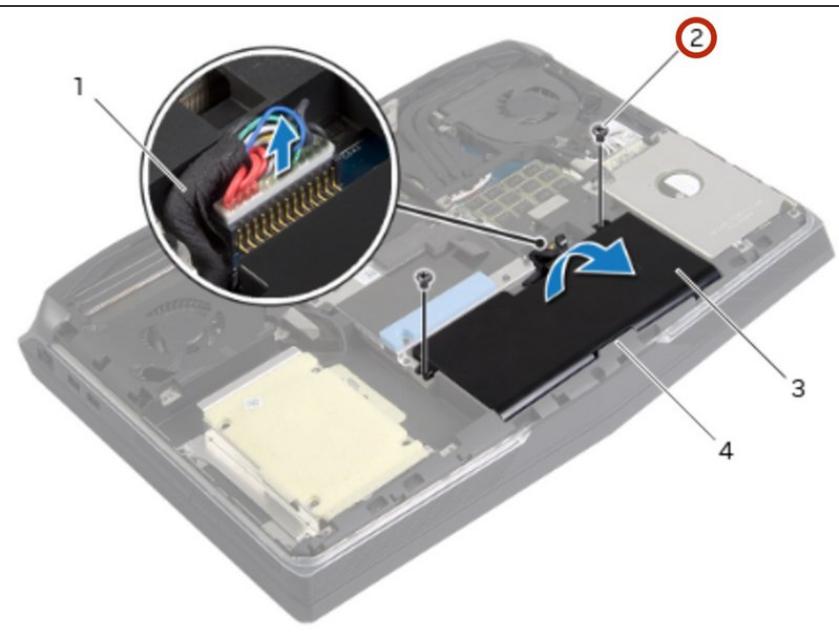


- Remove the screws that secure the battery to the computer base.

## Step 3 — Releasing the Battery

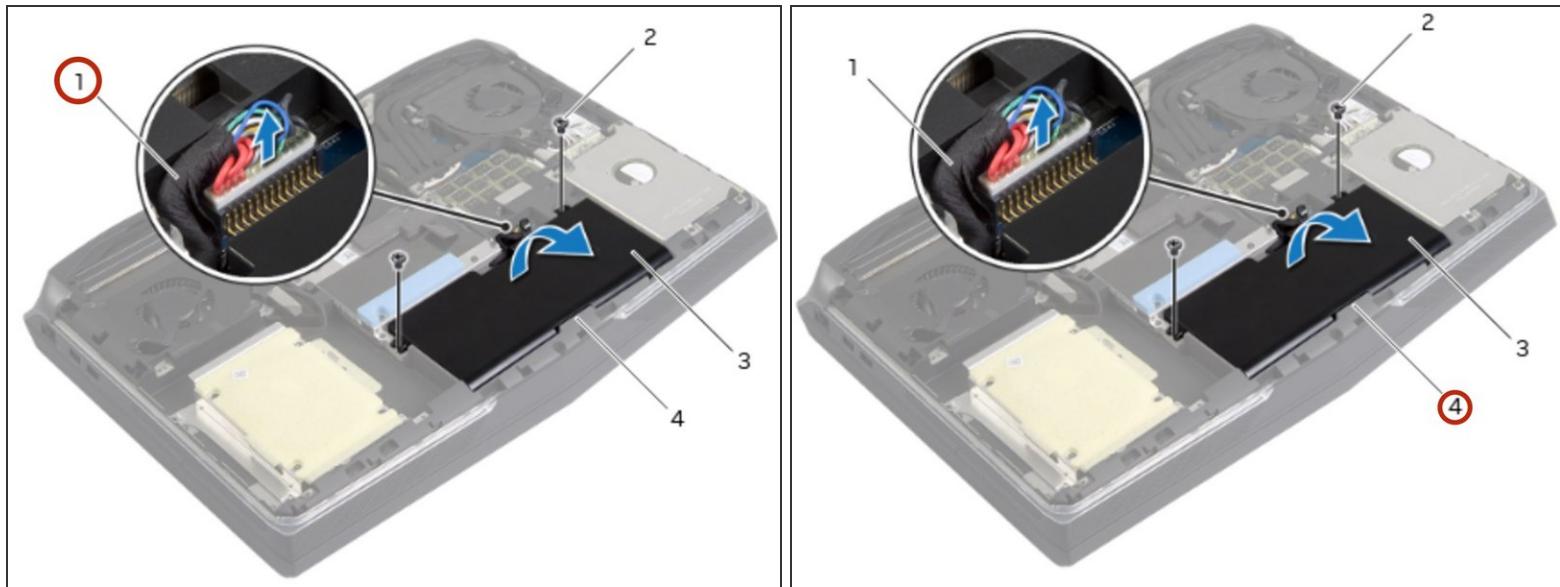


- Using the battery cable, lift and release the battery from the tabs on the computer base.

## Step 4 — Opening the Display

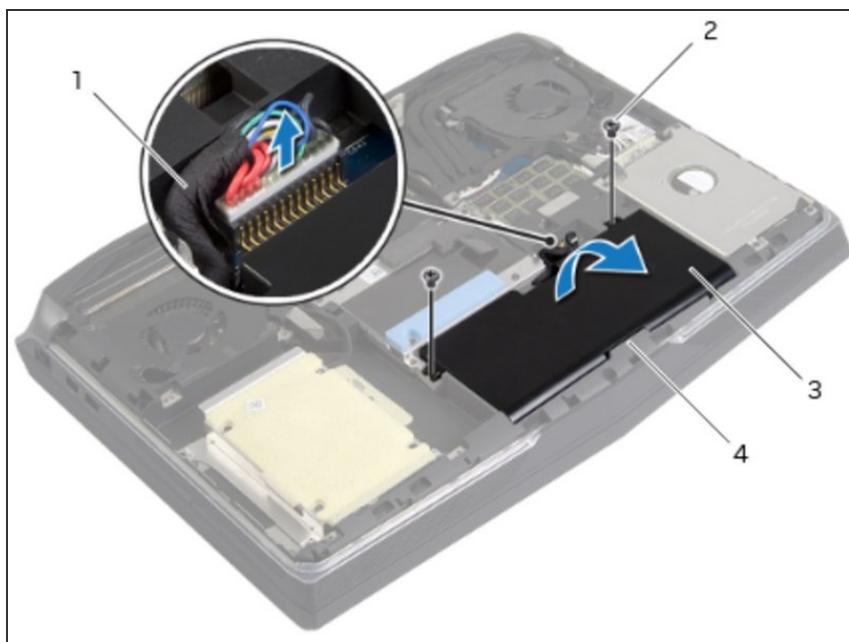


- Turn the computer over and open the display.

## Step 5 — Grounding the System Board

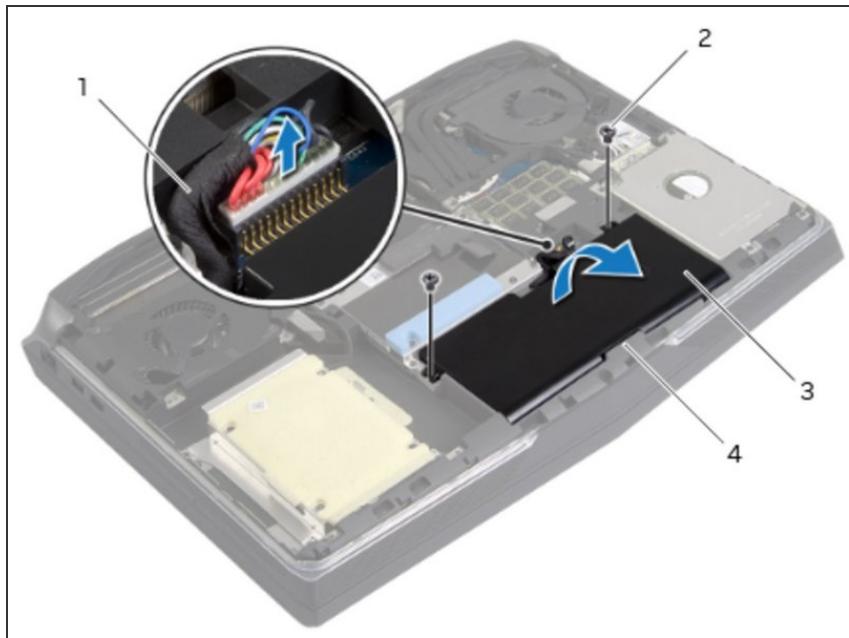


- Press and hold the power button for five seconds to ground the system board.

## Step 6 — Slide the New Battery

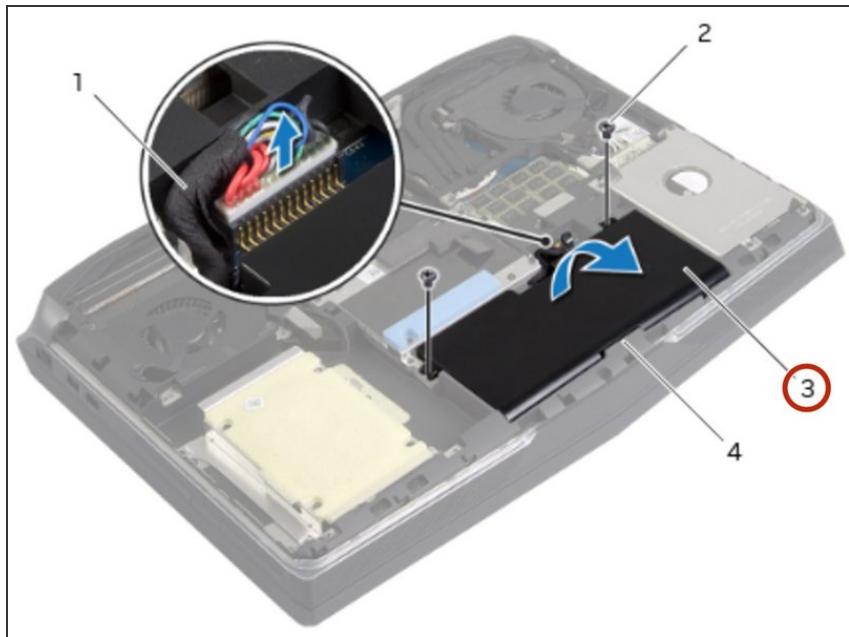


- Slide the **NEW** battery under the tabs on the computer base.

## Step 7 — Aligning the Screw Holes

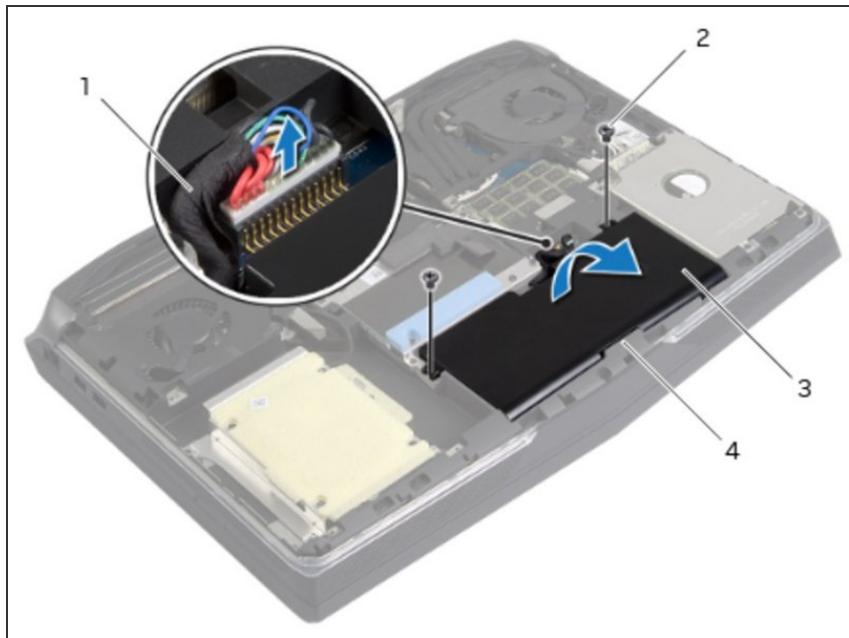


- Align the screw holes on the battery with the screw holes on the computer base.

## Step 8 — Replace the Screws

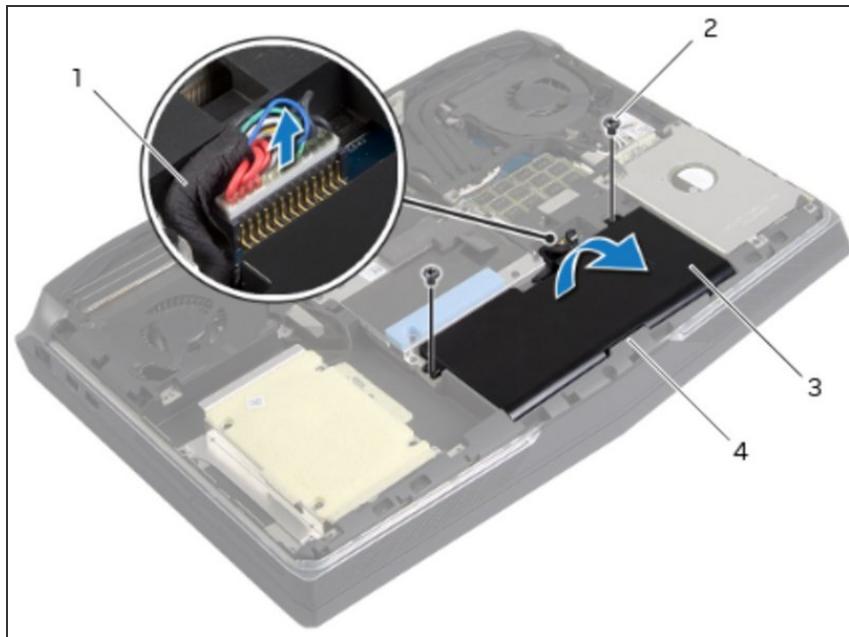

- Replace the screws that secure the battery to the computer base.

## Step 9 — Connect the Battery Cable

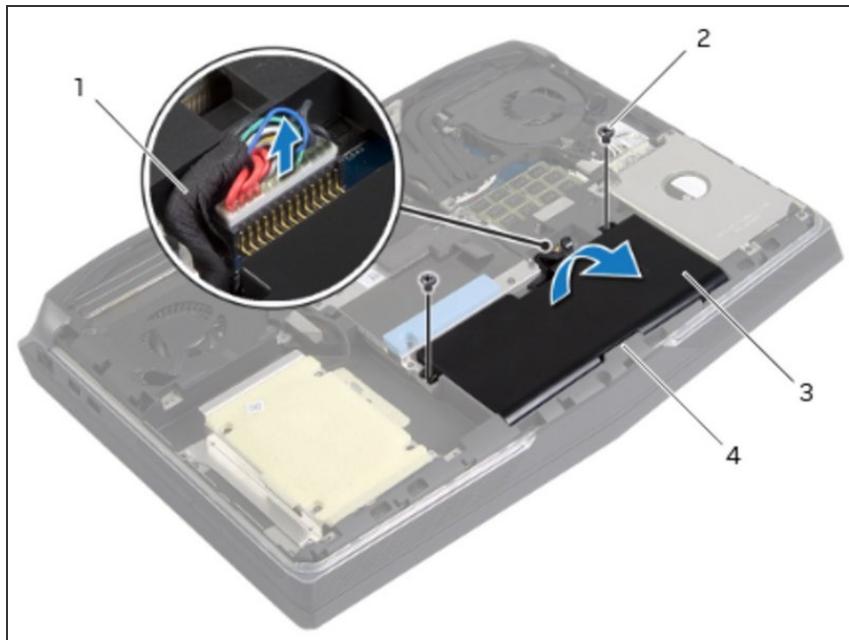

- Connect the battery cable to the system board.

To reassemble your device, follow these instructions in reverse order.