




Dell Alienware 17 Memory Modules 3 and 4 Replacement


Written By: Terrence15

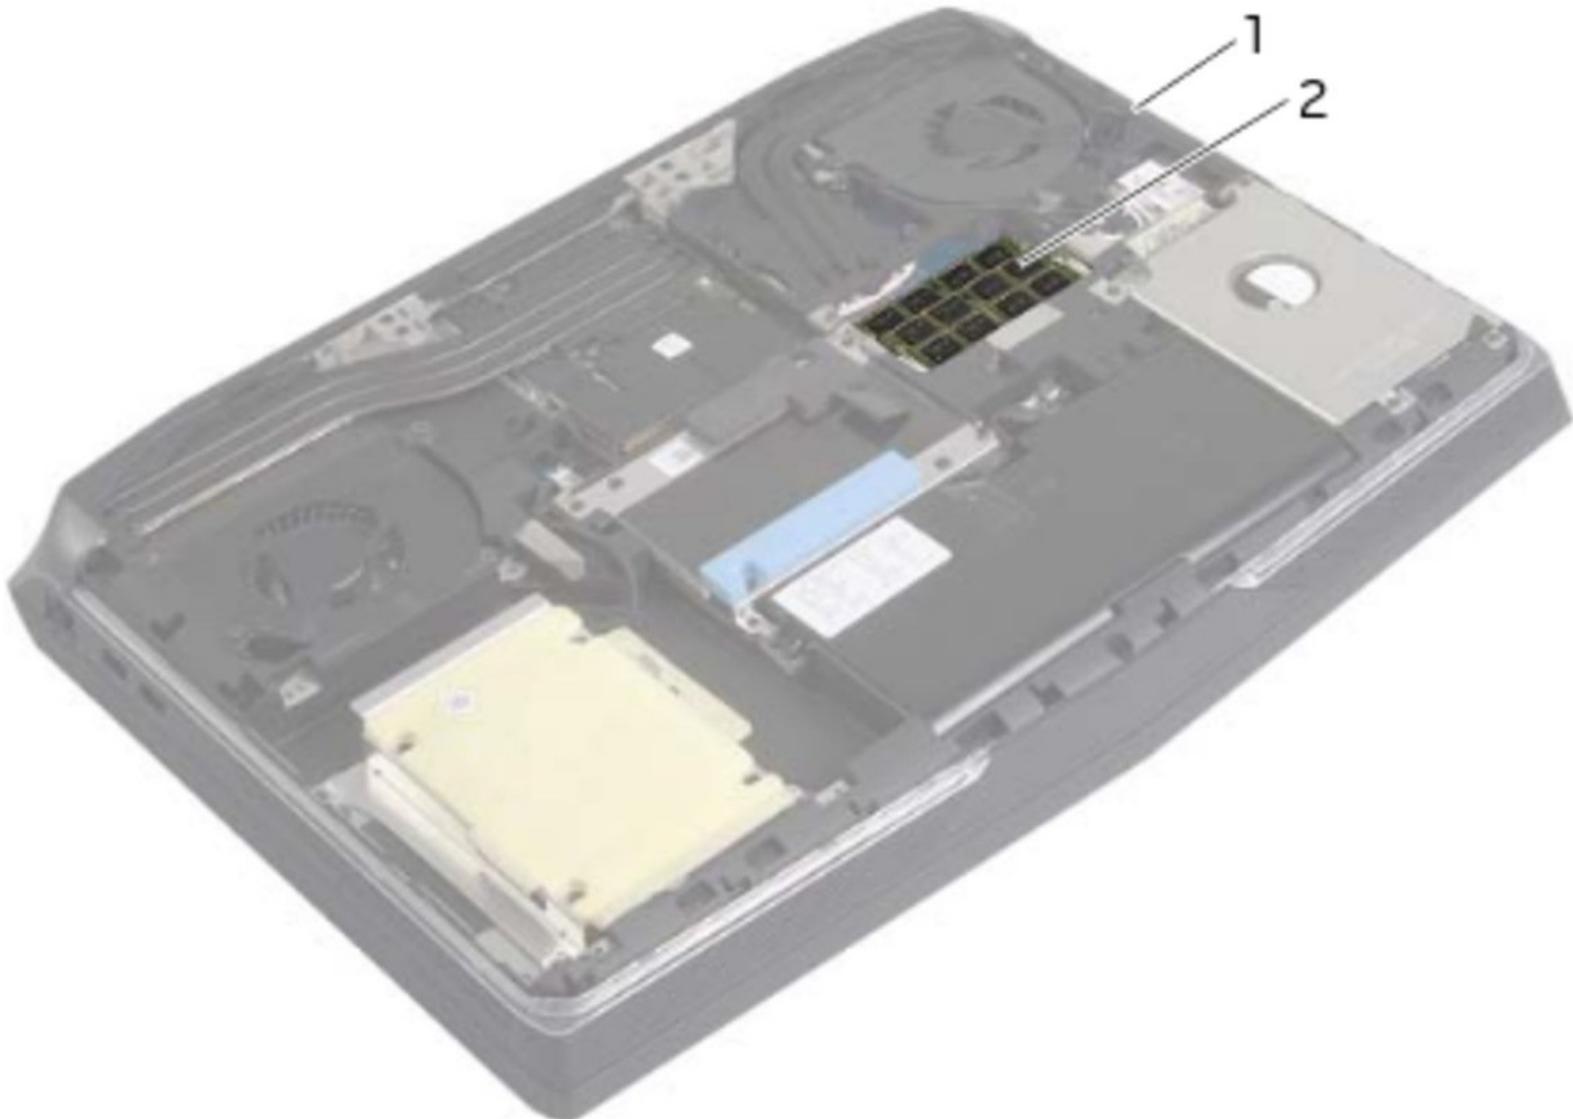

INTRODUCTION

In this guide, we will show you how to remove and replace Memory Modules 3 and 4.



Step 1 — Popping up the Memory Module

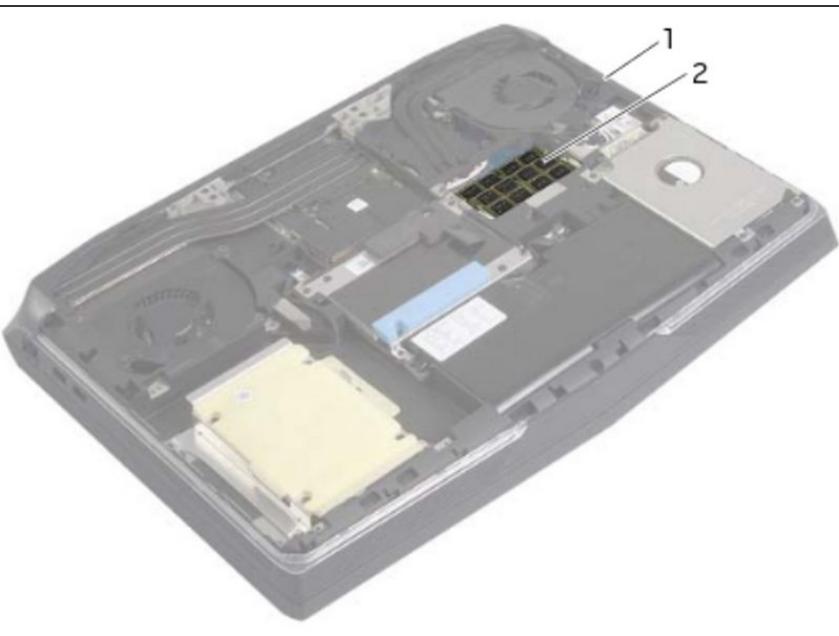

⚠️ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Using your fingertips, carefully spread apart the securing clips at the sides of the memory-module connector until the memory module pops up.

Step 2 — Removing the Memory Module

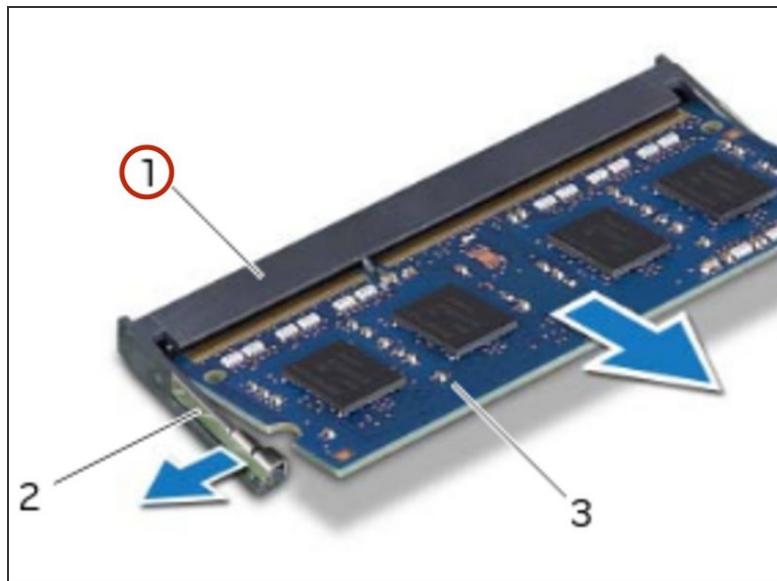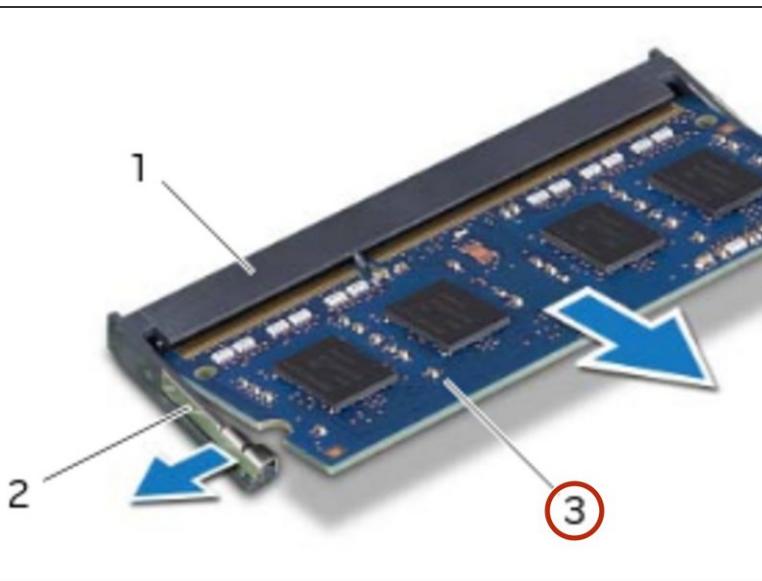


- Remove the memory module from the memory-module connector.

Step 3 — Align the Notch

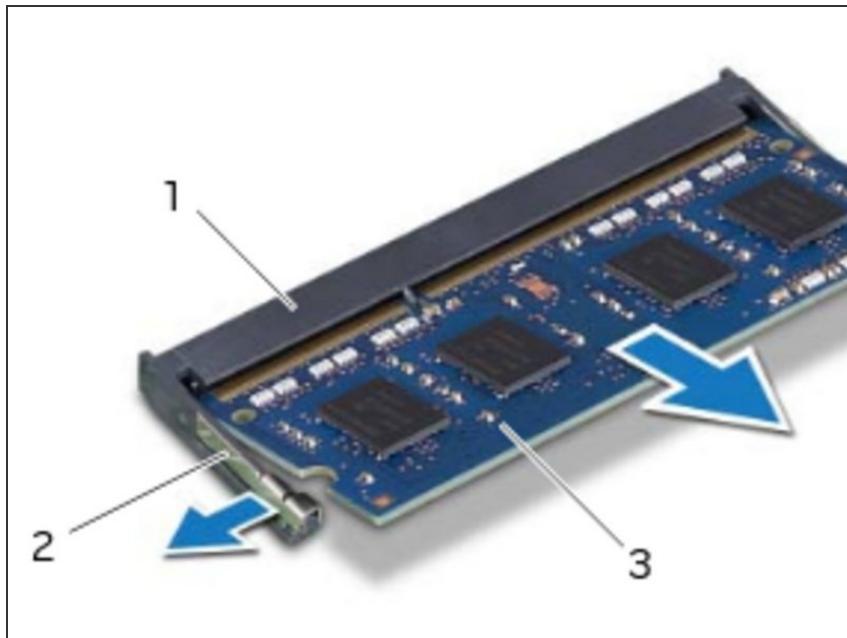

- Align the notch on the **NEW** memory module with the tab on the memory-module connector.


Step 4 — Installing the Memory Module

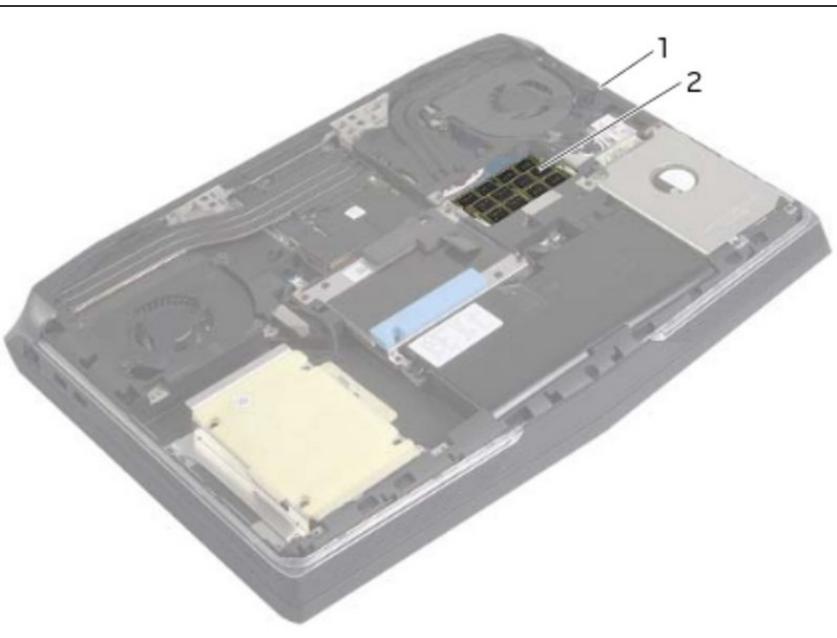

- Slide the memory module into the connect or at a 45-degree angle, and press the memory module down until it clicks in place. If you do not hear the click, remove and reinstall the memory module.

(i) NOTE: The computer may not boot if the memory module is not installed correctly.

Step 5

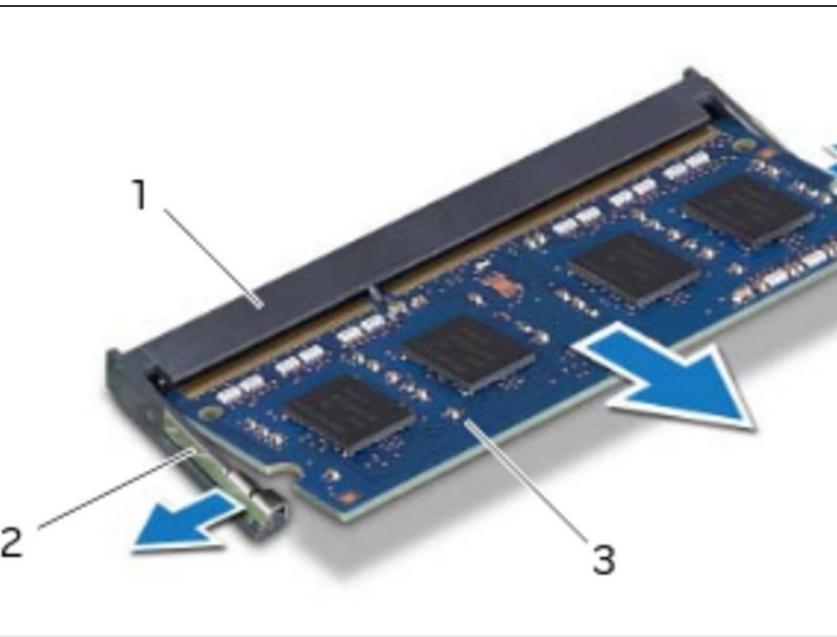

- Insert wisdom here.

To reassemble your device, follow these instructions in reverse order.