



Dell Alienware 18 Battery Pack Replacement

Written By: darrius




INTRODUCTION

In this guide, we will show you how to remove and replace the Battery Pack.

TOOLS:


- **Phillips #0 Screwdriver (1)**
- **Phillips #1 Screwdriver (1)**

Step 1 — Before You Begin

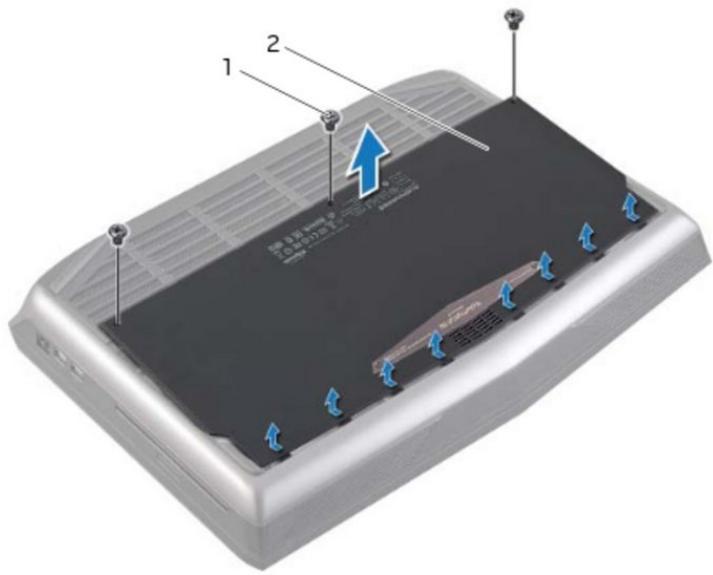

⚠️ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before You Begin](#).

Step 2 — Removing the Screws

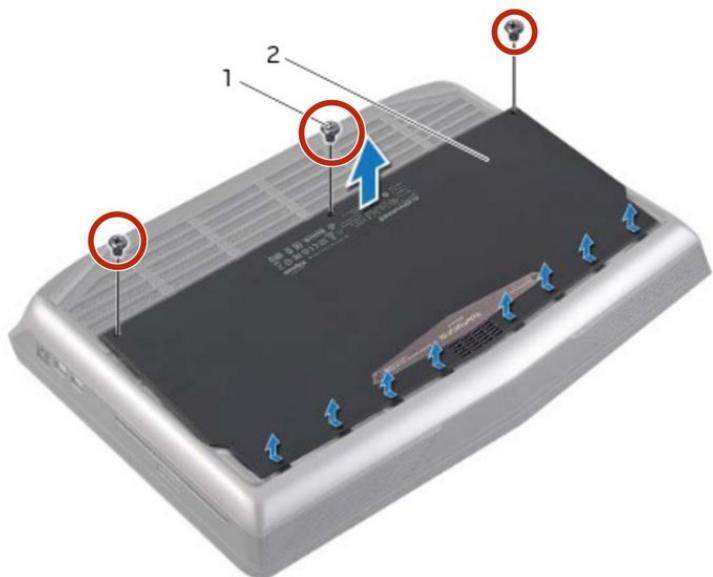

- Remove the screws that secure the base cover to the computer base.

Step 3 — Slide the Cover




- Slide the base cover towards the rear of the computer and lift it off the computer base.

Step 4 — Replacing the Base Cover




- Align the tabs on the **NEW** base cover with the slots on the computer base and slide the base cover into place.

Step 5 — Replacing the Base Cover

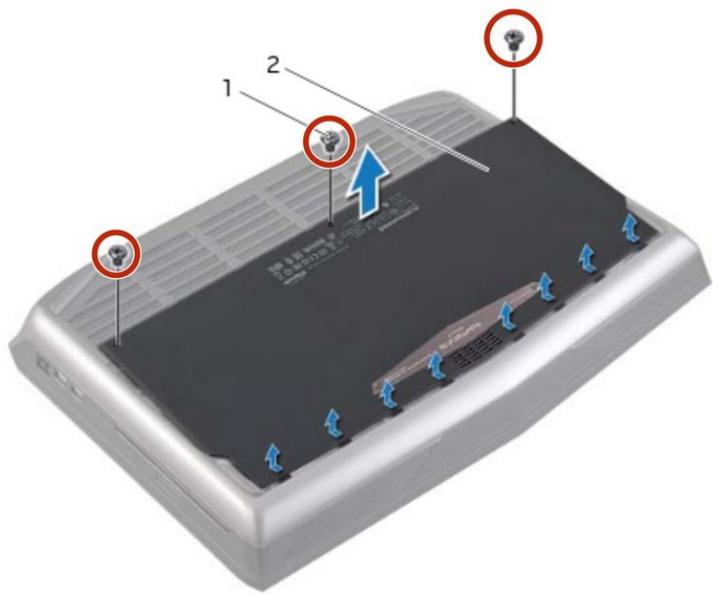

- Replace the screws that secure the base cover to the computer base.

Step 6 — Prelude

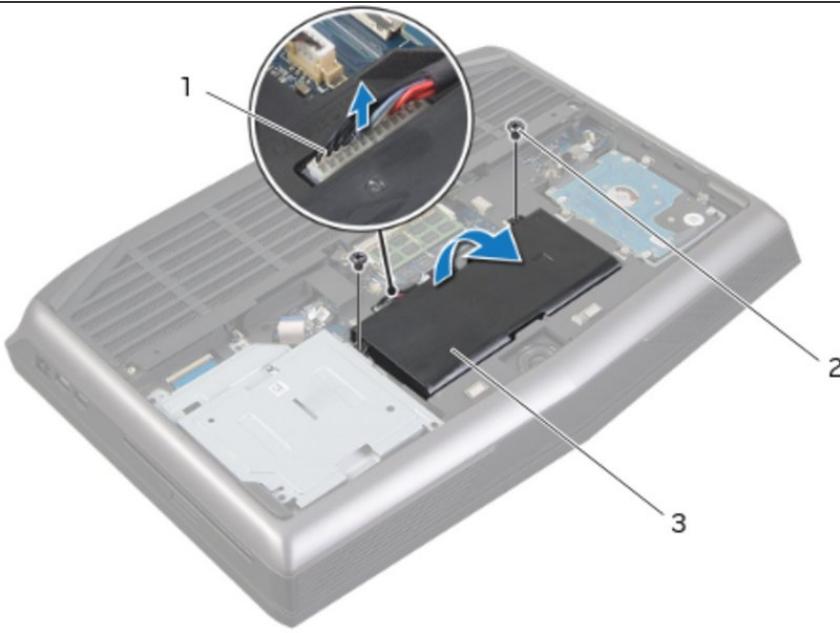

 **WARNING:** Before working inside your computer, read the safety information that shipped with your

computer and follow the steps in [Before You Begin](#).

Step 7 — Removing the Screws



- Remove the screws that secure the battery to the computer base.

Step 8 — Disconnecting the Cable



- Disconnect the battery cable from its connector on the system board.

Step 9 — Lifting the Battery Pack



- Lift the battery pack away from the computer base.

Step 10 — Replacing the Battery Pack




- Align the tabs on the **NEW** battery with the slots on the computer base and place the battery on the computer base.

Step 11 — Connecting the Battery Cable



- Connect the battery cable to its connector on the system board.

Step 12 — Replace the Screws

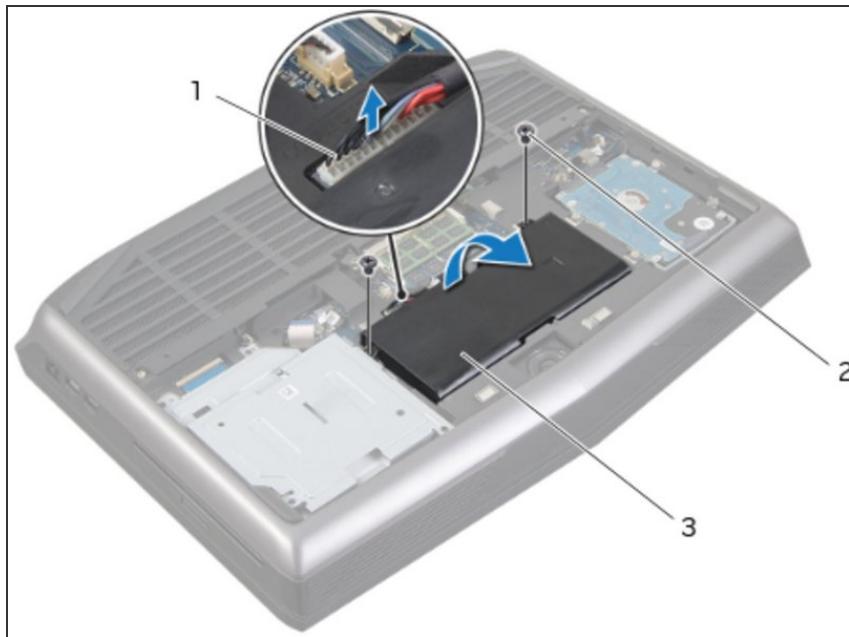

- Replace the screws that secure the battery to the computer base.