



# Dell Alienware M11x R3 Battery Replacement


Written By: Richard Maurice



 **TOOLS:**

- **JIS #1** (1)

## Step 1 — Lower Case

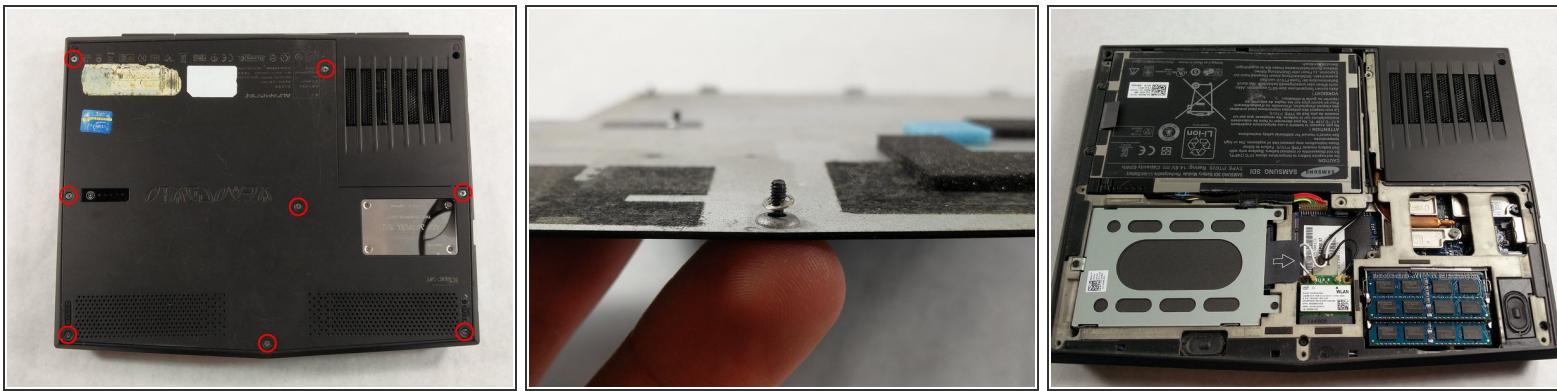

- Loosen the 8 retaining screws on the base of the computer.

*(i)* The screws have retaining washers to hold them in place, so they won't actually separate from the base plate.


- Remove the bottom cover from the laptop.

## Step 2 — Battery



- Unscrew the two circled screws

## Step 3

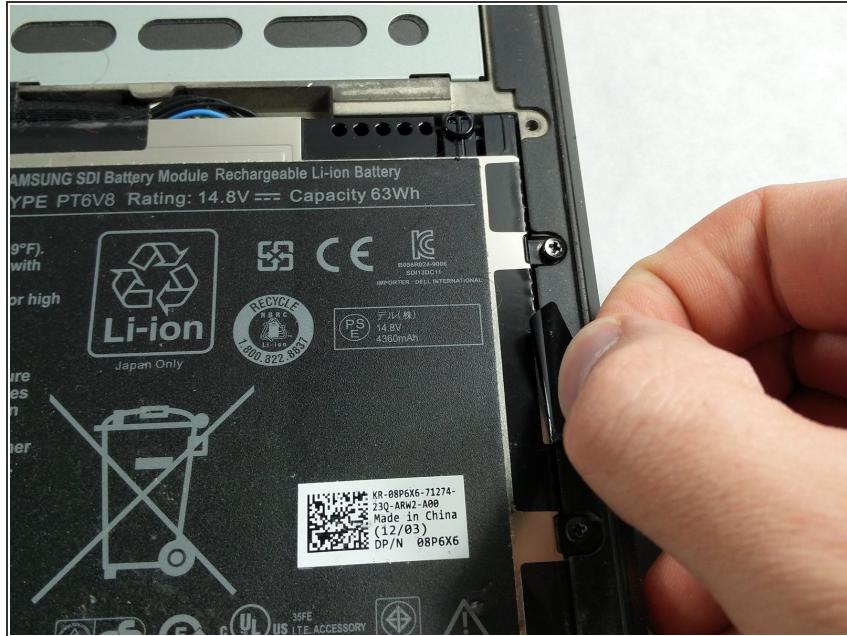


- After unscrewing, **gently** lift up the battery with the small plastic tab attached.

## Step 4



- Do not try to fully remove the battery as there is a wire still connected, but lift it out of its casing.

## Step 5

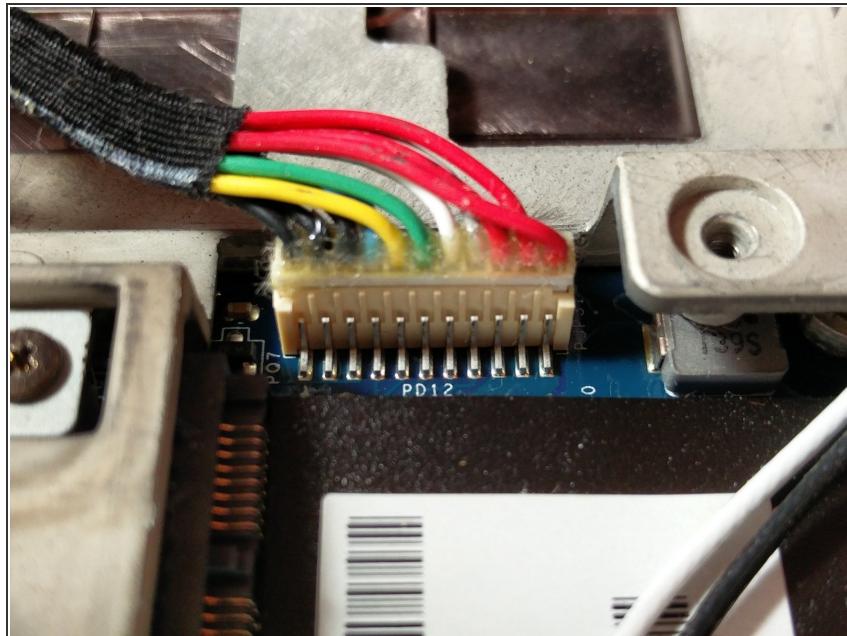

- Behind the battery, locate this PD12 battery wire and gently unplug it.

## Step 6



- With the wire unplugged, and all of the screws taken out, you are free to remove the battery for replacement!

To reassemble your device, follow these instructions in reverse order.