



# Dell Alienware M14x Battery Pack Replacement

How to replace a broken or dead battery in a Dell Alienware M14x.

Written By: Terrence15




## INTRODUCTION

In this guide, we will show you how to remove and replace the Battery Pack.

### TOOLS:

- Essential Electronics Toolkit (1)

## Step 1 — Disconnecting the Battery-Pack Cable

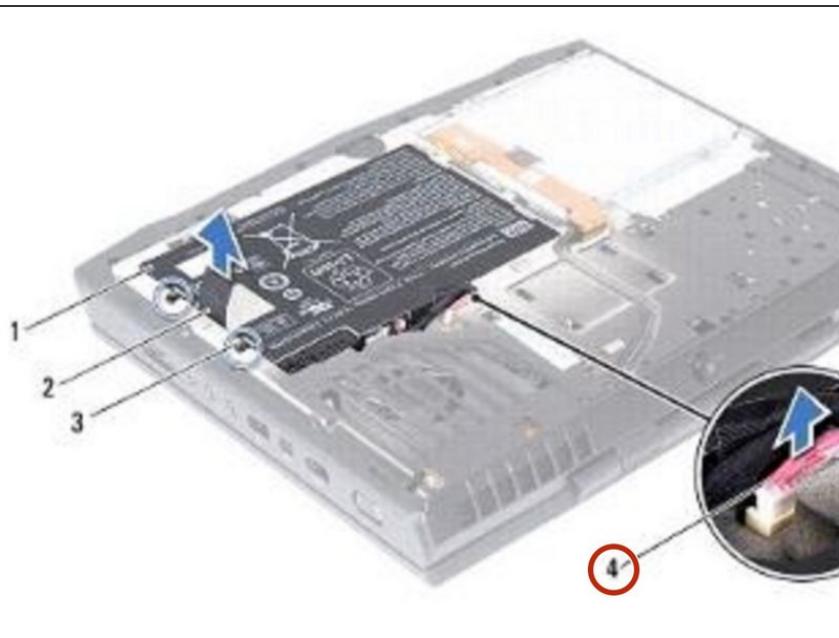


**⚠️** **WARNING:** Before working inside your computer, read the safety information that shipped with your computer.

**⚠️** **CAUTION:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer).


- Disconnect the battery-pack cable from the connector on the system board.

## Step 2 — Loosen the Two Captive Screws

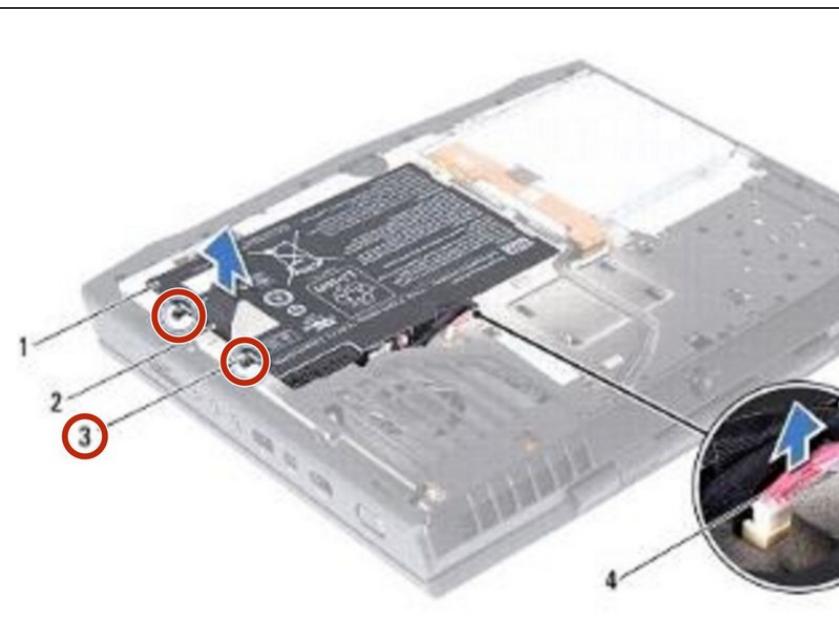


- Loosen the two captive screws that secure the battery pack to the computer base.

## Step 3 — Lifting the Battery Pack

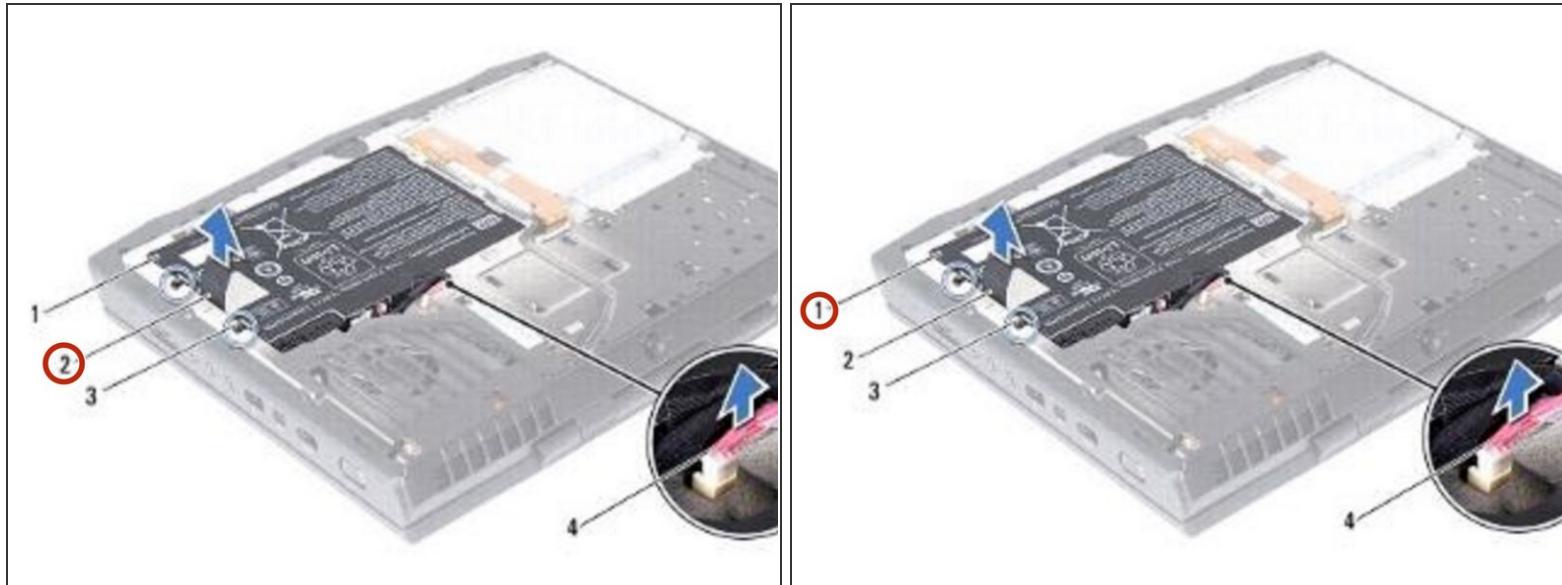


- Using the pull-tab, lift the battery pack off the computer base.

## Step 4 — Securing the Battery Pack

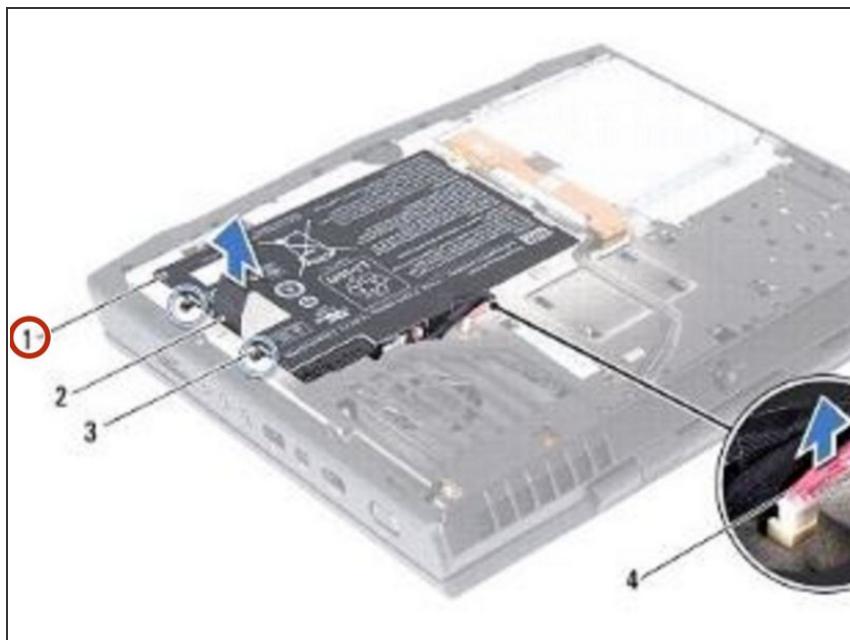

- Place the **NEW** battery pack in the battery bay and tighten the two captive screws that secure the battery pack to the computer base.

## Step 5 — Connecting the Battery-Pack Cable

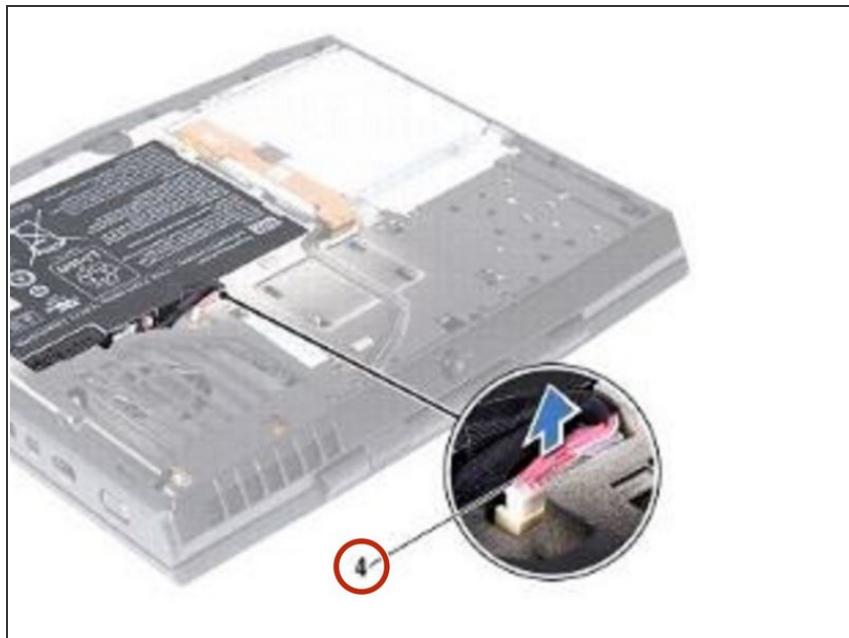

- Connect the battery-pack cable to the connector on the system board.

To reassemble your device, follow these instructions in reverse order.