



Dell Alienware M17x R2 Display Assembly Replacement

Written By: Terrence15




INTRODUCTION

In this guide, we will show you how to remove and replace the Display Assembly.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)

Step 1 — Remove the Screws

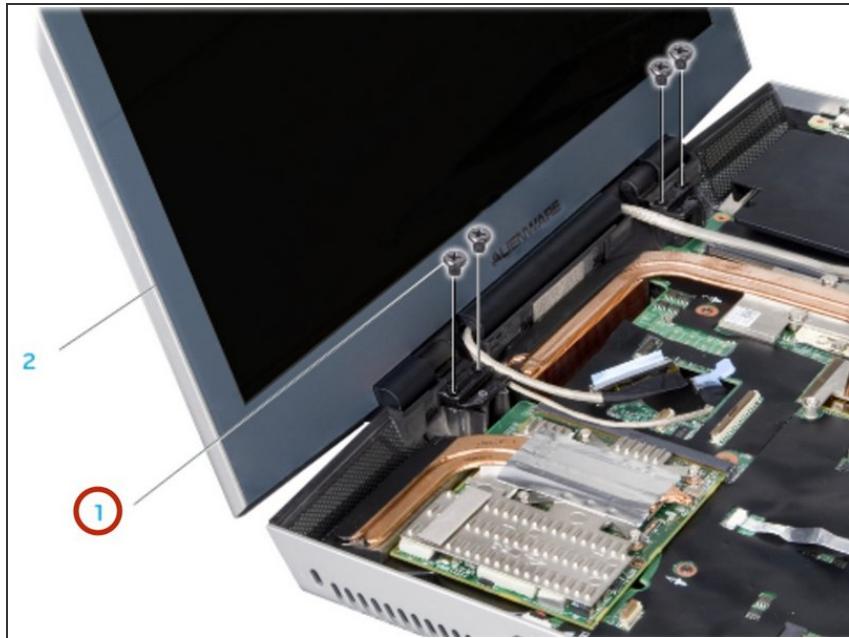


⚠️ **WARNING:** Before working inside your computer, read the safety information that shipped with your computer.

⚠️ **CAUTION:** To avoid damage to the display, you must not disassemble your Edge-to-Edge display assembly.


- Remove the four screws (two from each hinge) that secure the display assembly to the computer base.

Step 2 — Lifting the Display Assembly

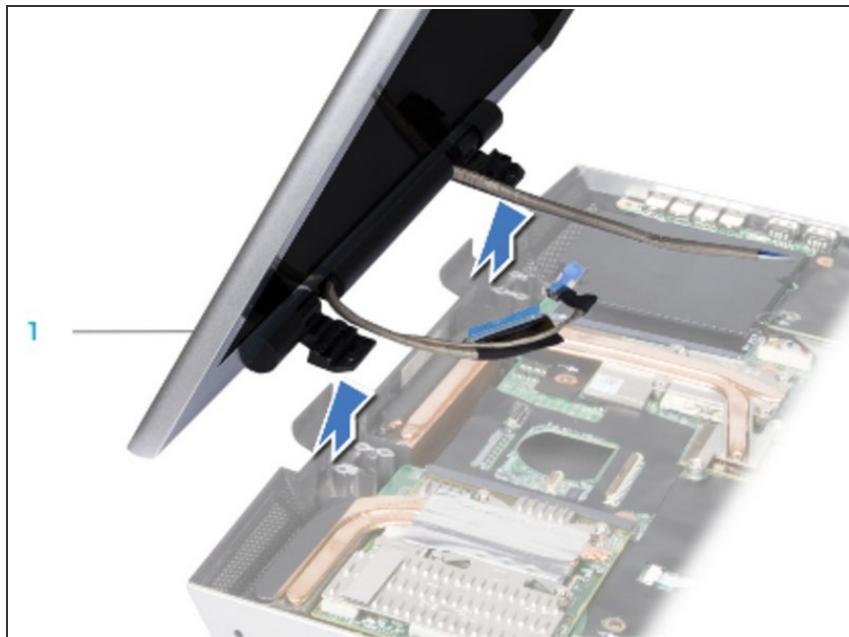


- Bend the display assembly towards the computer base at a 45-degree angle and lift the display assembly off the computer.

Step 3 — Align the Screw Holes

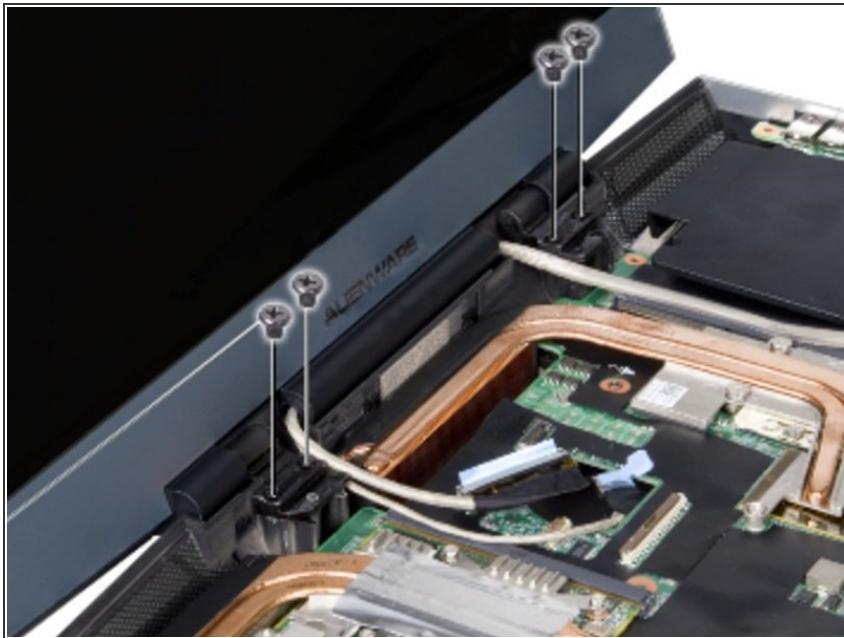

- Align the screw holes on the display hinges with the computer base.

Step 4 — Replace the Screws

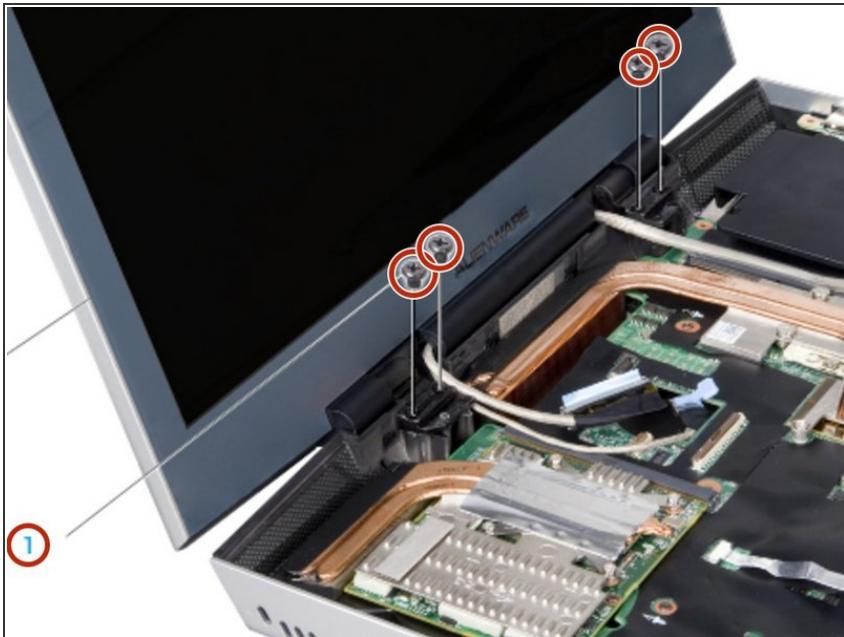

- Replace the four screws (two on each hinge) that secure the display assembly to the computer base.

To reassemble your device, follow these instructions in reverse order.