



Dell Alienware M17x R3 Battery Pack Replacement

Written By: Terrence15



INTRODUCTION

In this guide, we will show you how to remove and replace the Battery Pack.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)

Step 1 — Turning Over the Computer




⚠️ **WARNING:** Before working inside your computer, read the safety information that shipped with your computer.

⚠️ **CAUTION:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer).

⚠️ **CAUTION:** To avoid damage to the computer, use only the battery designed for this particular Alienware computer. Do not use batteries designed for other Alienware computers.


- Shut down the computer and turn it over.

Step 2 — Popping Out the Battery Pack

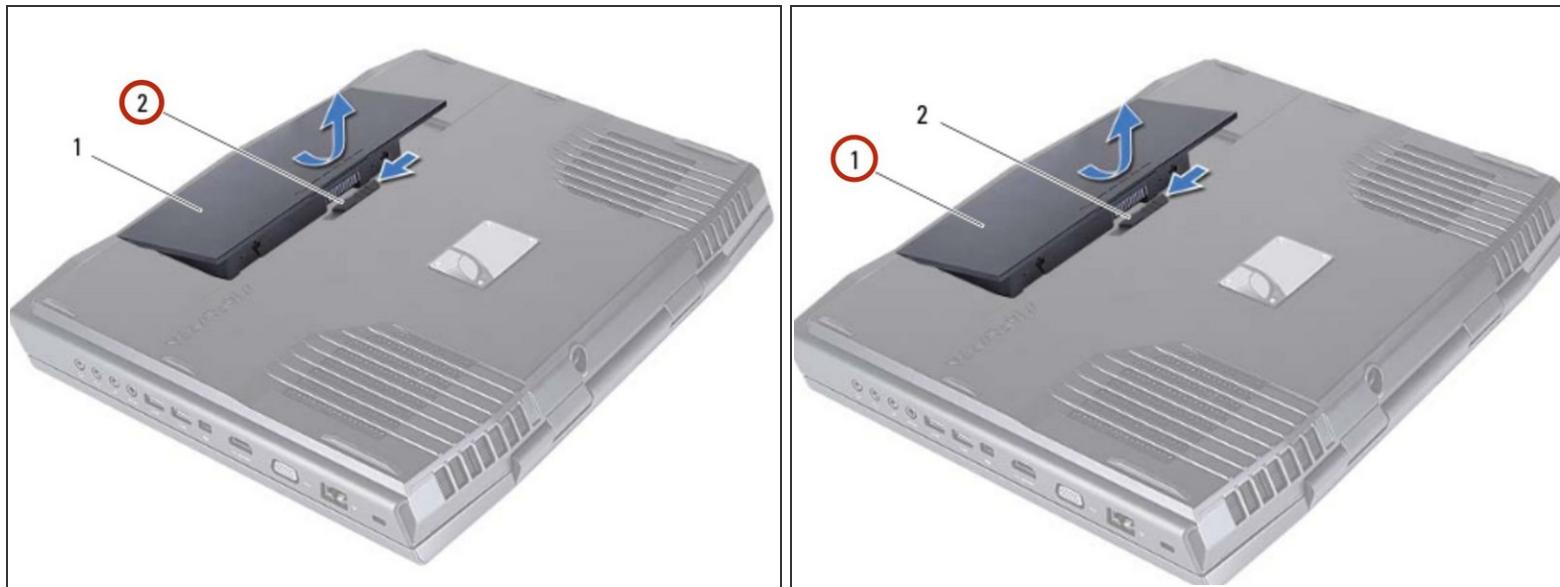

- Slide the battery latch to the unlock position as shown. The battery pack pops up.

Step 3 — Removing the Battery Pack

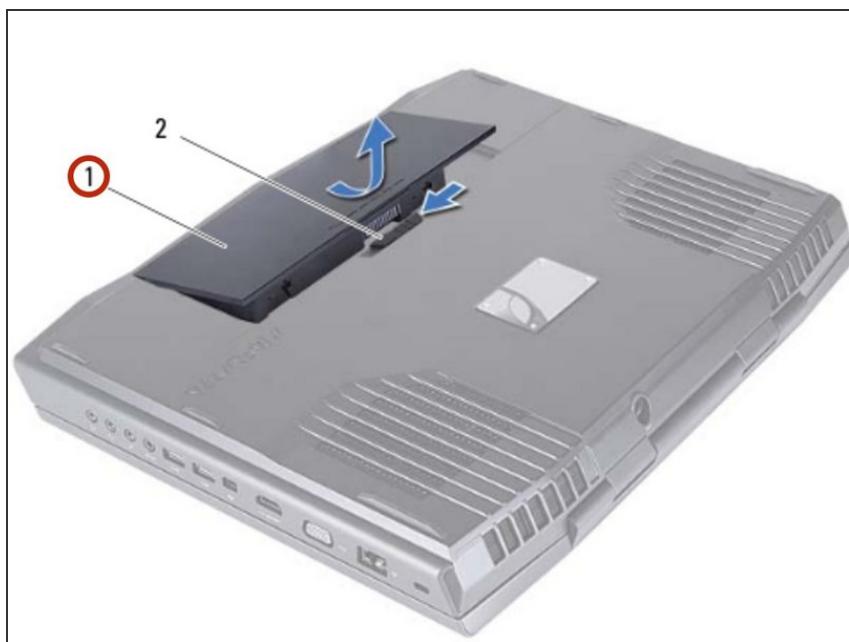

- Remove the battery pack.

Step 4 — Align the Tabs



- Align the tabs on the **NEW** battery with the slots on the battery bay and snap the battery into place.

To reassemble your device, follow these instructions in reverse order.