



# Dell Alienware M18x Battery Pack Replacement

Written By: Terrence15



## INTRODUCTION

In this guide, we will show you how to remove and replace the Battery Pack.

## Step 1 — Turning the Computer Over




**⚠️** **WARNING:** Before working inside your computer, read the safety information that shipped with your computer.

**⚠️** **CAUTION:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer)

**⚠️** **CAUTION:** Only a certified service technician should perform repairs on your computer. Damage due to servicing that is not authorized by Dell is not covered by your warranty.

- Shut down the computer and turn it over.

## Step 2 — Popping up the Battery Pack

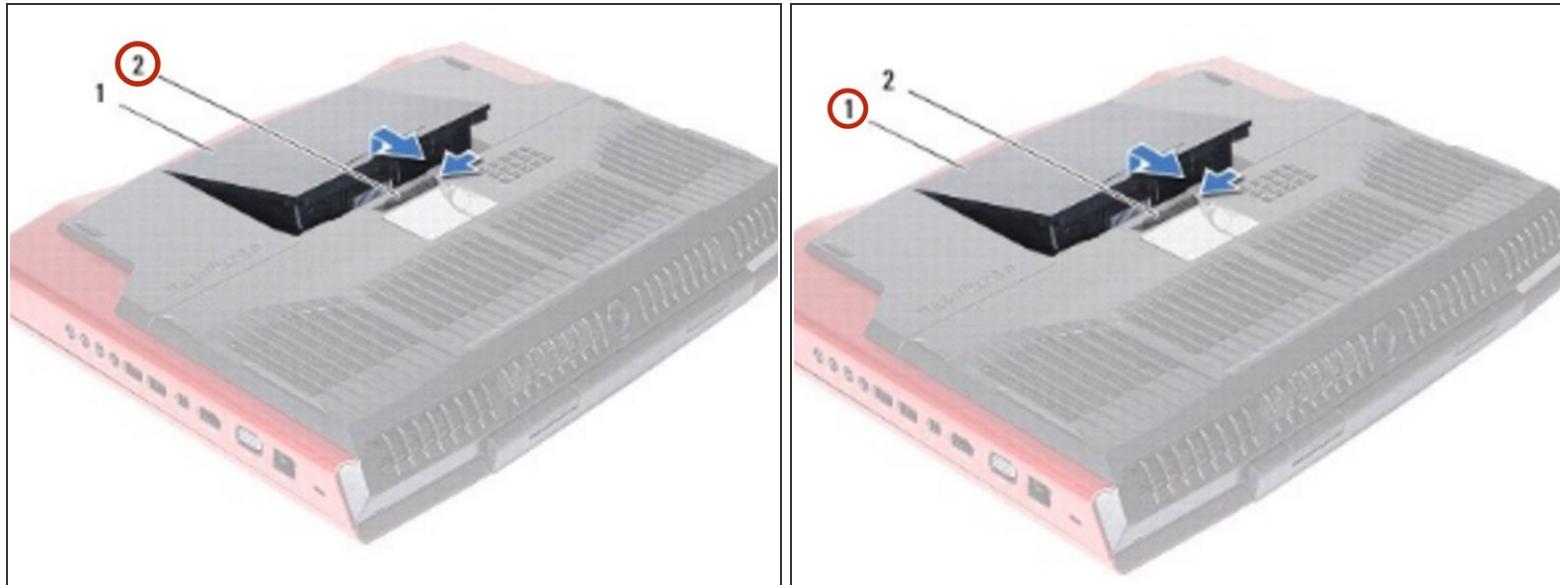


- Slide the battery latch to the unlock position. The battery pack pops up.

## Step 3 — Sliding the Battery Pack



- Lift and slide the battery pack away from the battery bay.

## Step 4 — Align the Tabs

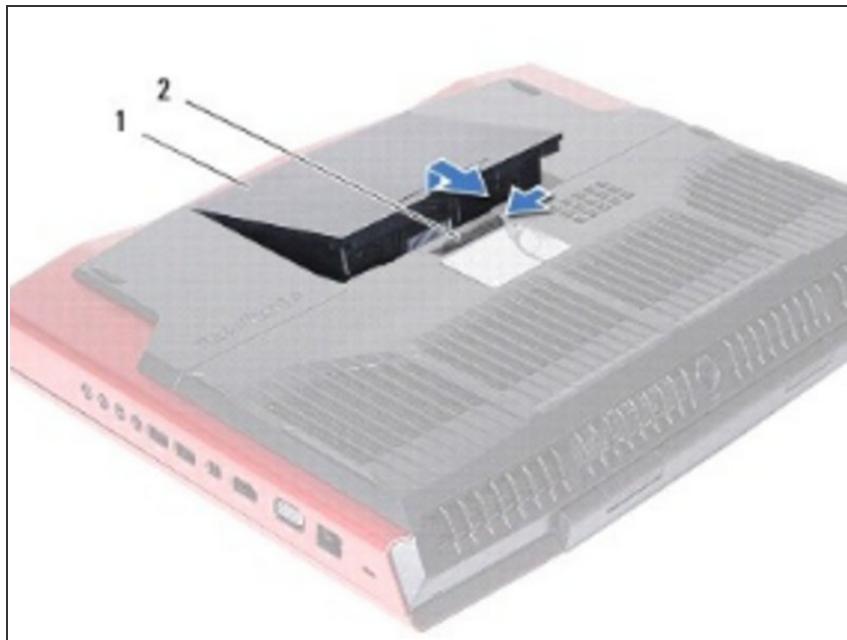

- Align the tabs on the **NEW** battery with the slots on the battery bay and snap the battery into place.

To reassemble your device, follow these instructions in reverse order.