




# Dell Alienware M18x Memory Modules Replacement

Written By: Terrence15

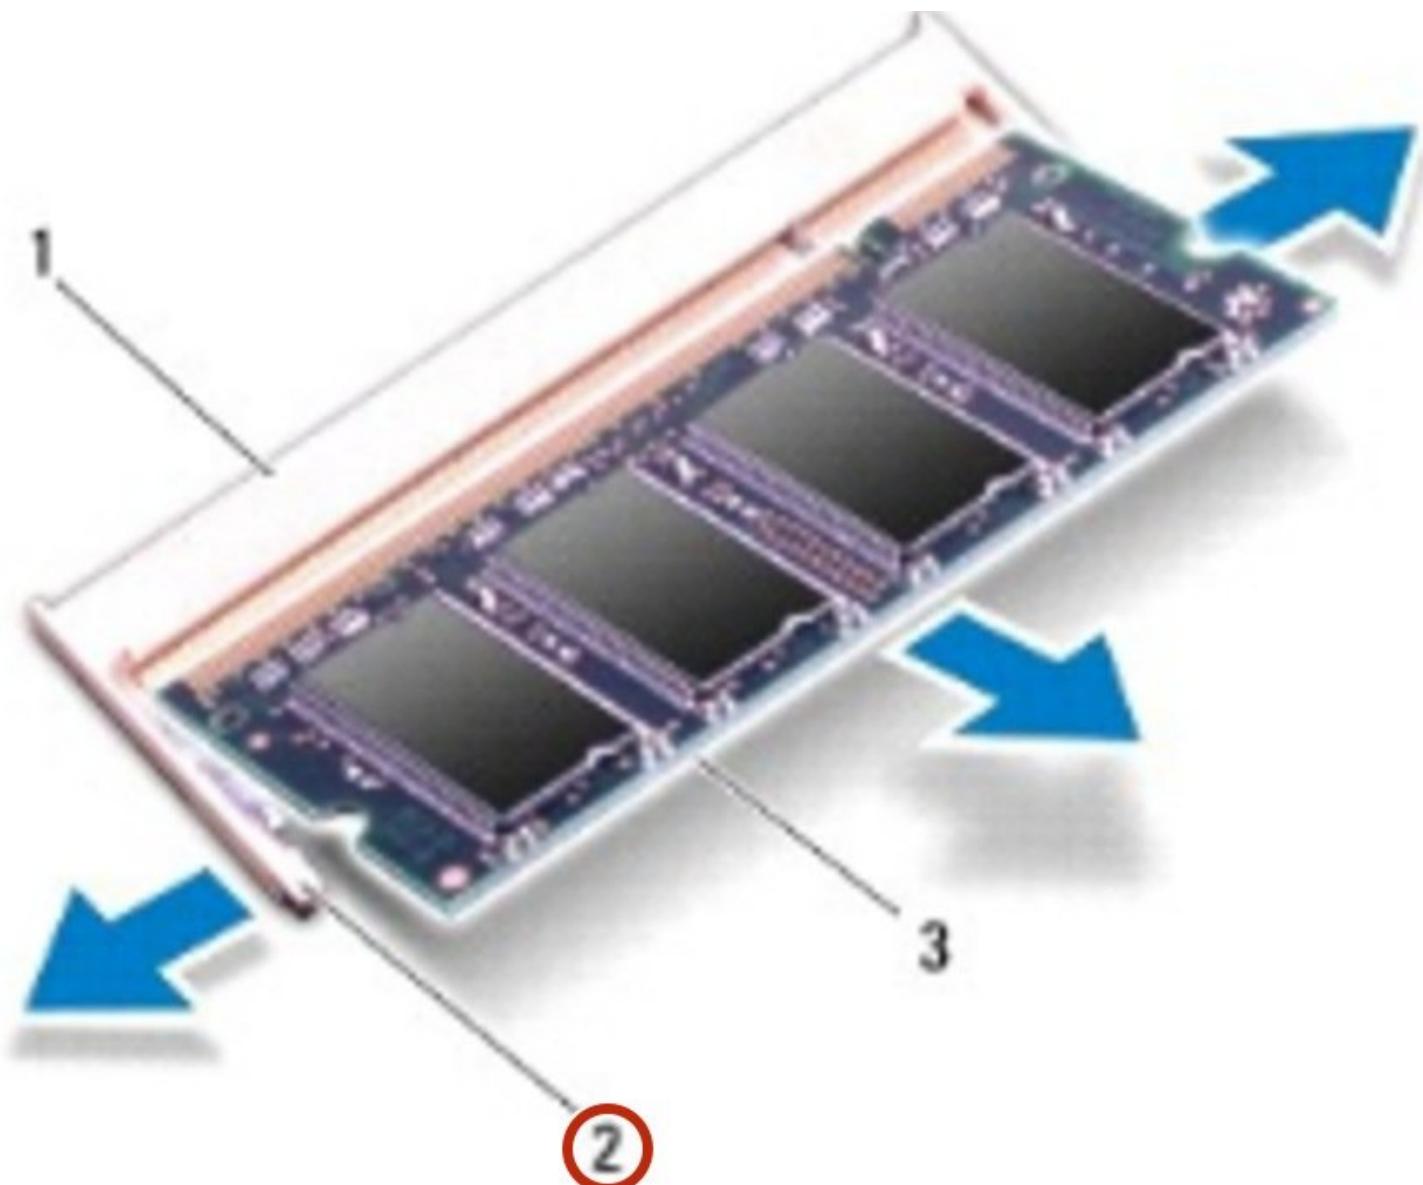


## INTRODUCTION

In this guide, we will show you how to remove and replace the Memory Modules.

### TOOLS:

- **Phillips #0 Screwdriver (1)**

## Step 1 — Popping up the Memory Module

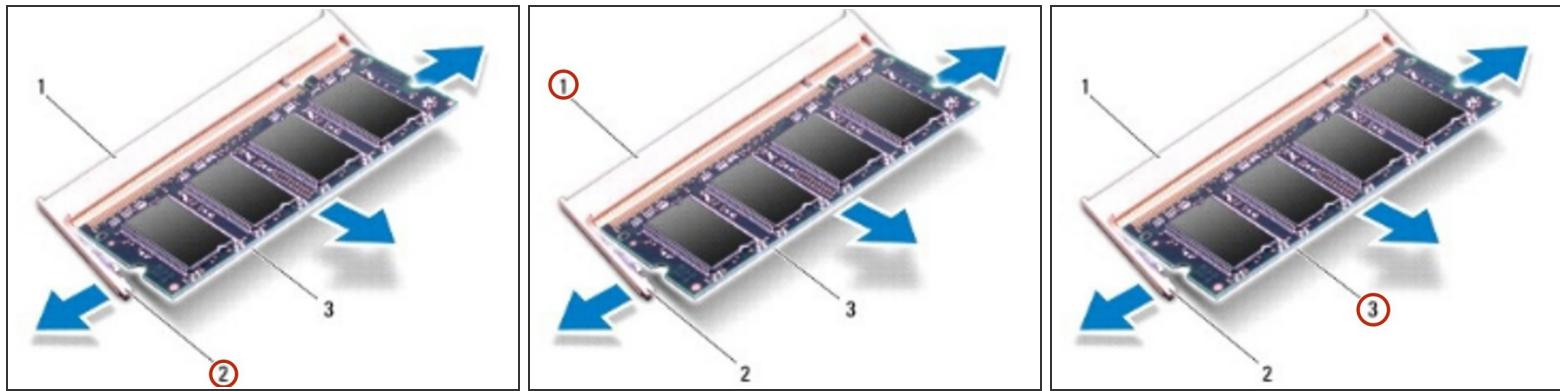


- *(i)* Follow the instructions in [Before You Begin](#).

**⚠ CAUTION:** To prevent damage to the memory -module connector, do not use tools to spread the memory module securing clips.


- Using your fingertips, spread apart the securing clips on each end of the memory-module connector until the memory module pops up.

## Step 2 — Align the Notch

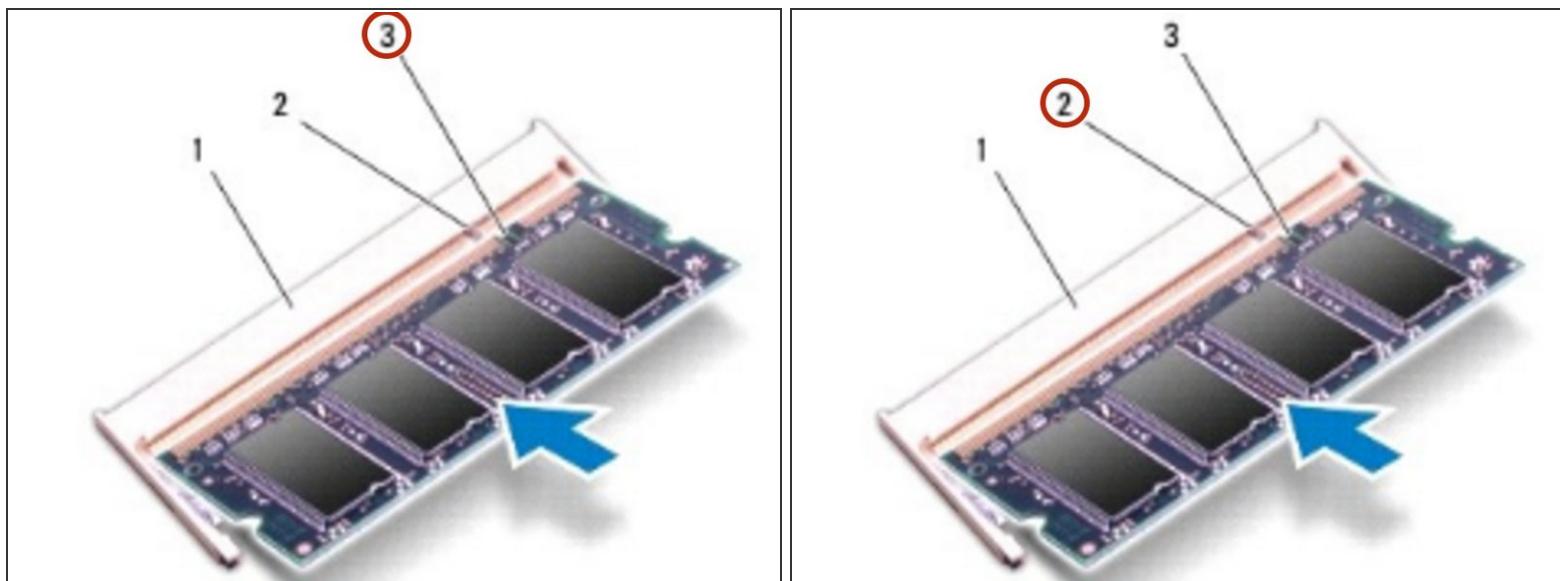

- Align the notch in the **NEW** memory module with the tab in the memory-module connector.

## Step 3 — Sliding the Memory Module

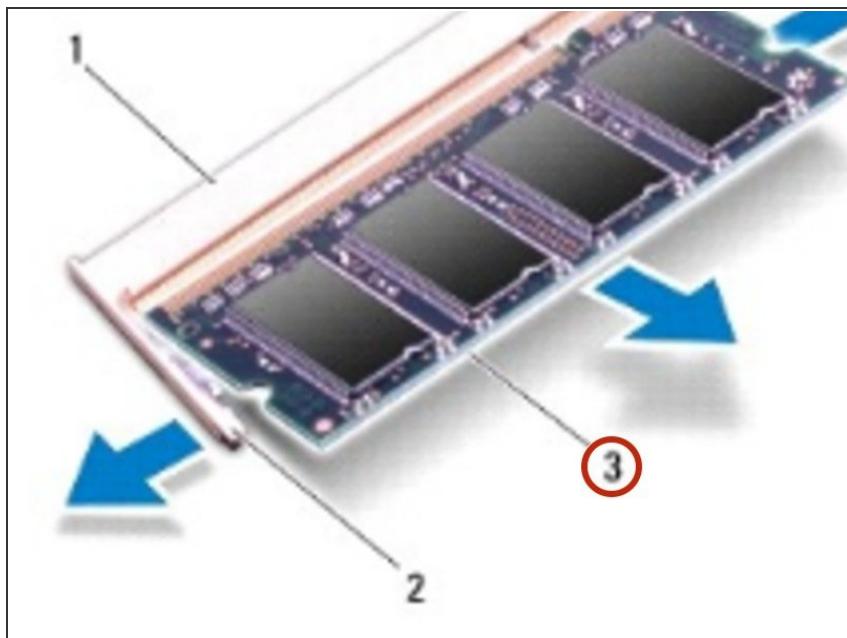

- Slide the memory module into the connector at a 45-degree angle, and press the memory module down until it clicks into place. If you do not hear the click, remove the memory module and reinstall it.

*(i)* NOTE: If the memory module is not installed properly, the computer may not boot.

To reassemble your device, follow these instructions in reverse order.