



Dell Chromebook 11 CB1C13 Bottom Cover Replacement

This guide will show the procedure to take off the bottom cover of the laptop.

Written By: Bryan Allen



INTRODUCTION

An essential step for any sort of replacement or repair that involves the inside of the device. This guide will show the procedure to take off the bottom cover of the laptop.


TOOLS:

- [iFixit Opening Tools \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)

PARTS:

- [Dell Chromebook 11 CB1C13 Bottom Cover \(1\)](#)

Step 1 — Back Panel

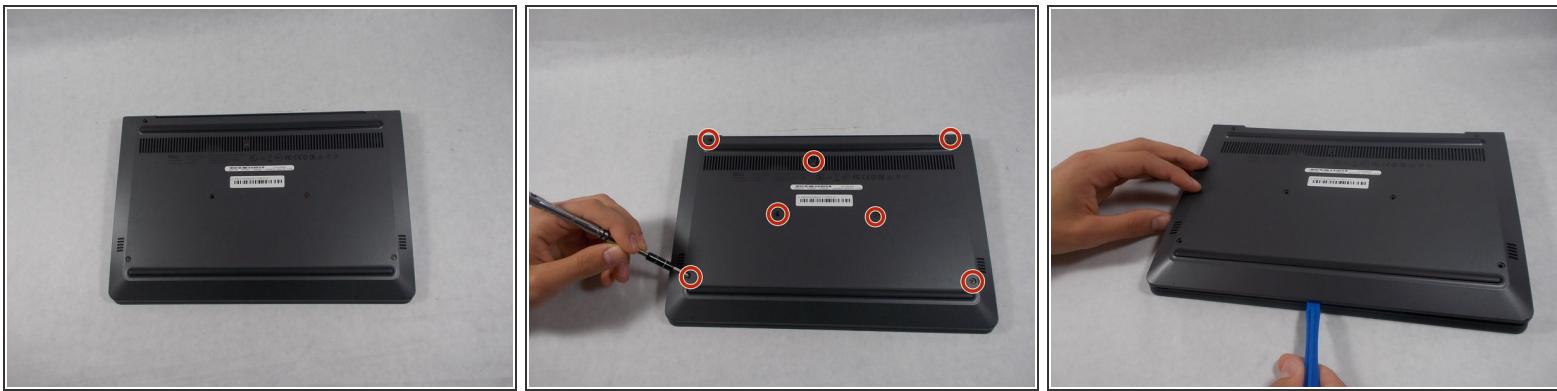

! Make sure that device is fully powered down before attempting to open the back case.

- Remove all seven 8 mm Philips #0 screws from the back case with a Philips #0 screwdriver.
- Once all seven screws are removed, you can pry the case off using your fingers or a plastic opening tool.

To reassemble your device, follow these instructions in reverse order.