




# Dell Chromebook 11 CB1C13 Bottom Cover/Shell Disassembly

This guide will show how to remove the bottom cover/shell

Written By: Jon

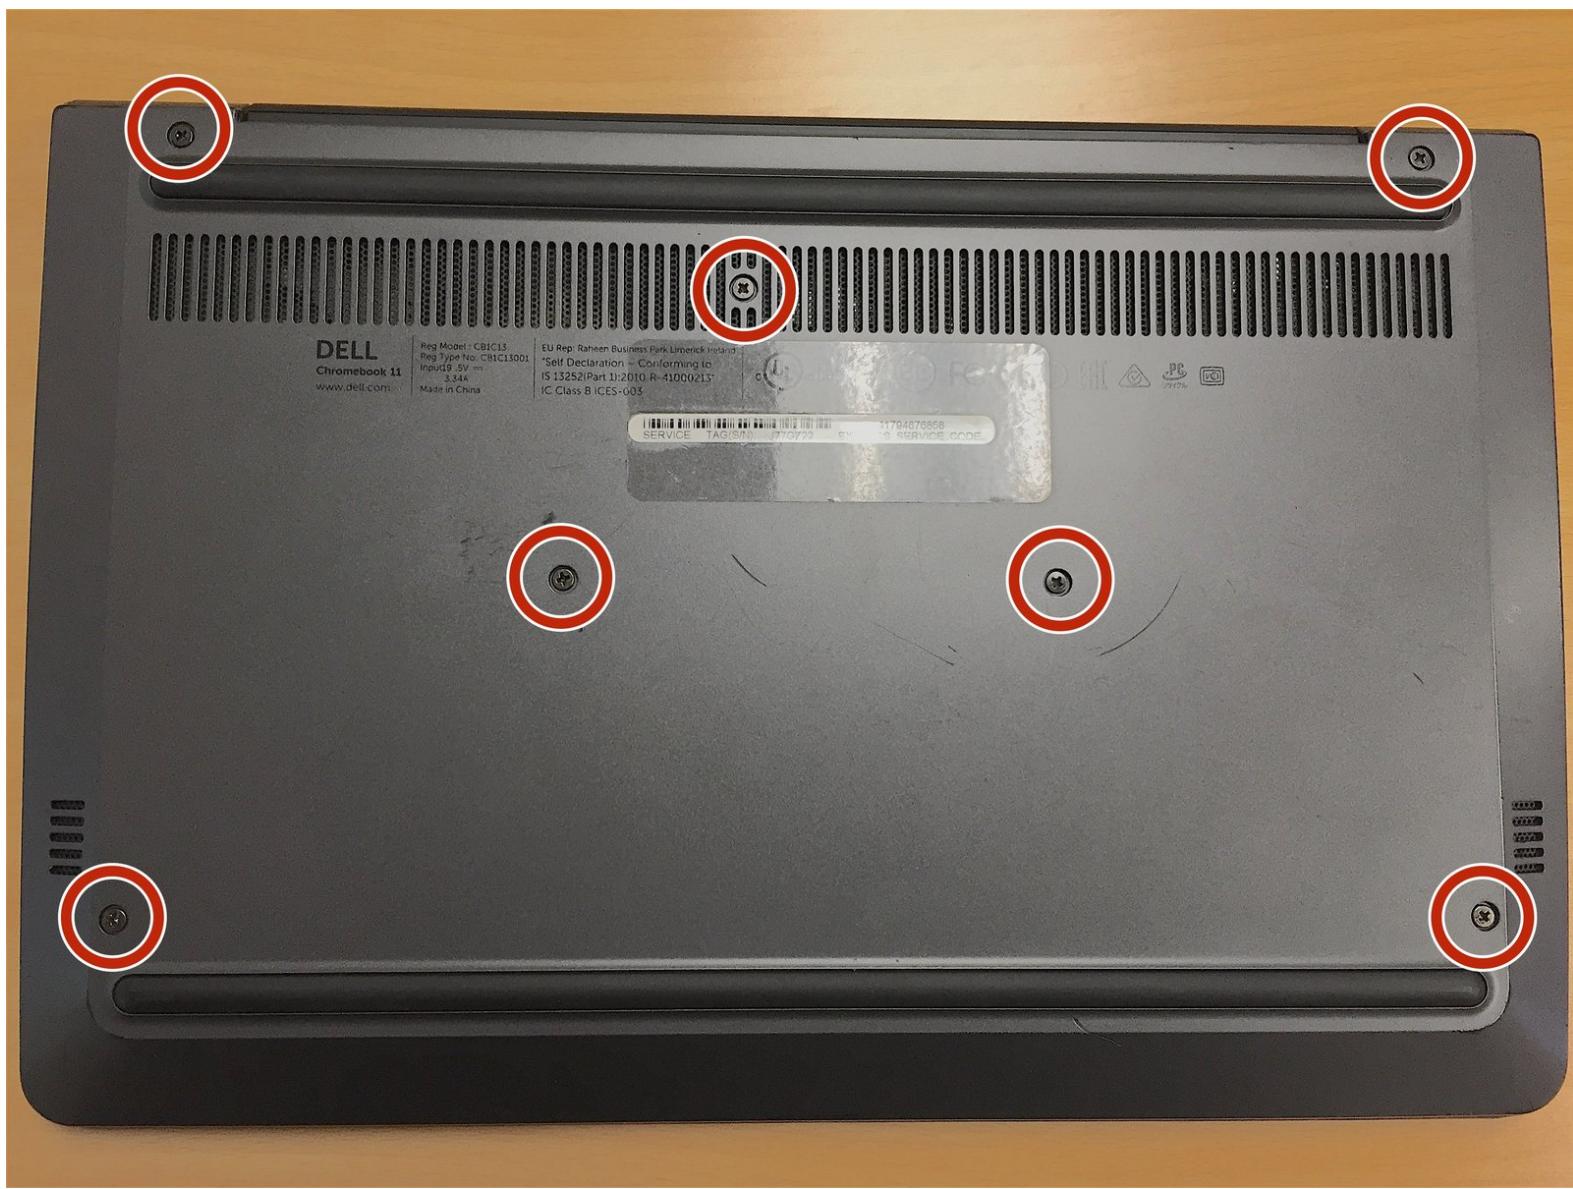

## INTRODUCTION

This guide will show how to remove the bottom cover/shell

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

*(optional but recommended)*

### PARTS:

- [Dell Chromebook 11 CB1C13 Bottom Cover](#) (1)

## Step 1 — Remove Bottom Cover/Shell



- Remove the 7 screws from the back cover with a Phillips #0 screwdriver
- Once all 7 screws have been removed, you can start to pry apart the back cover with your fingers/nails or use a [plastic opening tool](#) and carefully start to separate the back cover from the main chromebook. See pic
- When prying the bottom cover away from the main chassis, you can follow the order of the colored arrows starting with the red arrows while working your way around to green and so on. However, this order is not mandatory but seems to be the easiest.

To reassemble your device, follow these instructions in reverse order.