



# Dell Chromebook 11-3120 Bottom Base Cover Replacement

Replace the bottom base cover of a Dell Chromebook 3120

Written By: Dalton D



## INTRODUCTION

The bottom cover of the Chromebook 3120 must be removed to perform many repairs on the system, including battery or screen assembly replacement.

### **TOOLS:**

- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)

### **PARTS:**


- [Dell Chromebook 11-3120 Bottom Base Cover Assembly](#) (1)

## Step 1 — Remove screws



- Flip the device over so the bottom is facing up
- Remove the 7 visible Philips screws from the device's bottom cover

## Step 2

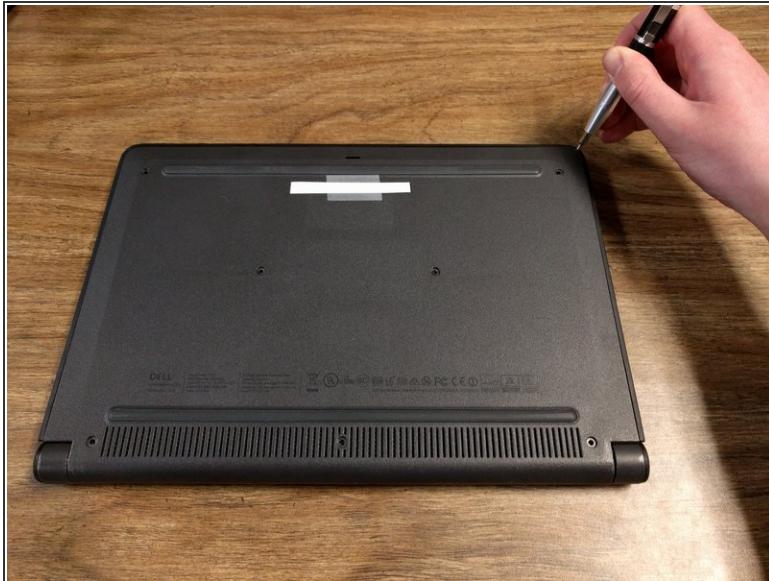

- Insert a thin prying tool into the front (facing the user) corner between the rubber bumper and the plastic case to pop several latches.
- Starting from the partially-opened corner, pull the case away from the device in a hinging motion. I rotated the computer so that the opened corner faced me in the image.

To reassemble your device, follow these instructions in reverse order.