



# Dell Chromebook 13-7310 Web Camera Replacement

How to replace chromebook web cam?

Written By: Caleb S Whitener



## INTRODUCTION

Use this guide to replace your broken web cam with a new one to get reconnected face-to-face with your friends and family!

### TOOLS:

- [Fingers](#) (1)
- [Spudger](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Web Camera





- To remove the screen, start by using the black nylon spudger to pry off the plastic hinge cover. This allows easy removal of the screen cover.
- Using the same spudger and your finger nails, gently pry the outer casing around the screen itself. Once it is 1/3 to 1/2 of the way removed, gently pull the rest free by hand.

**⚠ CAUTION** There will be popping/snapping sounds when removing. This is normal, just be careful not to crack any plastic or the cover may not reinstall properly.


- Once the clips are undone, remove the cover and you are ready for the next step!

## Step 2

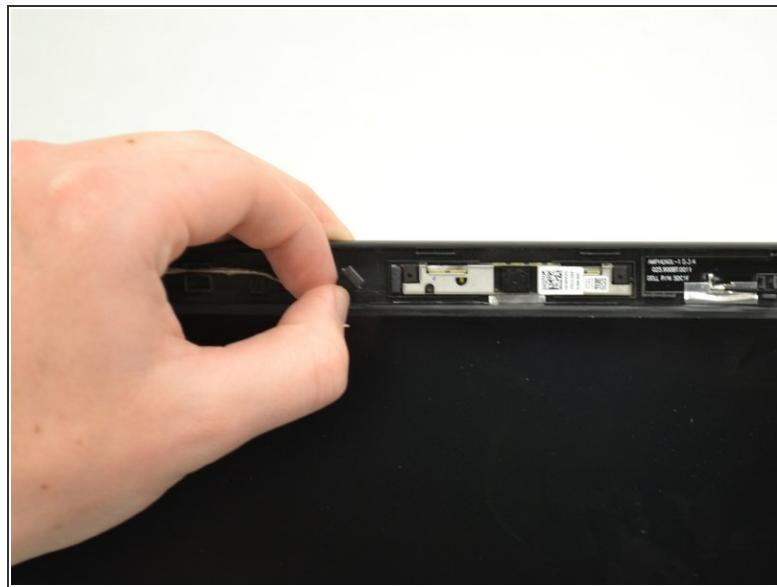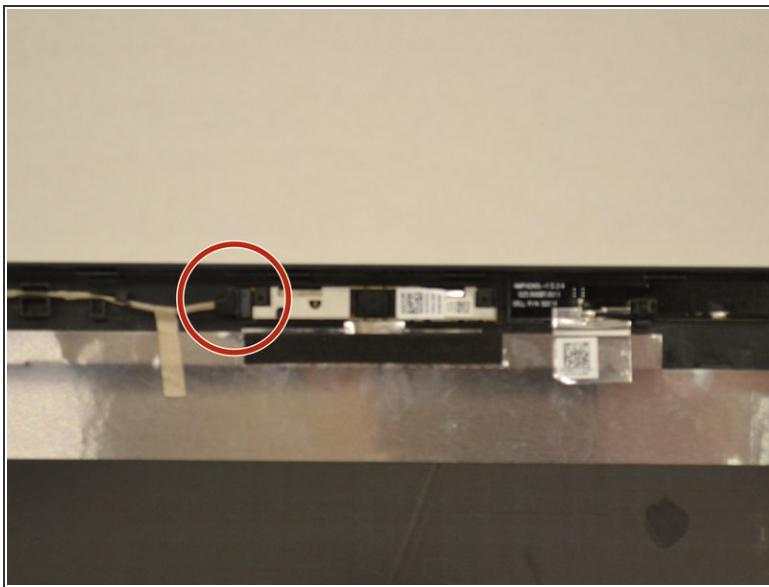

- Now that the camera is exposed, disconnect the wire by hand to untether the camera unit from the motherboard.
- To disconnect, pull to the straight back from the camera connection point.

## Step 3

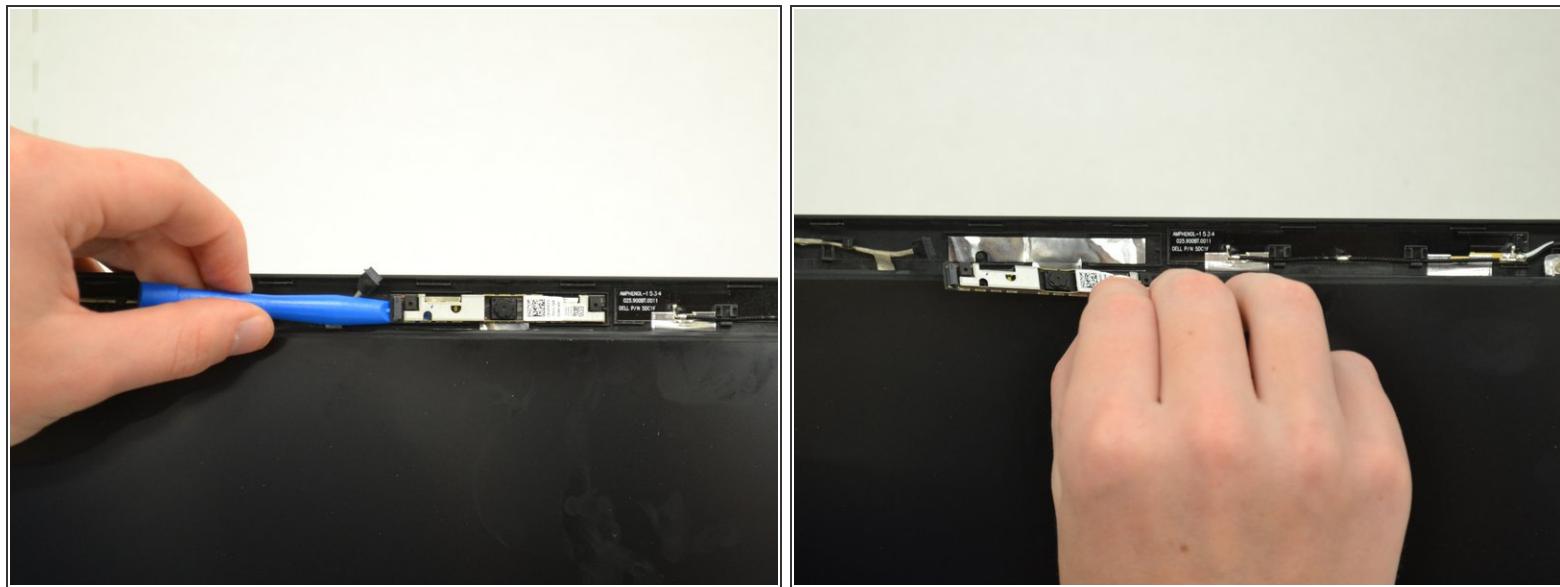

- Once you have disconnected the camera, use the small nylon pry bar to dislodge the camera assembly from the computer housing.

**⚠️ CAUTION** The camera assembly is held very securely to an thin alloy backing plate. Pry slowly and gently as to not damage the backing plate when removing.

- After the camera assembly is free from the backing plate, remove it from the housing bay hand.

Congratulations! You have successfully removed the web camera of your Dell Chromebook 13-7310. To reassemble your device, follow these instructions in reverse order.