



# Dell DJ Disassembly

Follow the steps given to effectively and safely disassemble the device.

Written By: William Abel



## INTRODUCTION

This guide should be followed closely before attempting to repair your device. Follow the steps in great detail to ensure the success of your repair.

### TOOLS:

- iFixit Pro Tech Toolkit (1)

## Step 1 — Dell DJ Disassembly



- Inspect your device and be sure that it matches the device that this guide is disassembling.
- Familiarize yourself with the specific design of the device.
- *(i)* Battery replacement is the only repair that our guide offers that does not require a complete tear down.


## Step 2



- Remove the bottom panel with the metal spudger. This panel may be fused to the outer shell with a dot of adhesive.
- Four screws fasten a metal plate to the device. Using the device magnetic mat and 54 bit (Phillips J000) driver, remove the screws.

**⚠** Be sure to keep the 4mm screws together and organized on the device magnet plate.

## Step 3

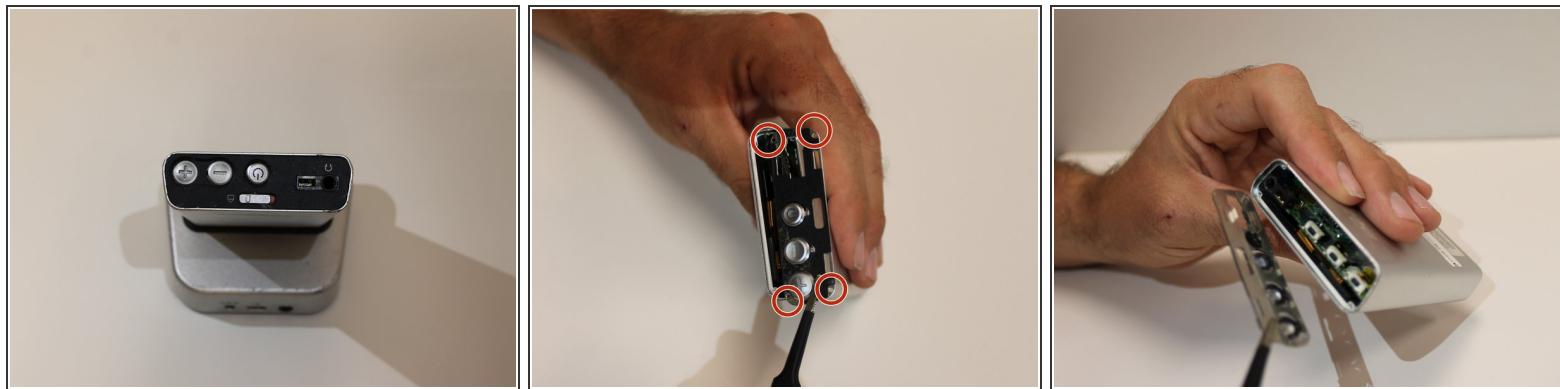

- The top plate of the device is attached by a dot of glue. Use the metal spudger to pry the plate off.
- After the top plate is removed, remove the four 4mm screws that attach the inner plate.
- When the plate is removed, the motherboard will be ready to be removed.

## Step 4



- Slide the motherboard out of the protective case.

**⚠** Be careful not to snag any wires.

- When the motherboard is exposed the device is ready to be inspected and repaired.