


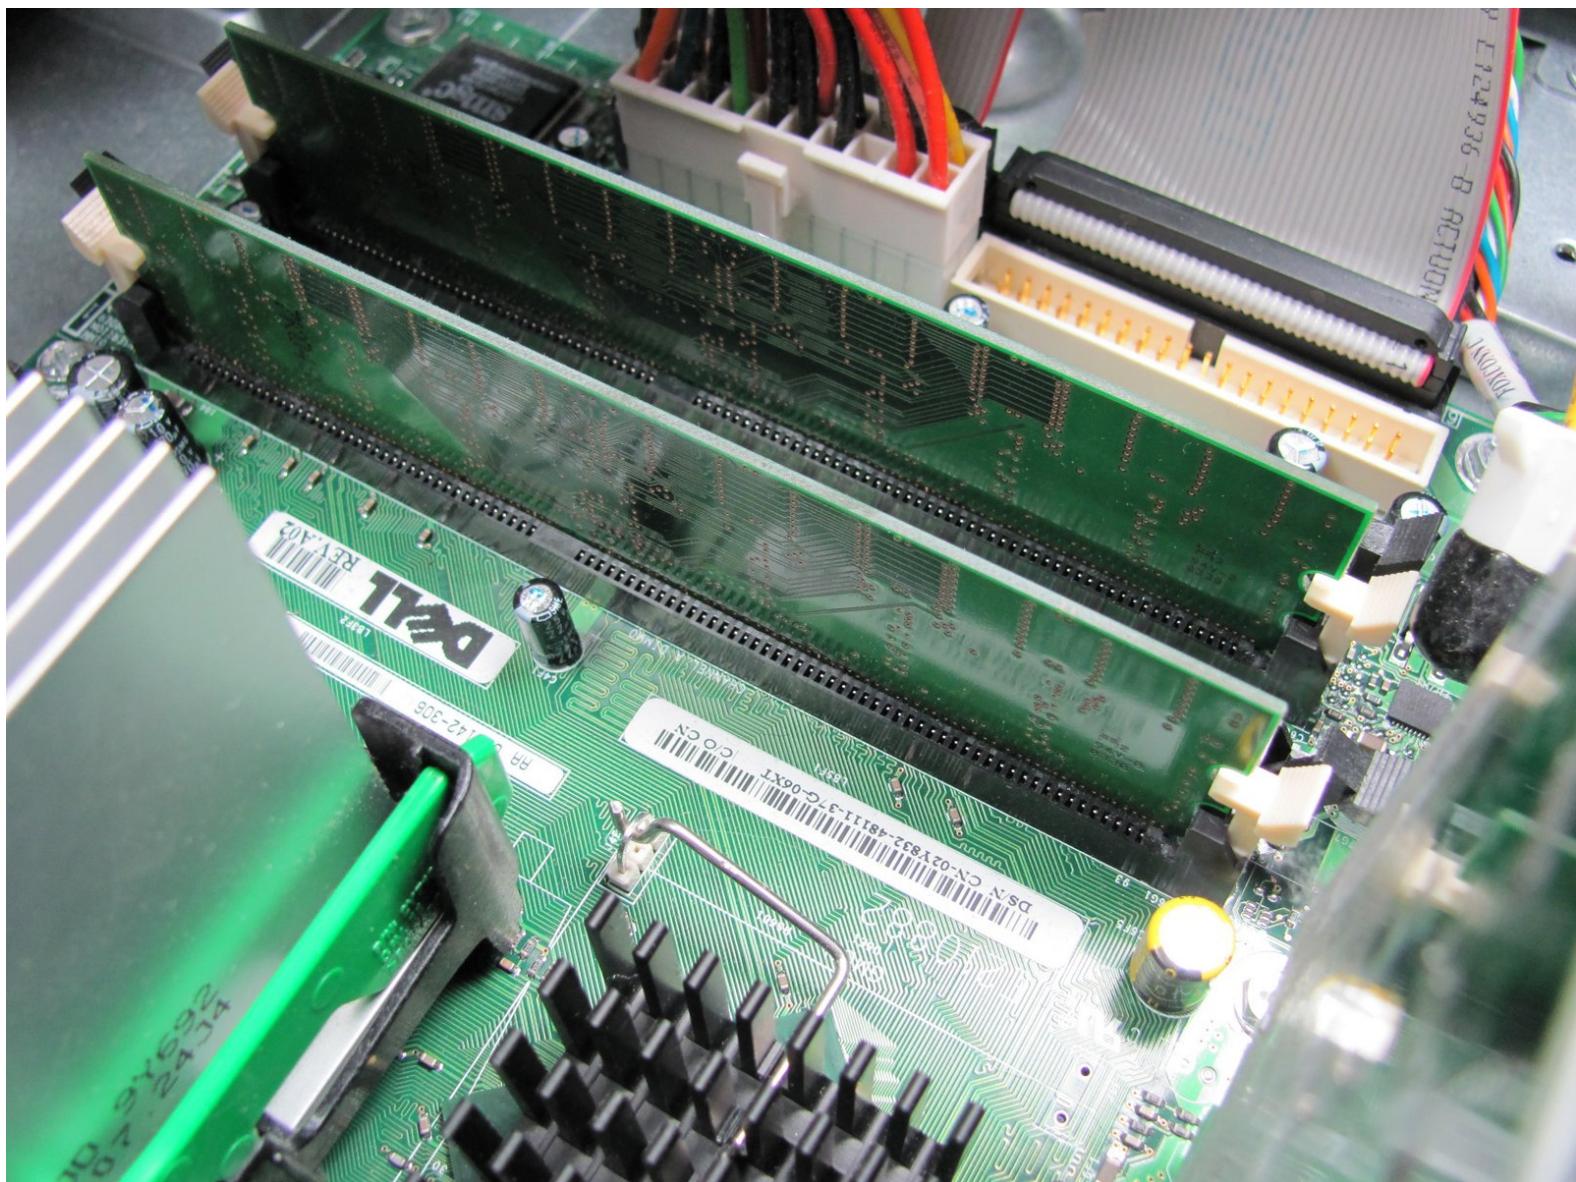

# Dell Dimension 4600 RAM Replacement

This guide covers the removal of the RAM modules from your computer.

Written By: Daniel Crawford



## INTRODUCTION

Use this guide to replace the RAM in your Dell Dimension 4600.



### PARTS:

- [PC3200 1 GB RAM Chip \(Desktop\) \(1\)](#)

## Step 1 — Side Panel



- Locate the case cover latch on the back of the computer.

## Step 2



- Using your index finger, slide and hold the cover latch down.
- While holding the latch down, place your other hand flat on the side of the case and firmly shift the side panel to the left until it disengages.

## Step 3




- Grab the edge of the panel and slide it away from the case until it is removed.

## Step 4 — RAM





- Lay the computer flat on its side so that you are looking down on all of the components.
- Locate the RAM modules on the motherboard.

## Step 5

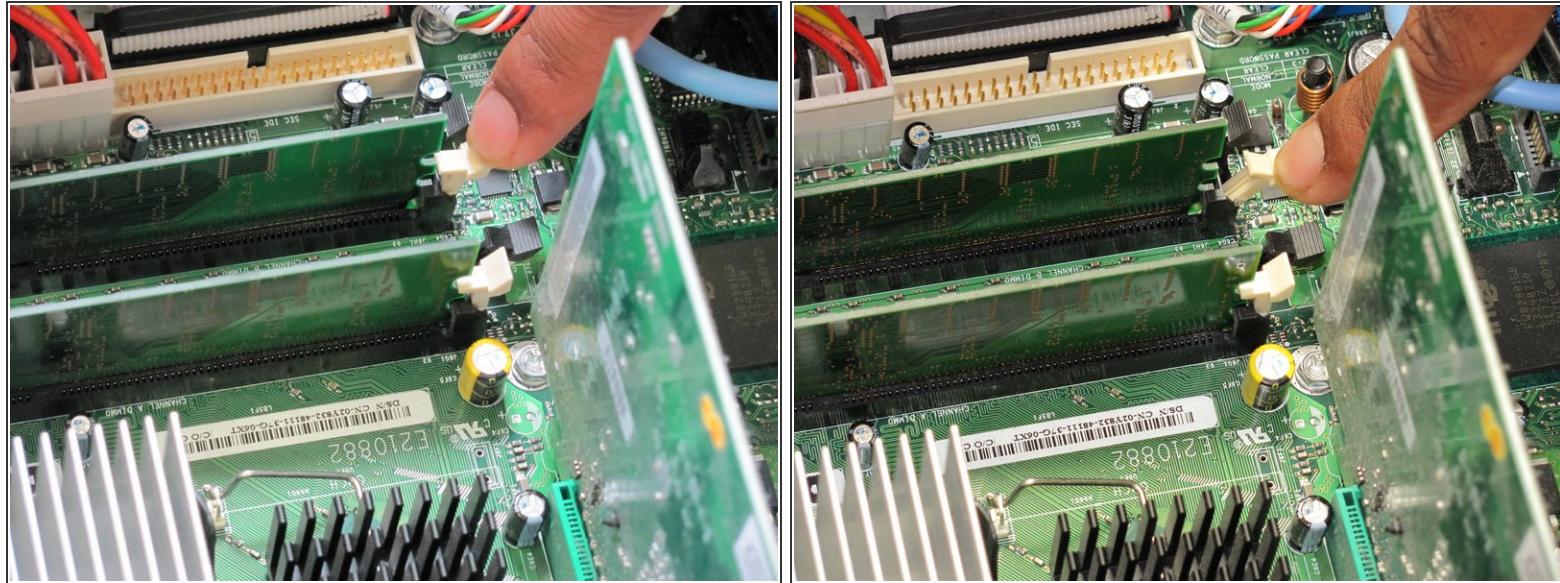

- Locate the white or black tabs holding the RAM module in place.
- Place your index finger on the tab and firmly press down. The tab should release and the RAM module should be slightly raised.
- Repeat this for the tab on the other side of the RAM module.
- Repeat this step for each RAM module.

## Step 6

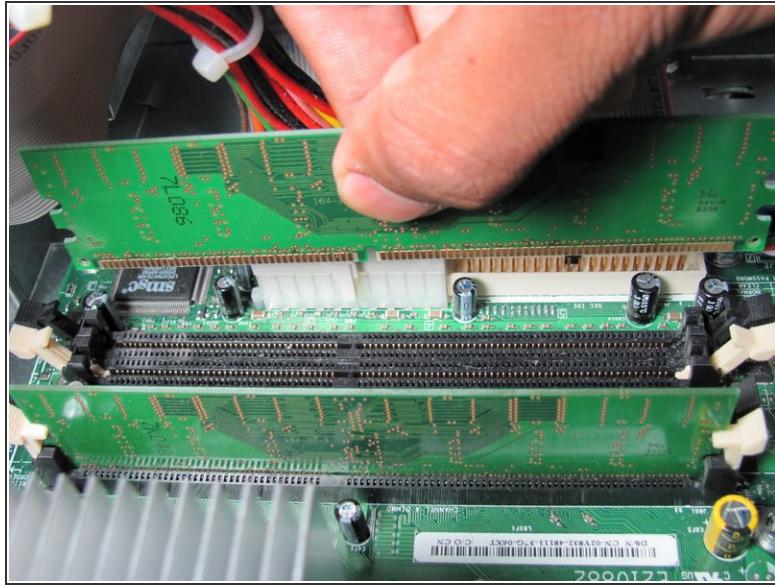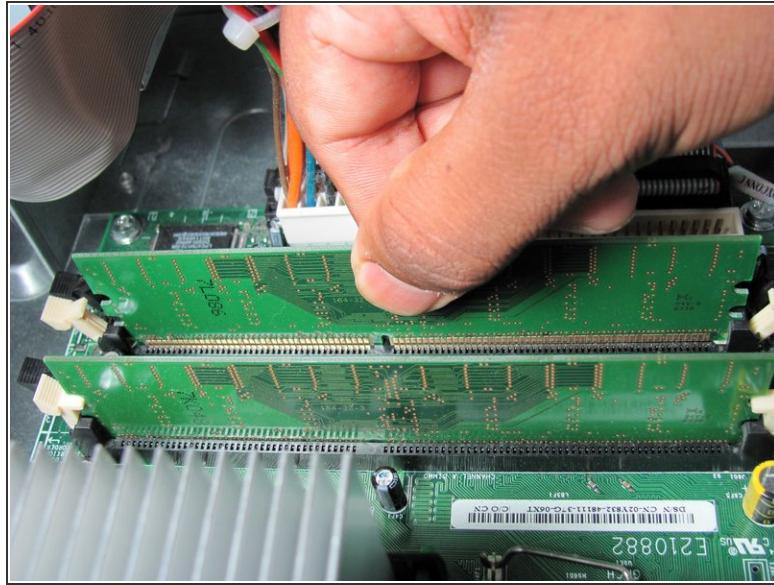

- Grasp the RAM module and firmly pull upwards until it is released from its slot.
- Repeat this step for each RAM module.

To reassemble your device, follow these instructions in reverse order.