



Dell Dimension 4600 Side Panel Replacement

This guide will teach you to open the case of your Dell Dimension 4600 to access the internal parts.

Written By: Daniel Crawford



INTRODUCTION

Use this guide to remove the side panel from the computer and gain access to the internal components.

Step 1 — Side Panel



- Locate the case cover latch on the back of the computer.

Step 2



- Using your index finger, slide and hold the cover latch down.
- While holding the latch down, place your other hand flat on the side of the case and firmly shift the side panel to the left until it disengages.

Step 3



- Grab the edge of the panel and slide it away from the case until it is removed.

To reassemble your device, follow these instructions in reverse order.