




Dell Inspiron 11 3169 Display Assembly Replacement

Written By: Terrence15

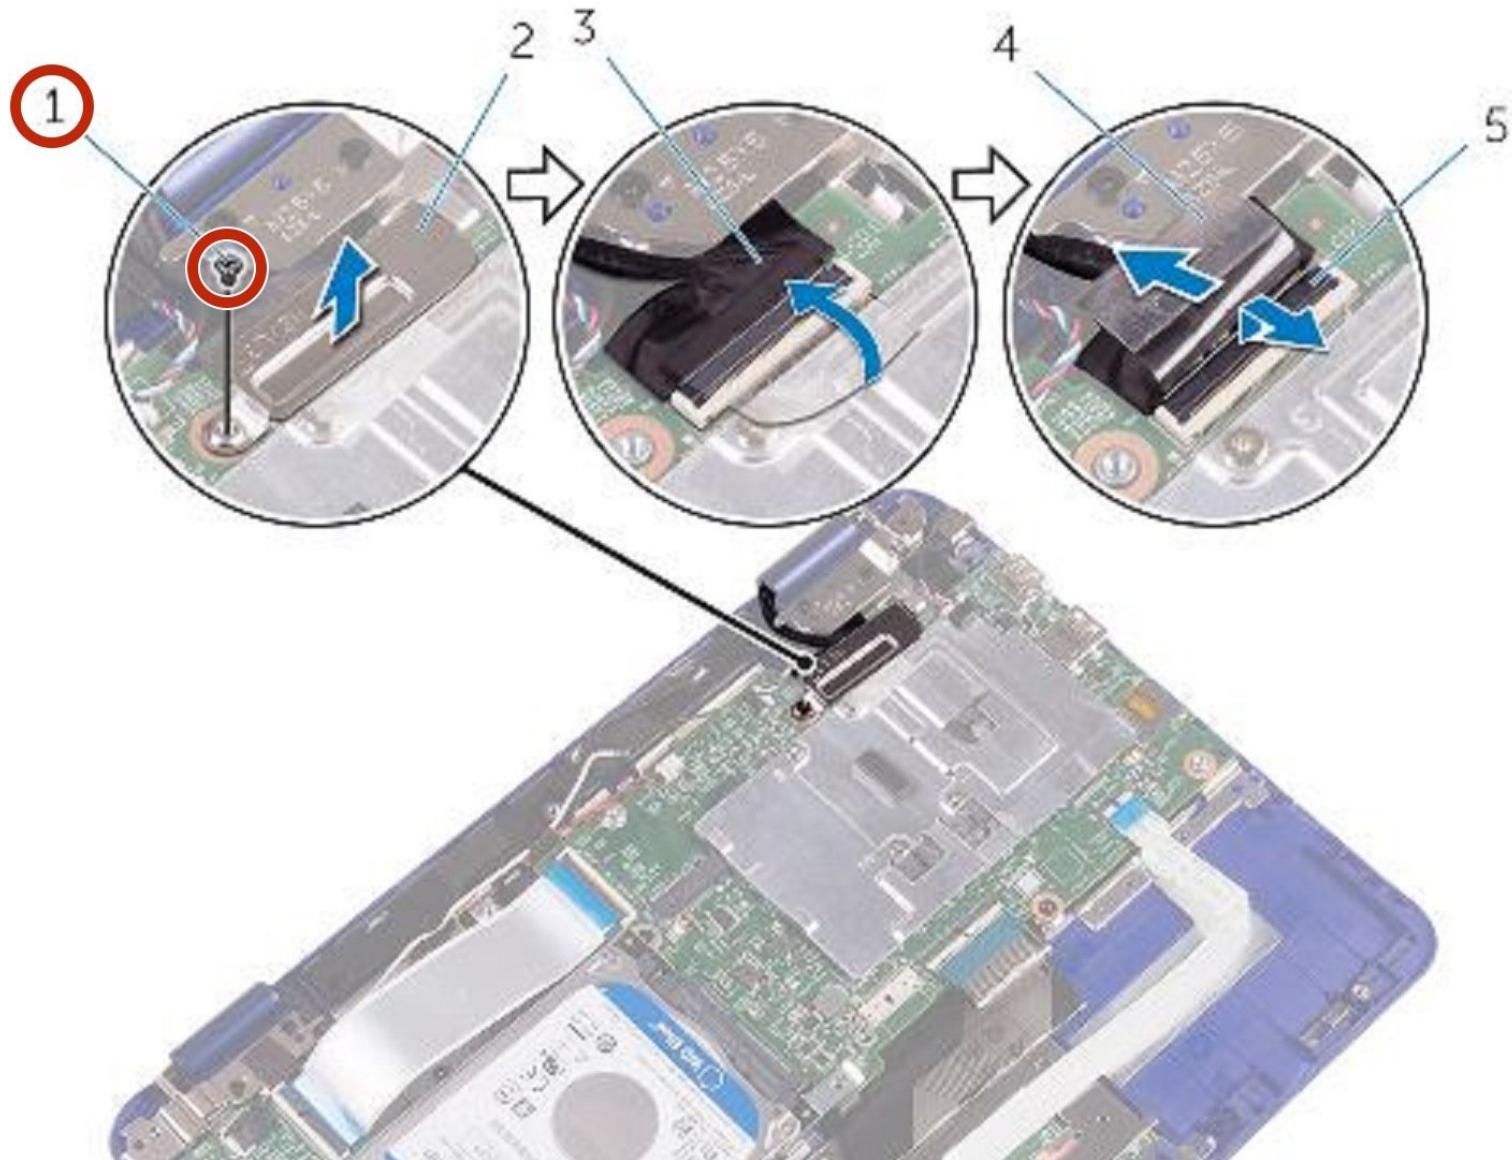


INTRODUCTION

In this guide, we will show you how to remove and replace the Display Assembly.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)


Step 1 — Remove the Screw

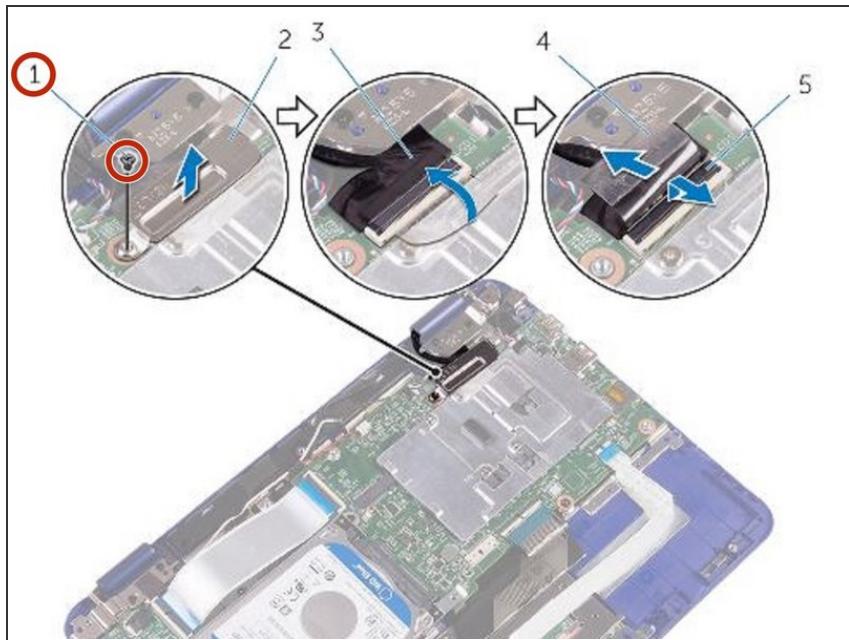

⚠ **WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#).


- Remove the screw that secures the display-cable bracket to the system board.

Step 2 — Lifting the Display-Cable

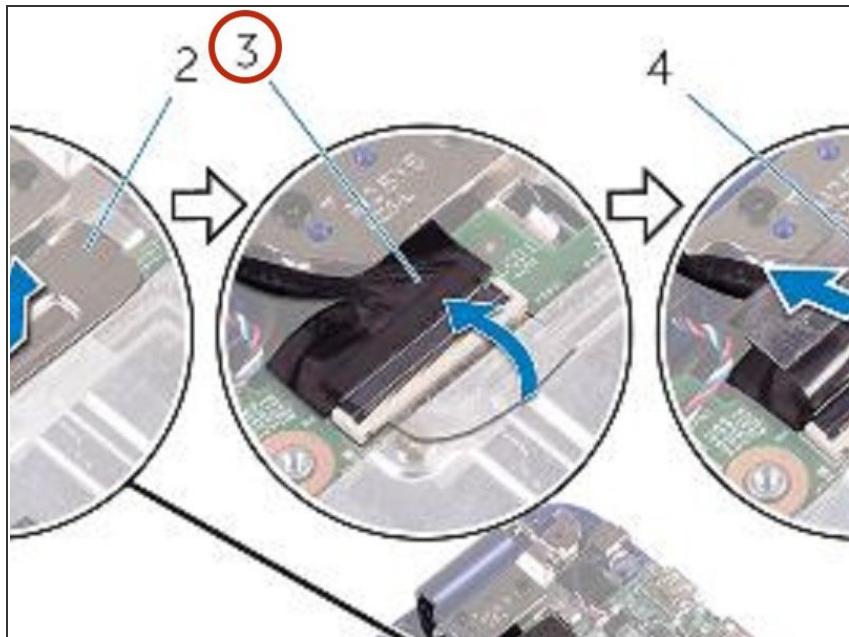


- Lift the display-cable bracket off the system board.

Step 3 — Peeling off the Tape

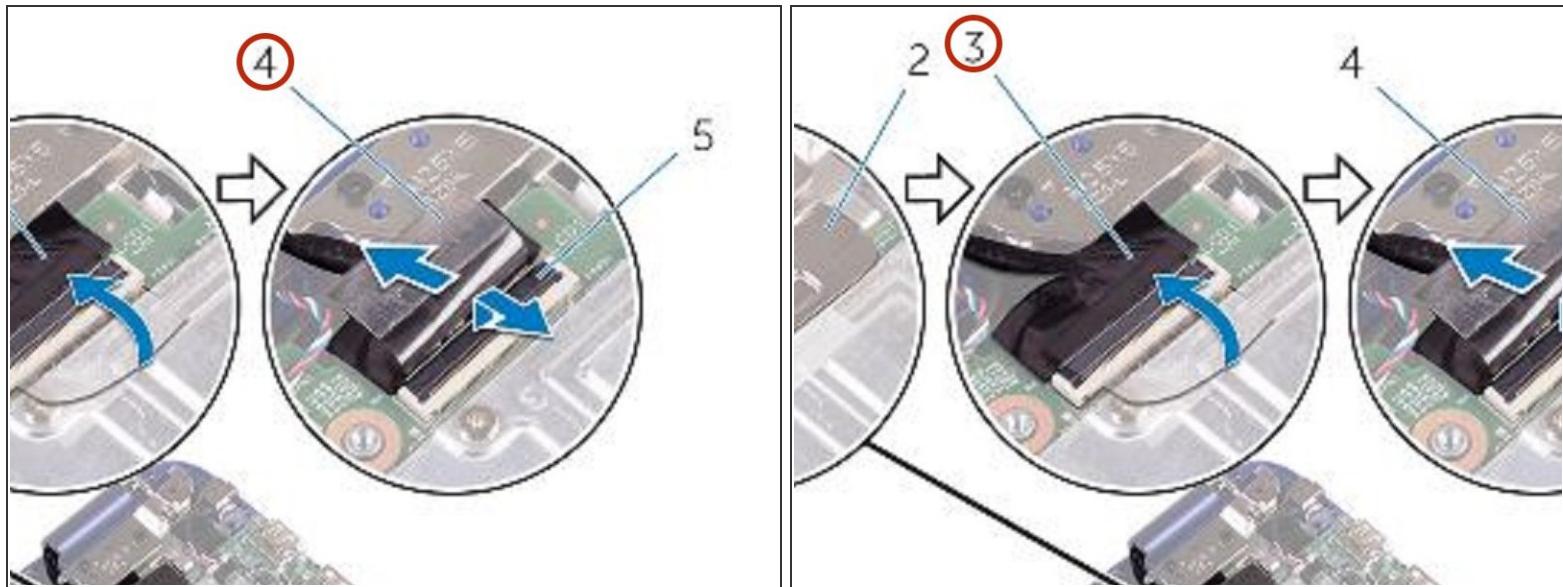


- Peel off the tape to access the display cable.

Step 4 — Open the Latch

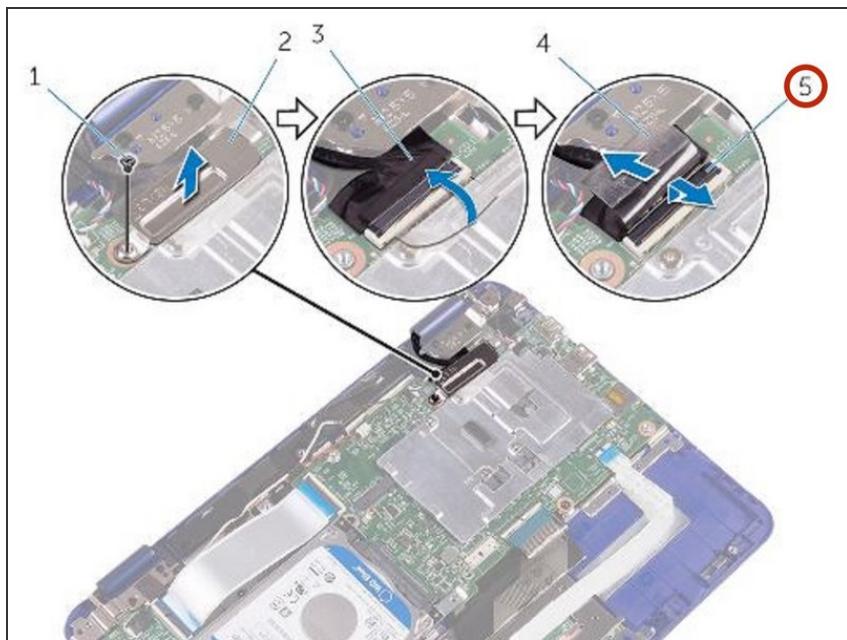


- Open the latch and disconnect the display cable.

Step 5 — Open the Latch

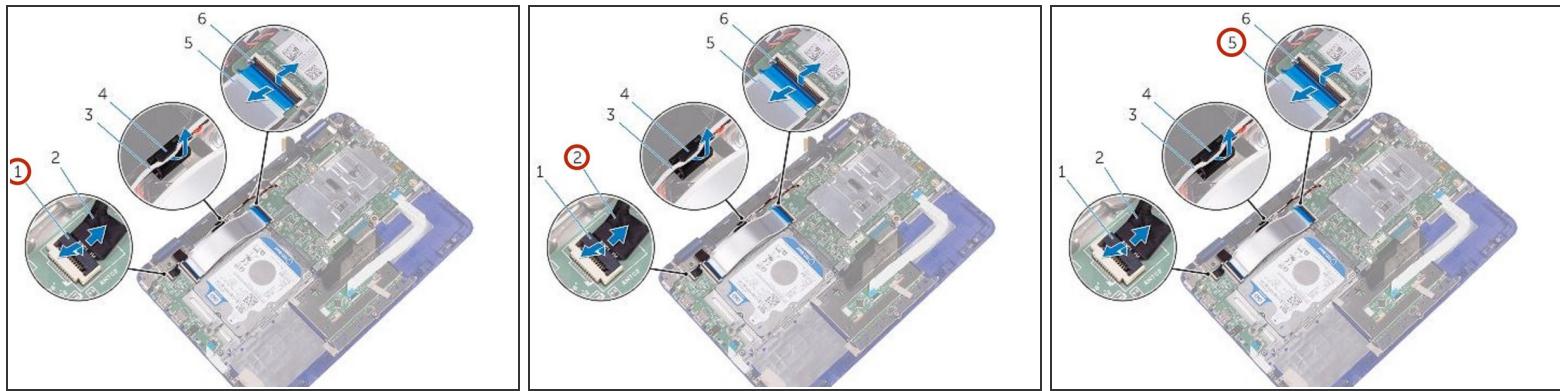


- Open the latch and disconnect the sensor-board cable from the I/O board.

Step 6 — Peeling the Tapes

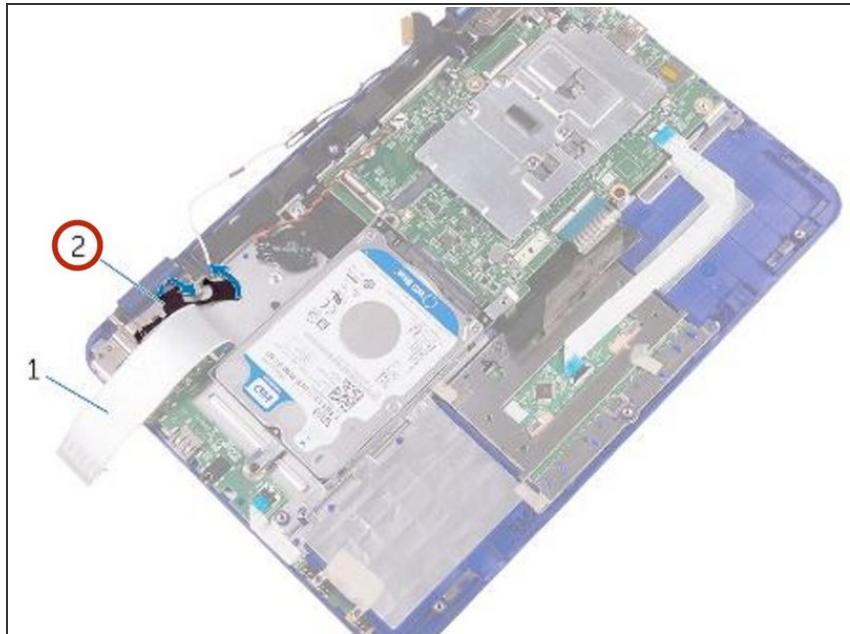

- Peel the tapes off the display hinges.


Step 7 — Opening the Display

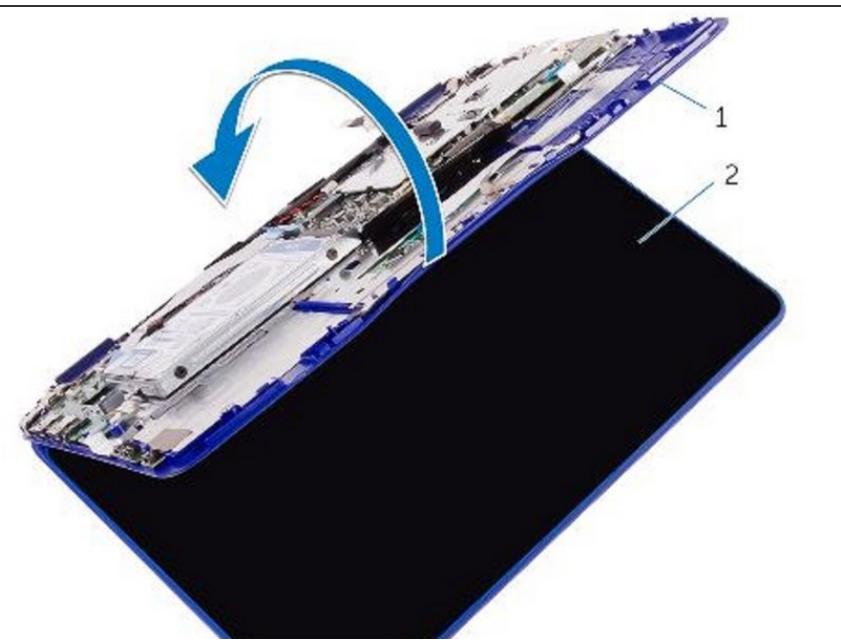

- Turn the computer over and open the display as far as possible.


⚠ CAUTION: Place the computer on a soft and clean surface to avoid scratching the display.

Step 8 — Remove the Screws

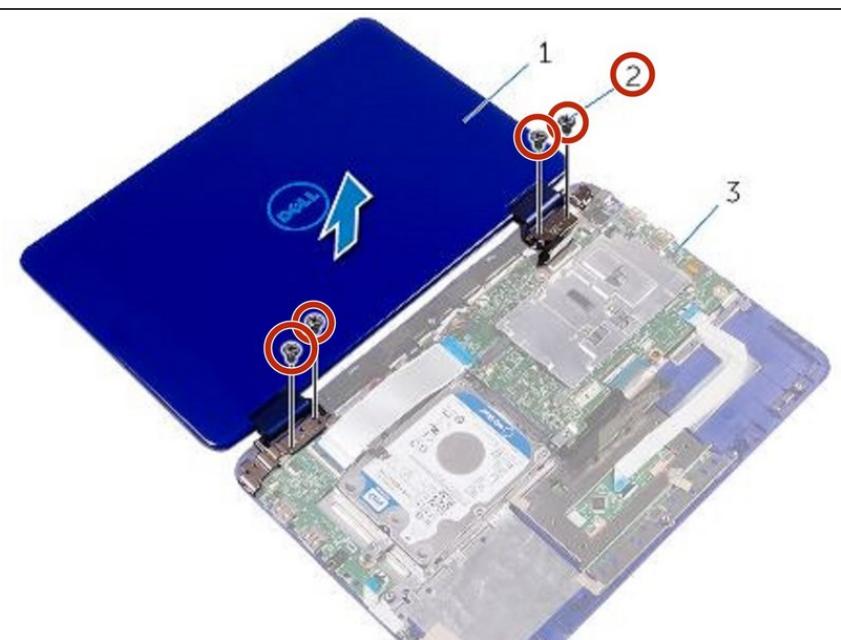


- Place the computer face down on a flat surface.
- Remove the screws that secure the display assembly to the palm-rest and keyboard assembly.

Step 9 — Lifting the Display Assembly

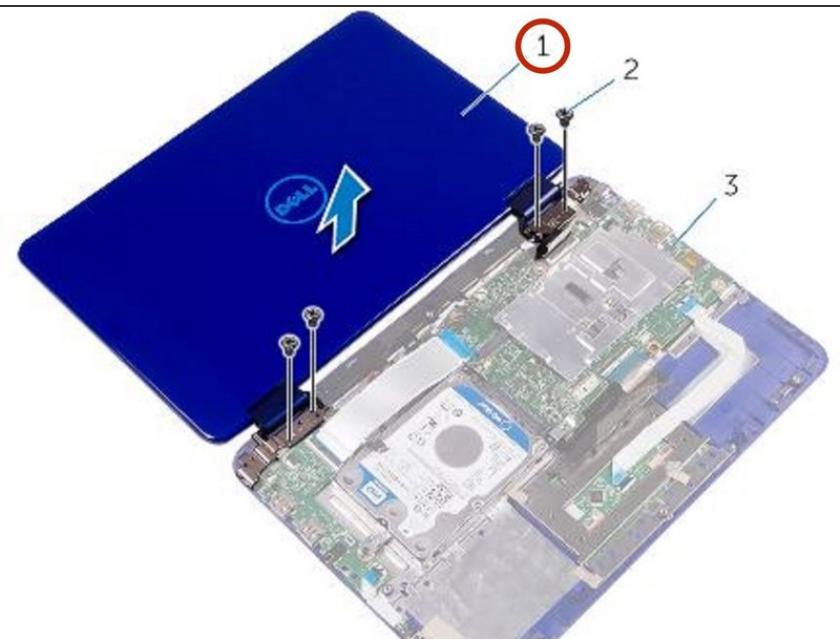

- Lift the display assembly off the palm-rest and keyboard assembly.


Step 10 — Placing the Display Assembly

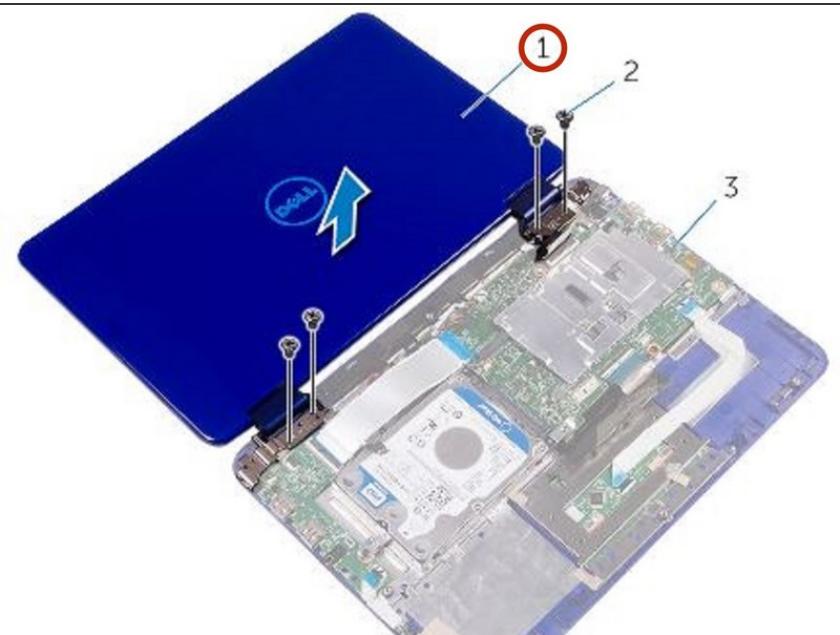

! CAUTION: Place the computer on a soft and clean surface to avoid scratching the display.


- Place the display assembly on the palm-rest and keyboard assembly.

Step 11 — Align the Screw Holes

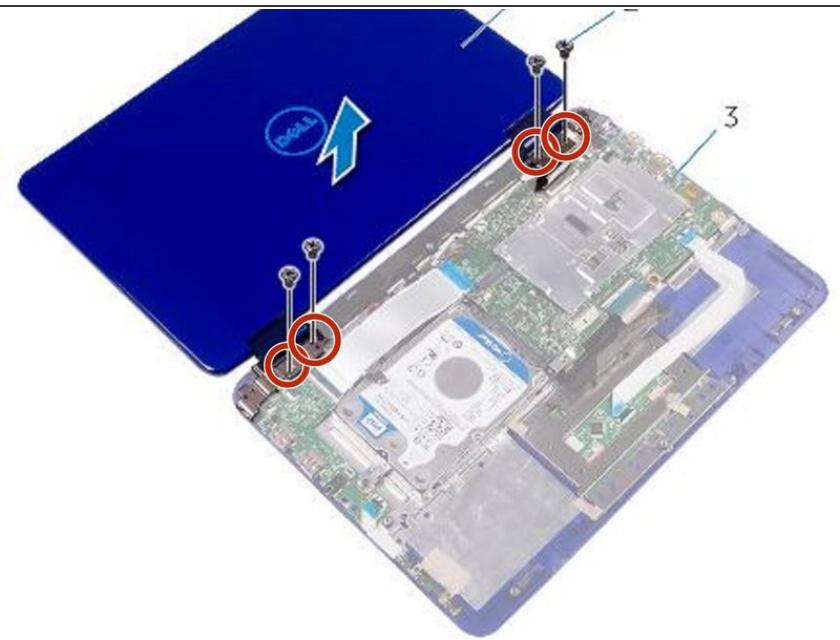


- Align the screw holes on the display hinges with the screw holes on the palm-rest and keyboard assembly.

Step 12 — Replace the Screws

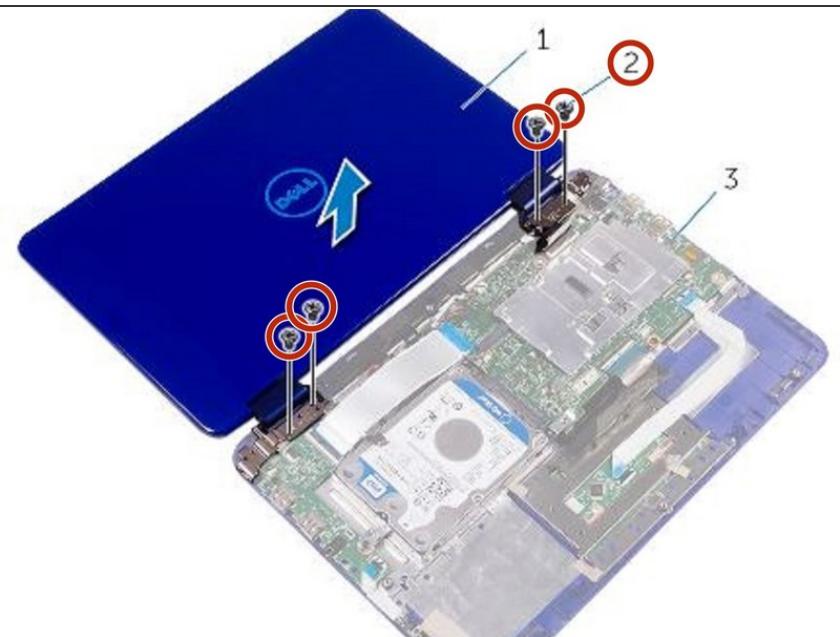


- Replace the screws that secure the display assembly to the palm-rest and keyboard assembly.

Step 13 — Sliding the I/O Board Cable

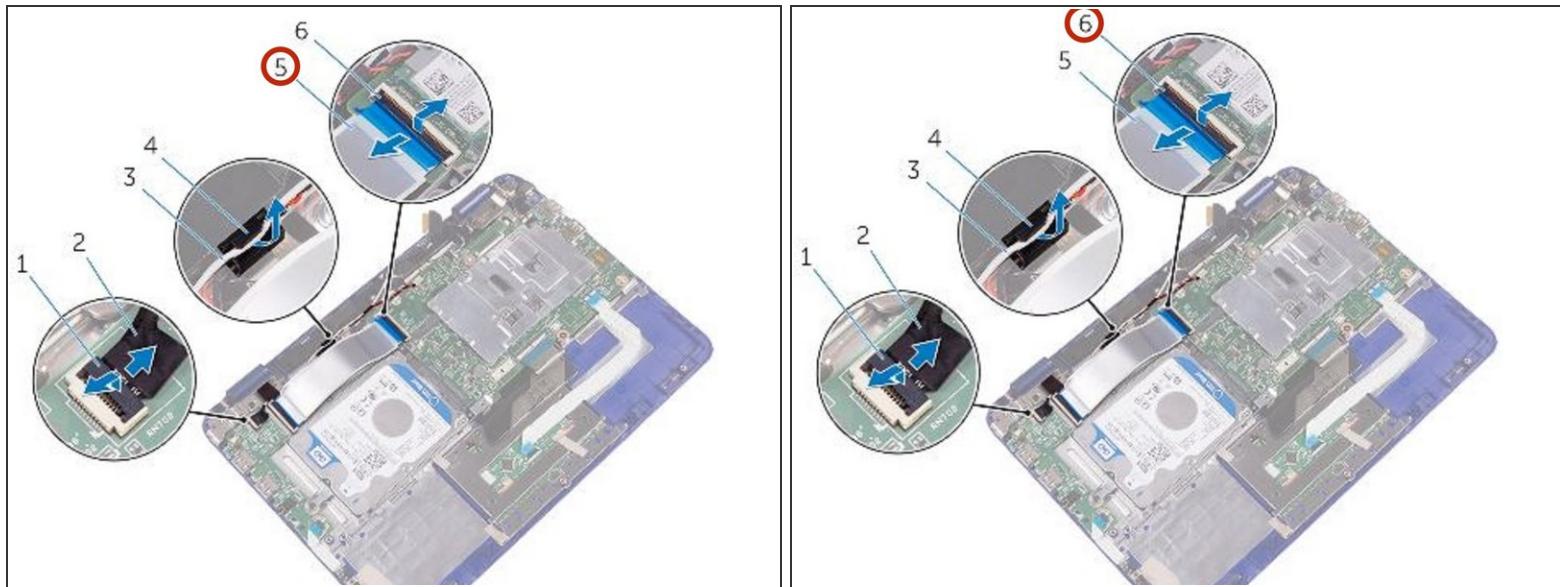


- Turn the computer over and close the display.
- Slide the I/O-board cable into its slot on the system board and press down the latch to secure the cable.

Step 14 — Routing the Antenna Cable

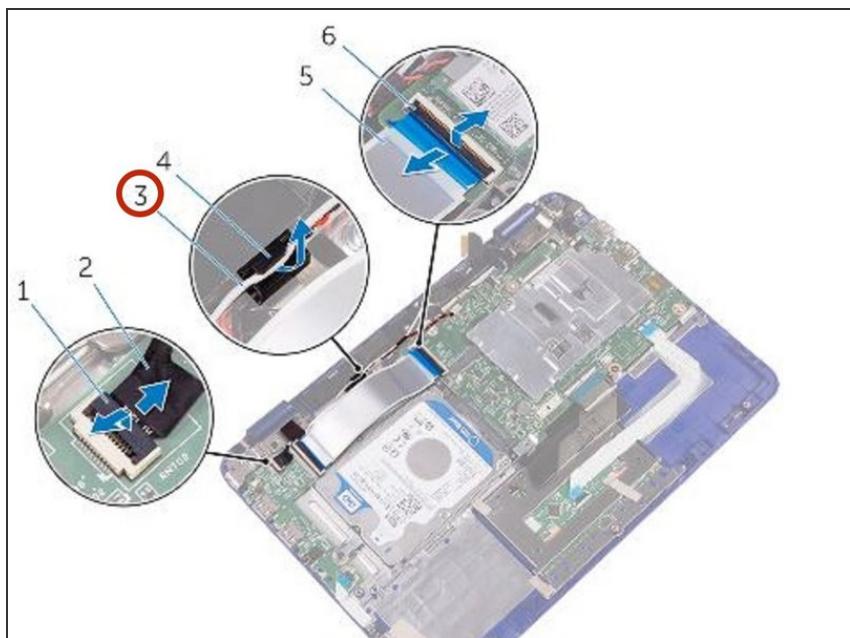


- Route the antenna cable through its routing on the right speaker.

Step 15 — Sliding the Sensor-Board Cable

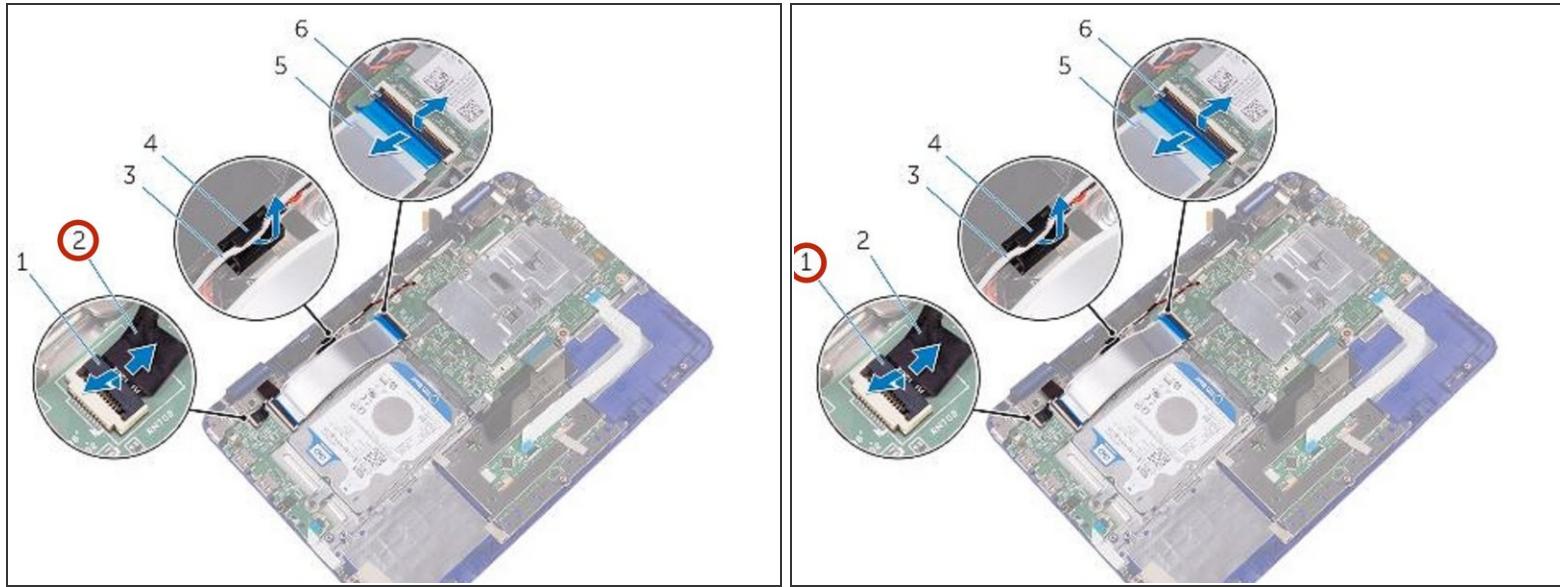


- Slide the sensor-board cable into its slot on the I/O board and press down the latch to secure the cable.

Step 16 — Sliding the Display Cable

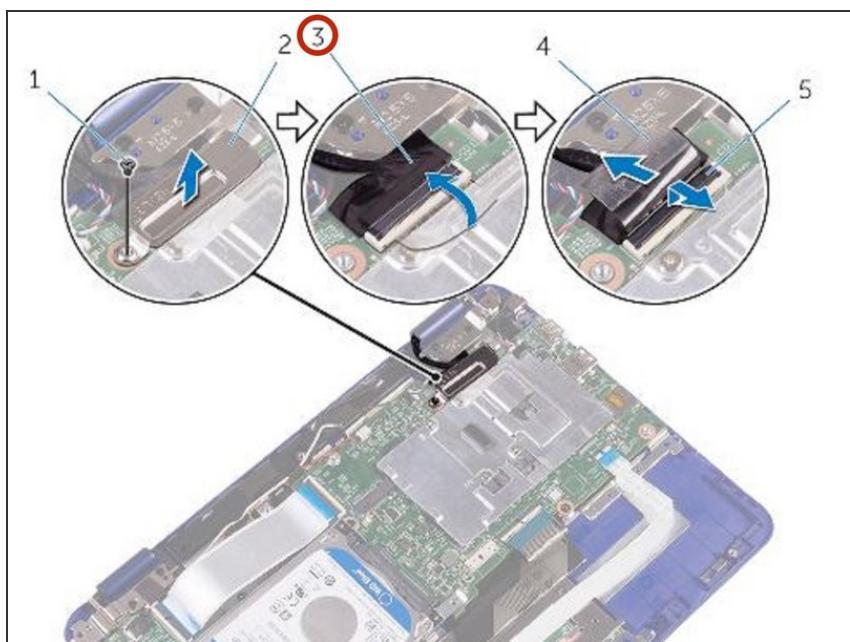

- Slide the display cable into its slot on the system board and press down the latch to secure the cable.

Step 17 — Adhering the Tape

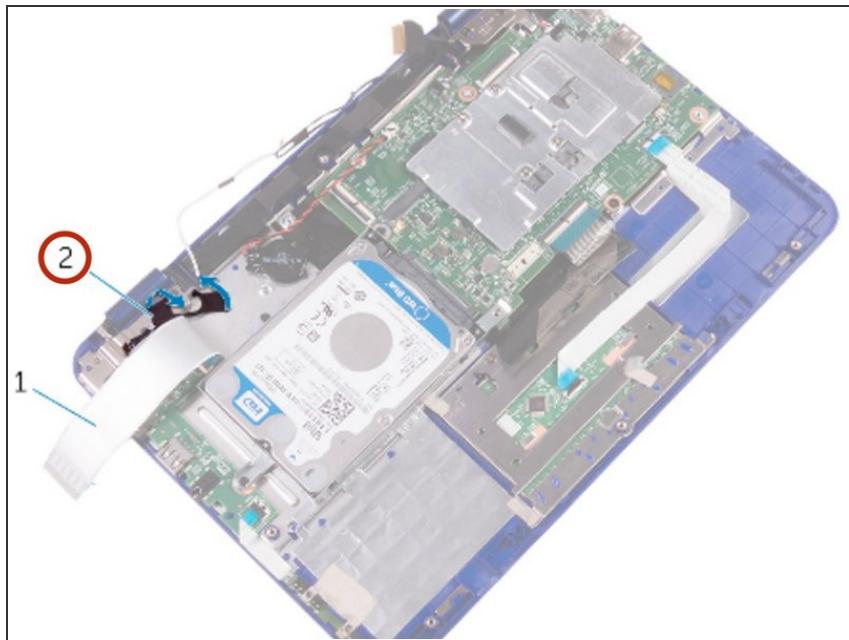

- Adhere the tape on the display cable.

To reassemble your device, follow these instructions in reverse order.