



Dell Inspiron 11-3147 Hinge Replacement

This guide will help to replace the hinges holding the screen to the keyboard.

Written By: Alec Wilson

INTRODUCTION

The Dell Inspiron laptop is a 2-in-1 laptop with special hinges to allow a full rotation of the screen to transform it from a laptop to a tablet. If dropped or otherwise damaged, these hinges can fail and render the laptop useless. This guide will walk you through the step by step process of removing the old hinges and replacing them with a replacement set.



PARTS:

- [Dell Inspiron 11-3147 Hinges \(1\)](#)

Step 1 — Turn off Laptop



- Insert wisdom here.

Step 2 — Remove Back Panel



- Insert wisdom here.

Step 3 — Remove Battery



- Insert wisdom here.

Step 4 — Disconnect Screen Ribbon



- Insert wisdom here.

To reassemble your device, follow these instructions in reverse order.