




Dell Inspiron 11-3162 Battery Replacement

This guide will help you replace the battery of the Dell Inspiron 11-3162.

Written By: Dominic DeLong

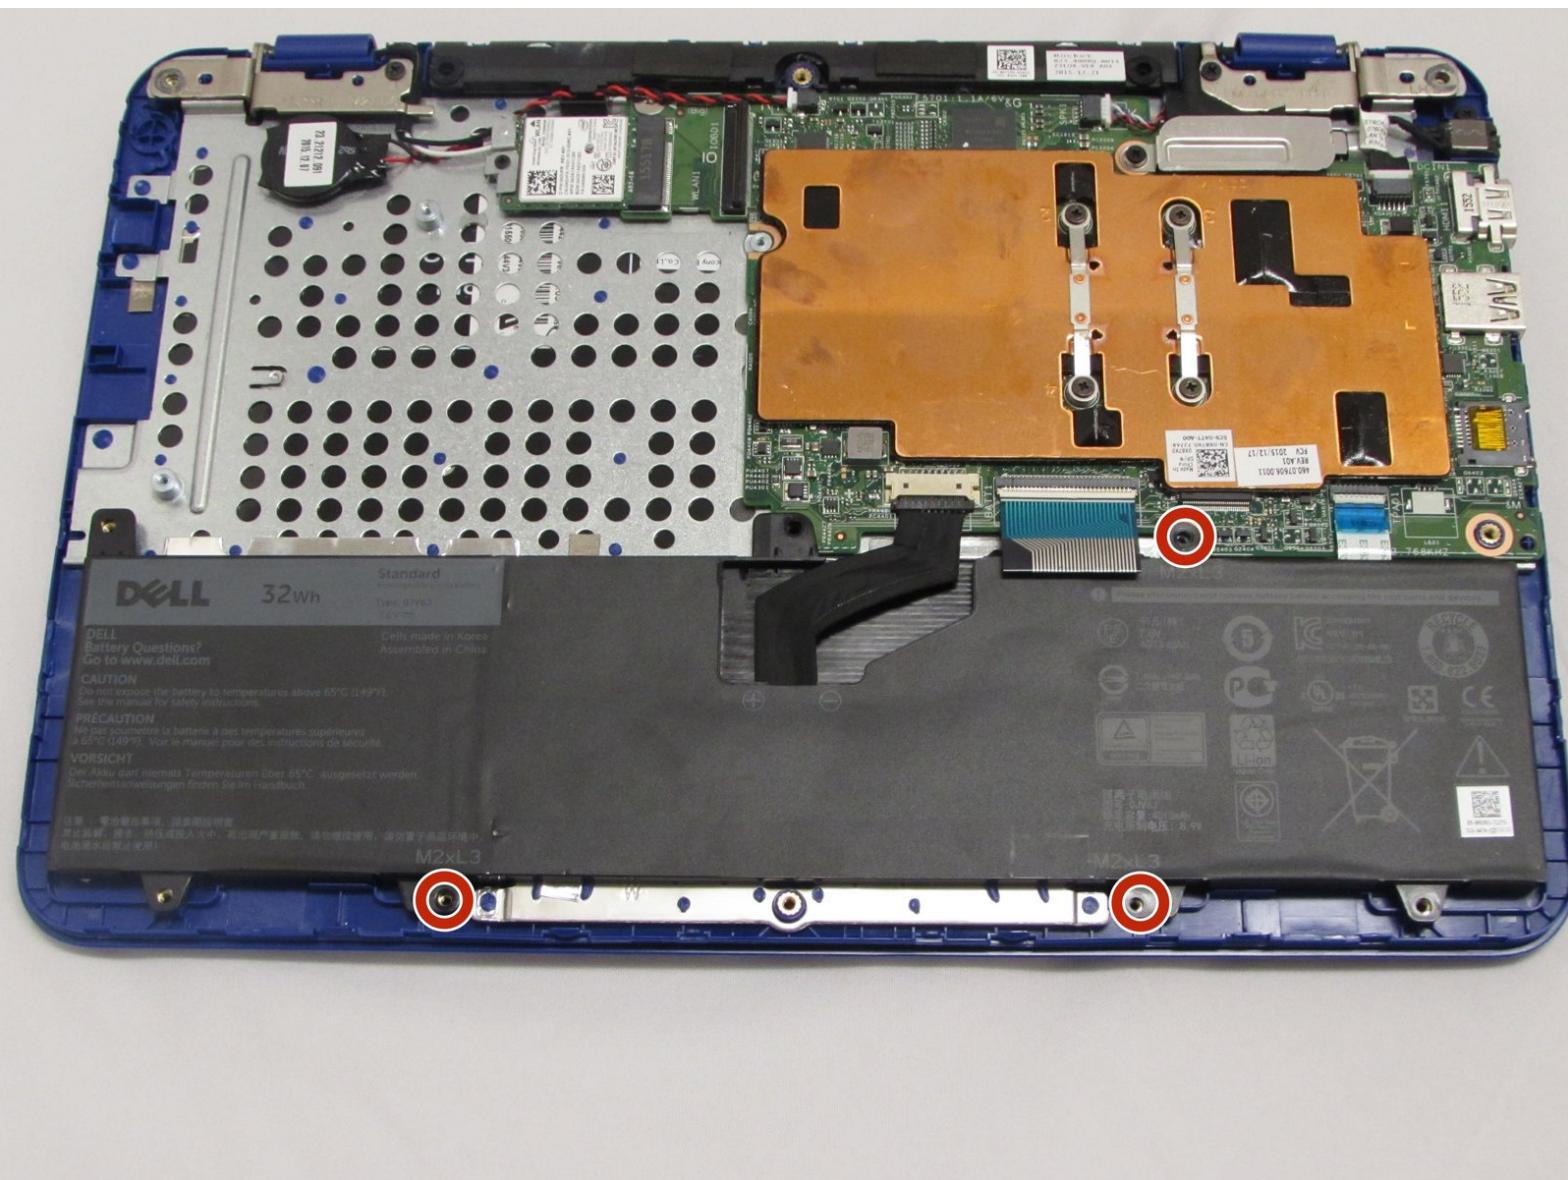


INTRODUCTION

You'll find that this will help improve your battery life to factory new! Always be careful when working with a battery.

TOOLS:

- [64 Bit Driver Kit \(1\)](#)
- [Tweezers \(1\)](#)
- [phillips Screwdriver PH00 \(1\)](#)
- [Heavy-Duty Spudger \(1\)](#)

Step 1 — Back Cover Removal

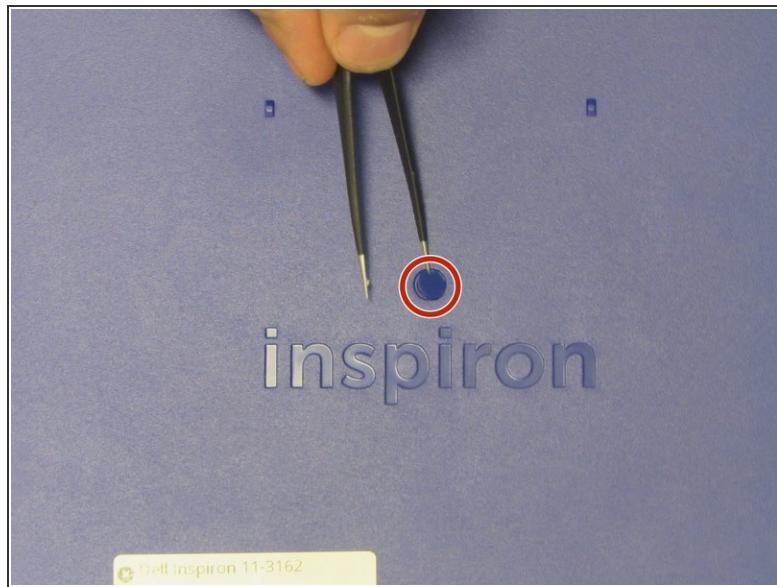

- Remove the screw cover by using tweezers.

Step 2






- Using the phillips screw head (PH00), unscrew the 9 6.8mm philip screws.

Step 3




- Use the regular black nylon spudger tool to pry around the base edges of the back cover and remove it.

Step 4

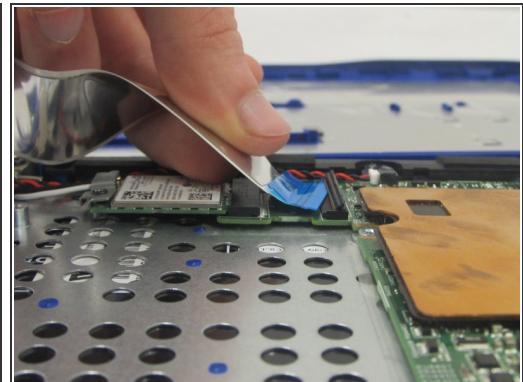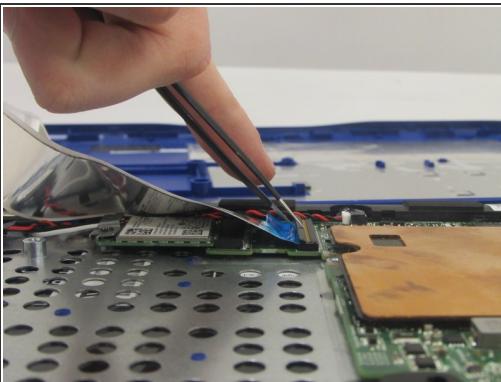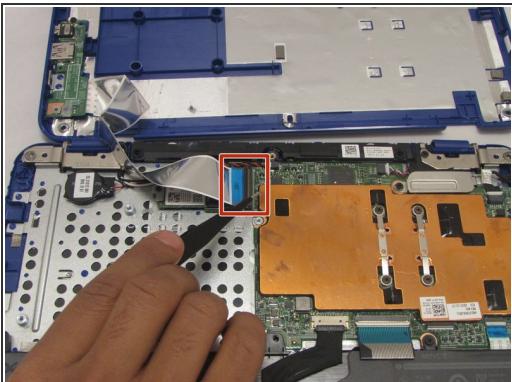


- Gently pull upwards on the latch with tweezers
- When you've flipped the latch open, pull the ribbon cable outwards to disconnect the back cover from the motherboard.

Step 5 — Battery

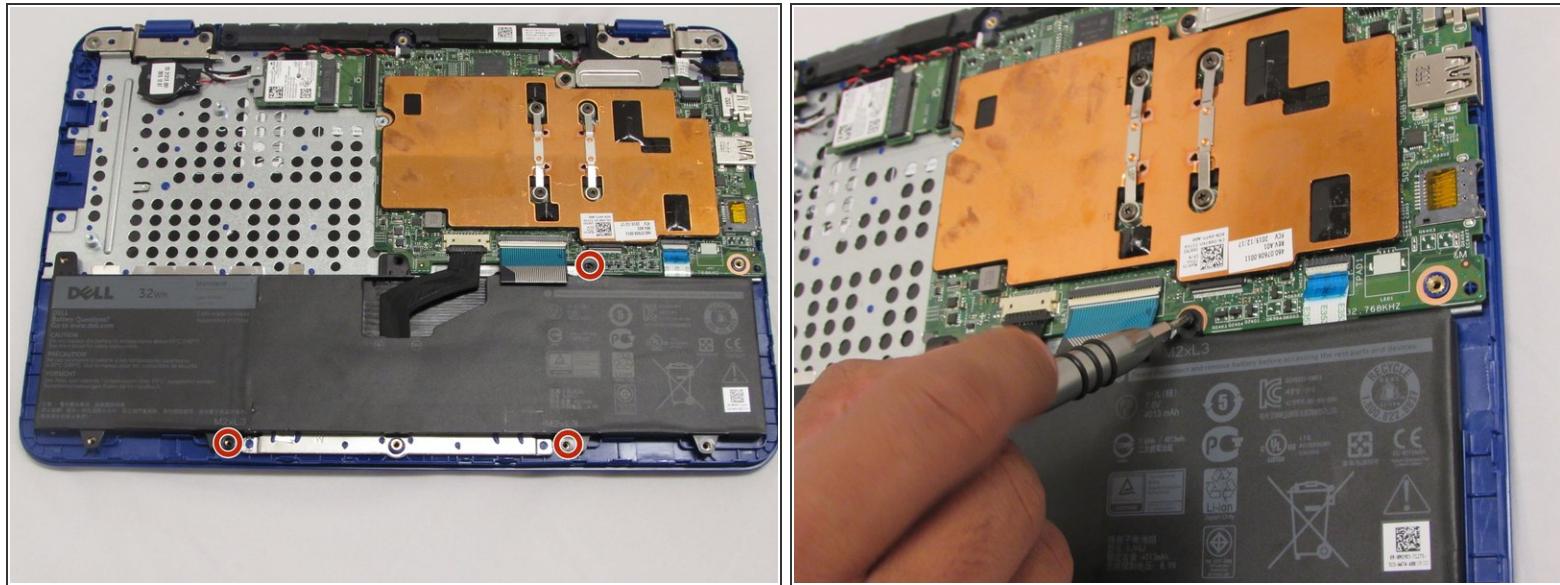

- Using the phillips head (PH0) screwdriver, unscrew the 3 4mm screws.

Step 6

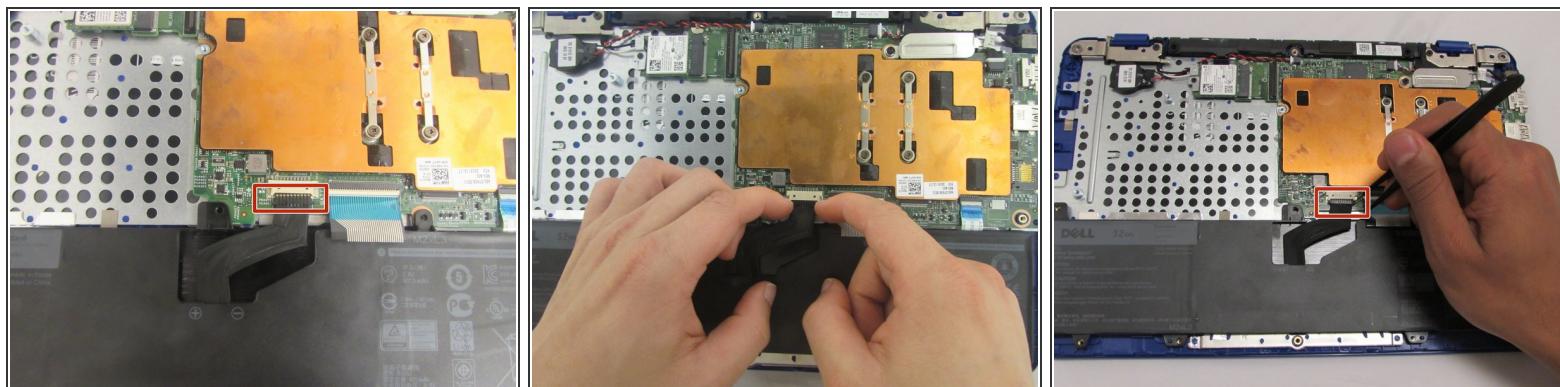

- Use your fingers (or a set of tweezers) to remove the battery cable, pulling gently from the sides of the connector.

To reassemble your device, follow these instructions in reverse order.