



Dell Inspiron 11-3168 Battery Replacement

How to replace the battery for Dell Inspiron 11-3168 laptop.

Written By: Tyson Pace



This document was generated on 2020-04-04 05:13:02 PM (MST).

INTRODUCTION

This guide will show you how to replace the battery of the Dell Inspiron 11-3168. Before starting, make sure both the laptop AC adapter and battery are disconnected prior to replacing any part or component.


TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

PARTS:

- [Dell Inspiron 11-3168 Battery](#) (1)

Step 1 — Battery

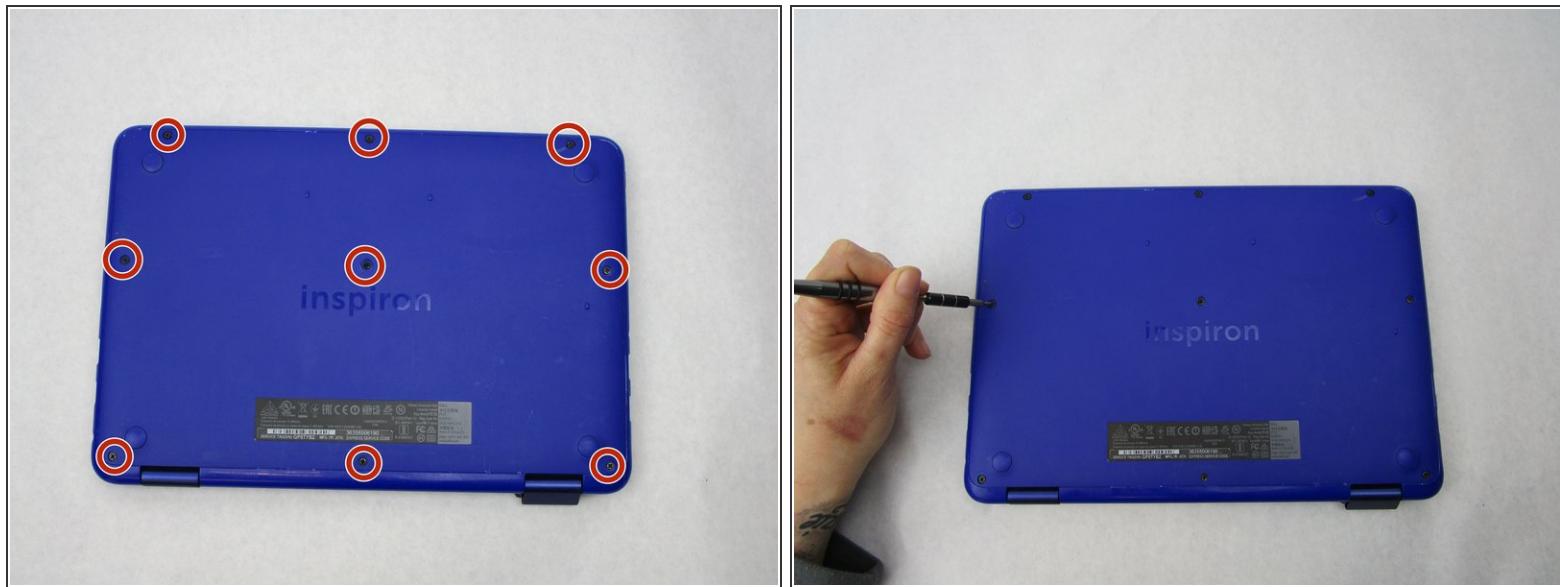


- Using a Phillips #00 screwdriver, remove all nine 7.5mm screws from the bottom case of the laptop.

Step 2




- Remove the bottom case of the laptop by gently prying along the seam with a plastic opening tool.

Step 3

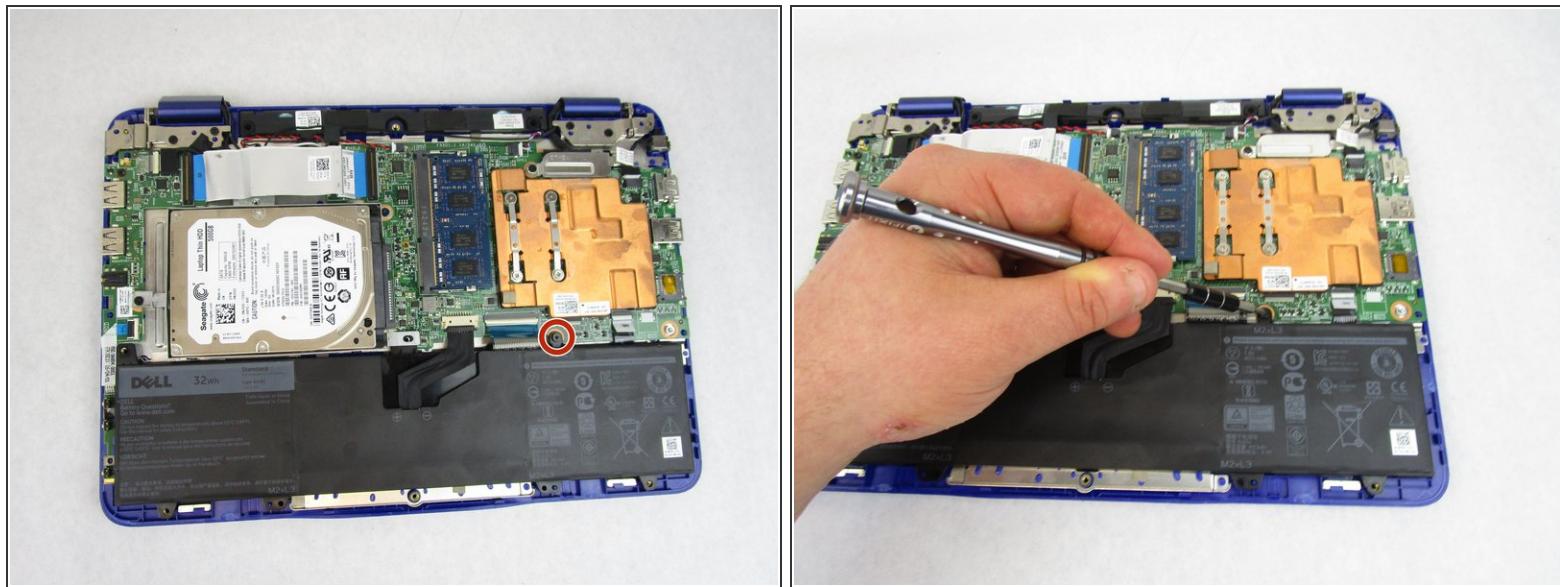

- Remove the one 7.5mm screw that is holding the battery in place.

Step 4

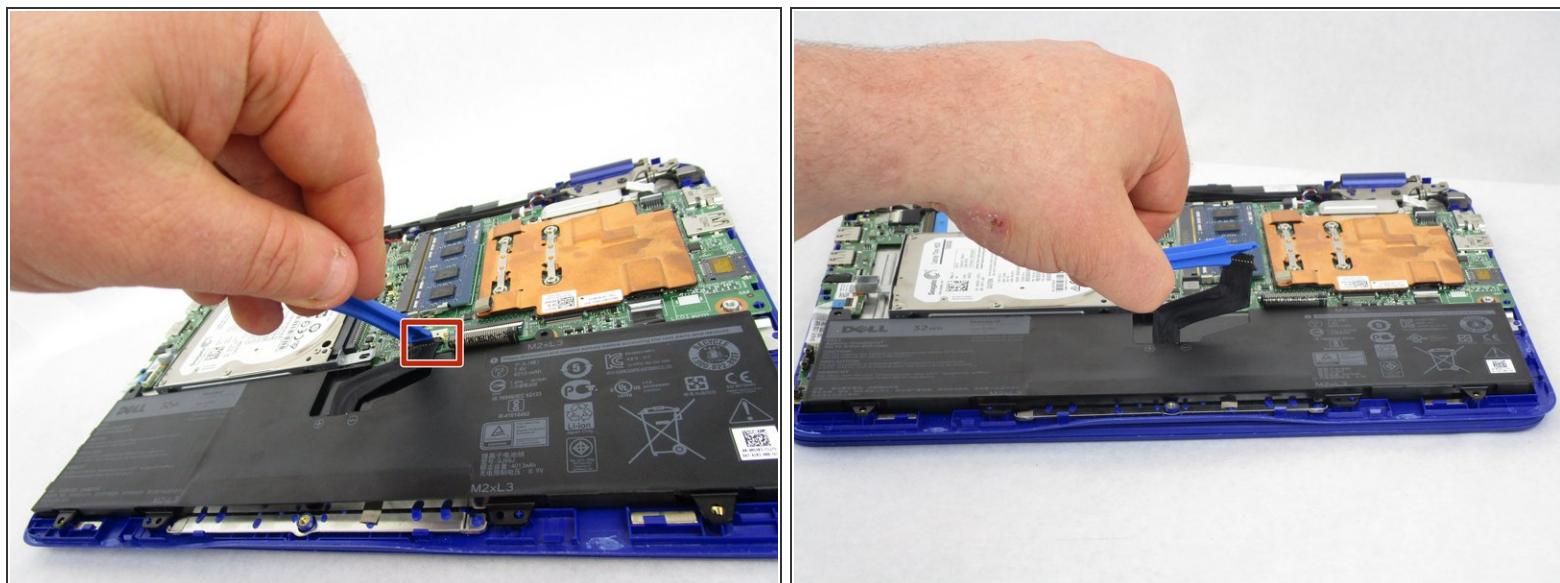

- Use the plastic opening tool to disconnect the battery cable.

Step 5



- Remove the battery.

To reassemble your device, follow these instructions in reverse order.