



# Dell Inspiron 11-3168 Hard Drive Replacement

How to replace the hard drive of the Dell Inspiron 11-3168.

Written By: Tyson Pace



## INTRODUCTION


This guide will show you how to replace the hard drive of the Dell Inspiron 11-3168. Before starting, make sure both the laptop AC adapter and battery are disconnected prior to replacing any part or component.

Note: This guide does not apply to Celeron eMMC systems. These have the storage space soldered to the board and require a motherboard replacement.

### **TOOLS:**

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Battery

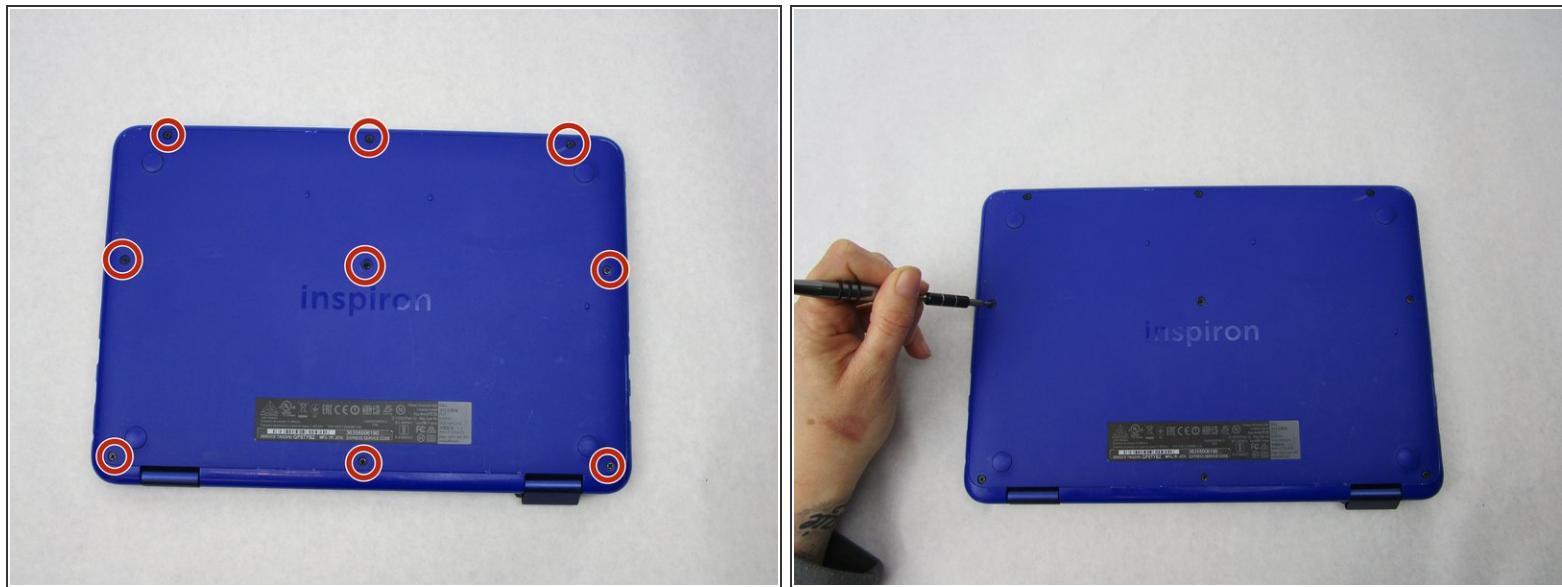


- Using a Phillips #00 screwdriver, remove all nine 7.5mm screws from the bottom case of the laptop.

## Step 2




- Remove the bottom case of the laptop by gently prying along the seam with a plastic opening tool.

## Step 3

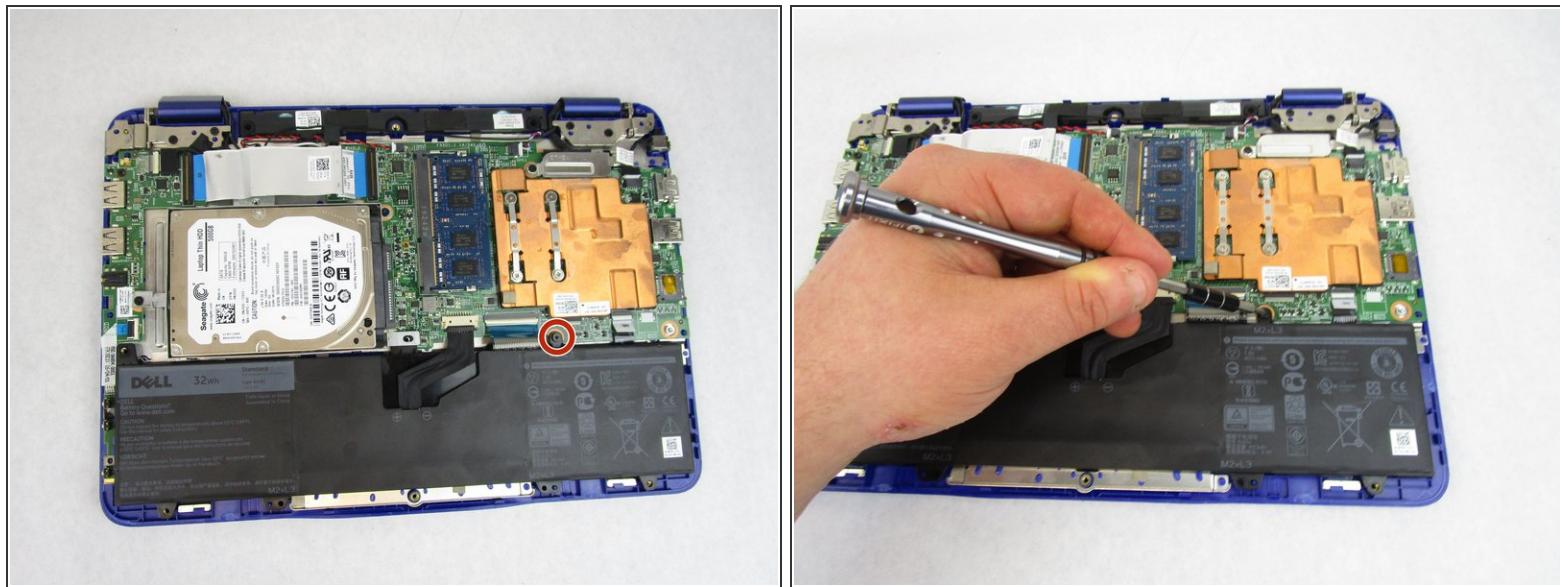

- Remove the one 7.5mm screw that is holding the battery in place.

## Step 4

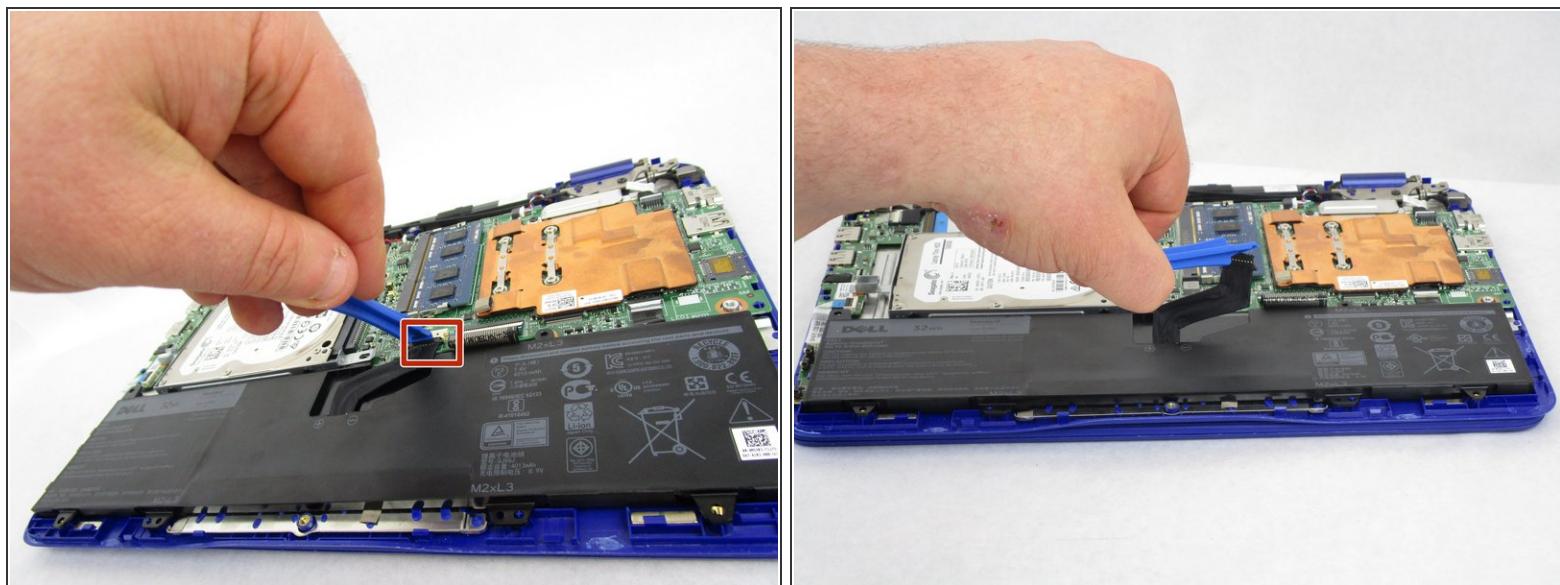


- Use the plastic opening tool to disconnect the battery cable.

## Step 5



- Remove the battery.

## Step 6 — Hard Drive

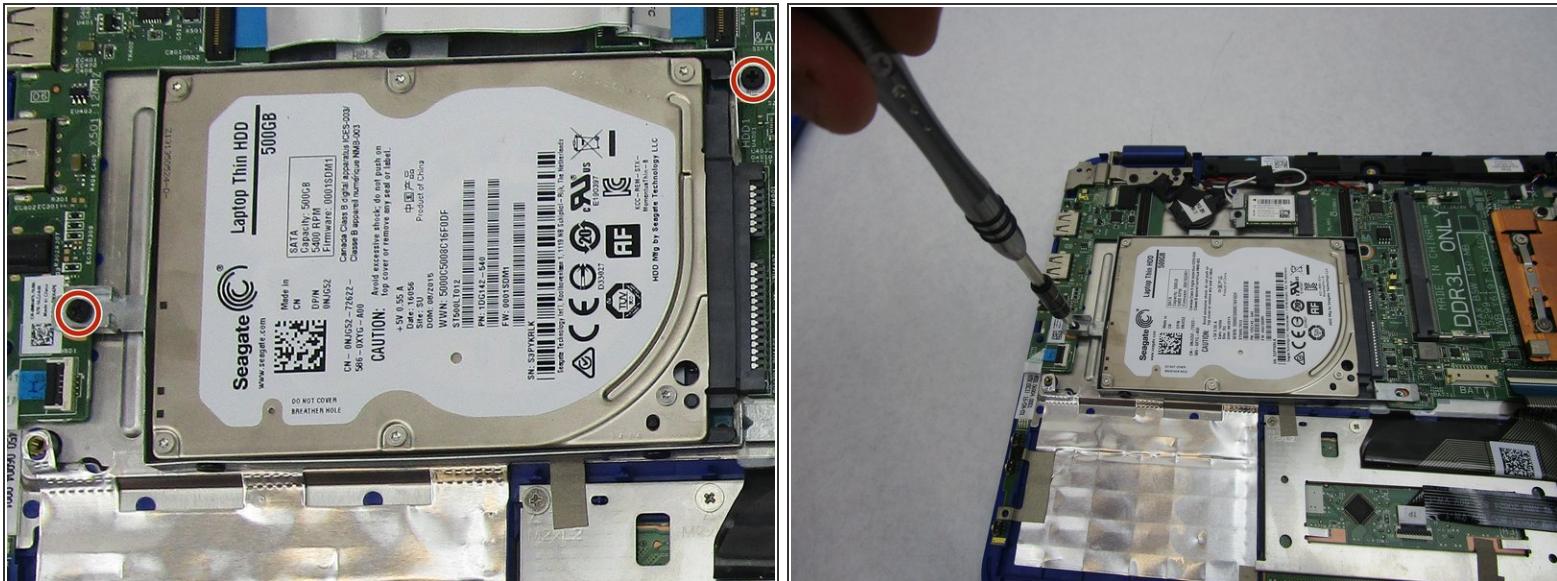

- Unscrew the two 7.5 mm Phillips #00 screws.

## Step 7



- Lift the hard drive out of the laptop.

To reassemble your device, follow these instructions in reverse order.