




Dell Inspiron 11-3168 Memory modules Replacement

How to change out the memory module on a Dell Inspiron 11 3168

Written By: Matthew Roomsburg

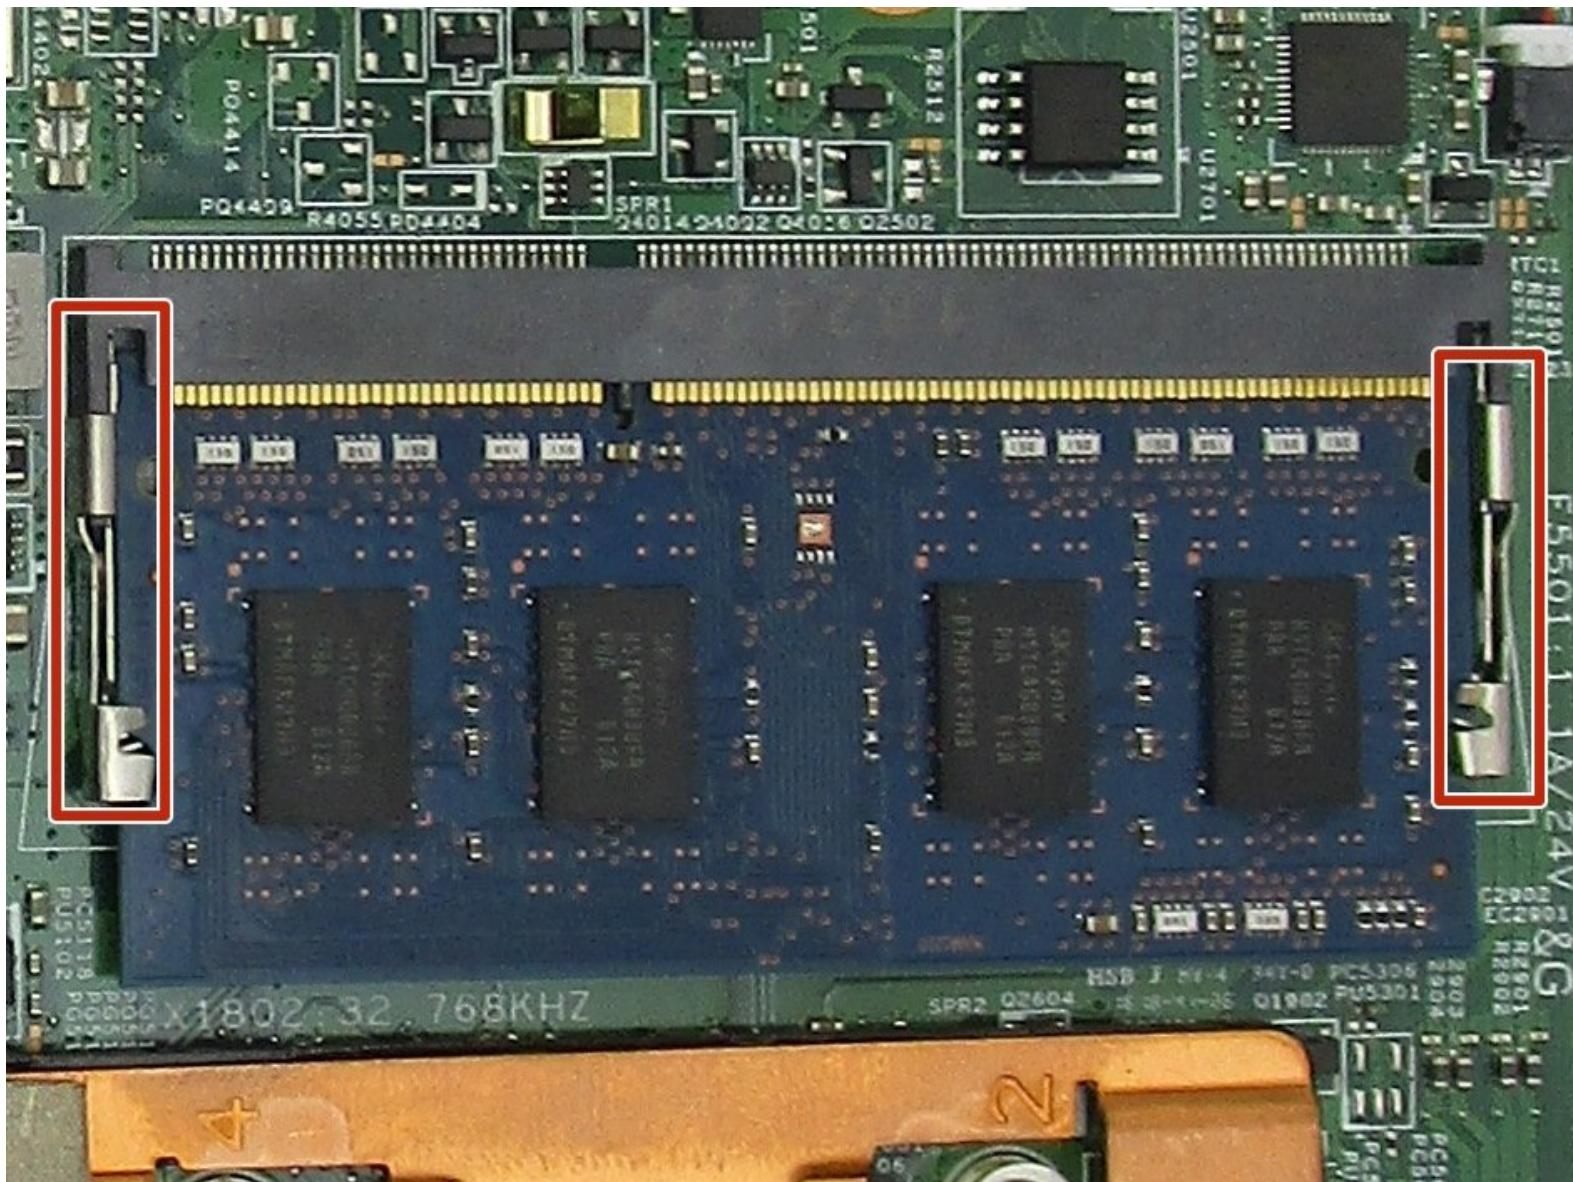

INTRODUCTION


This guide will show you how to replace the memory module of the Dell Inspiron 11-3168. Before starting, make sure both the laptop AC adapter and battery are disconnected prior to replacing any part or component.

Note: This guide does not apply to Celeron eMMC systems. These have the memory soldered to the board and require a motherboard replacement.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Battery

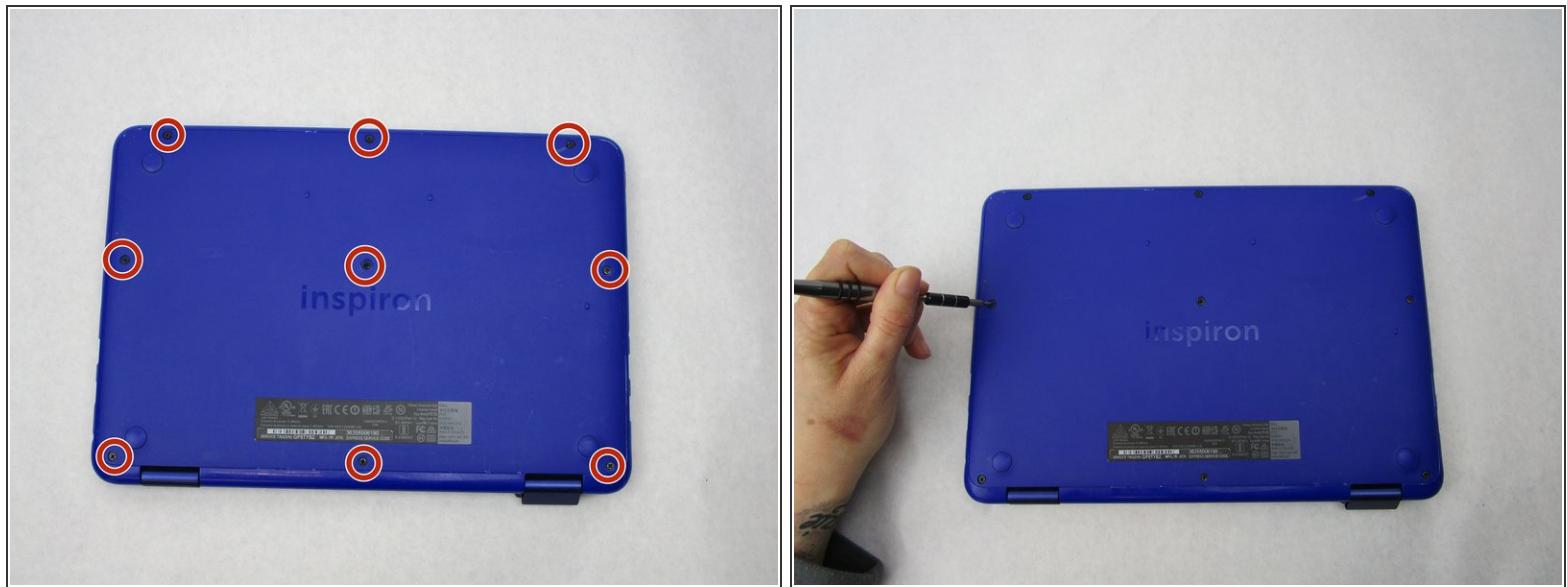


- Using a Phillips #00 screwdriver, remove all nine 7.5mm screws from the bottom case of the laptop.

Step 2




- Remove the bottom case of the laptop by gently prying along the seam with a plastic opening tool.

Step 3

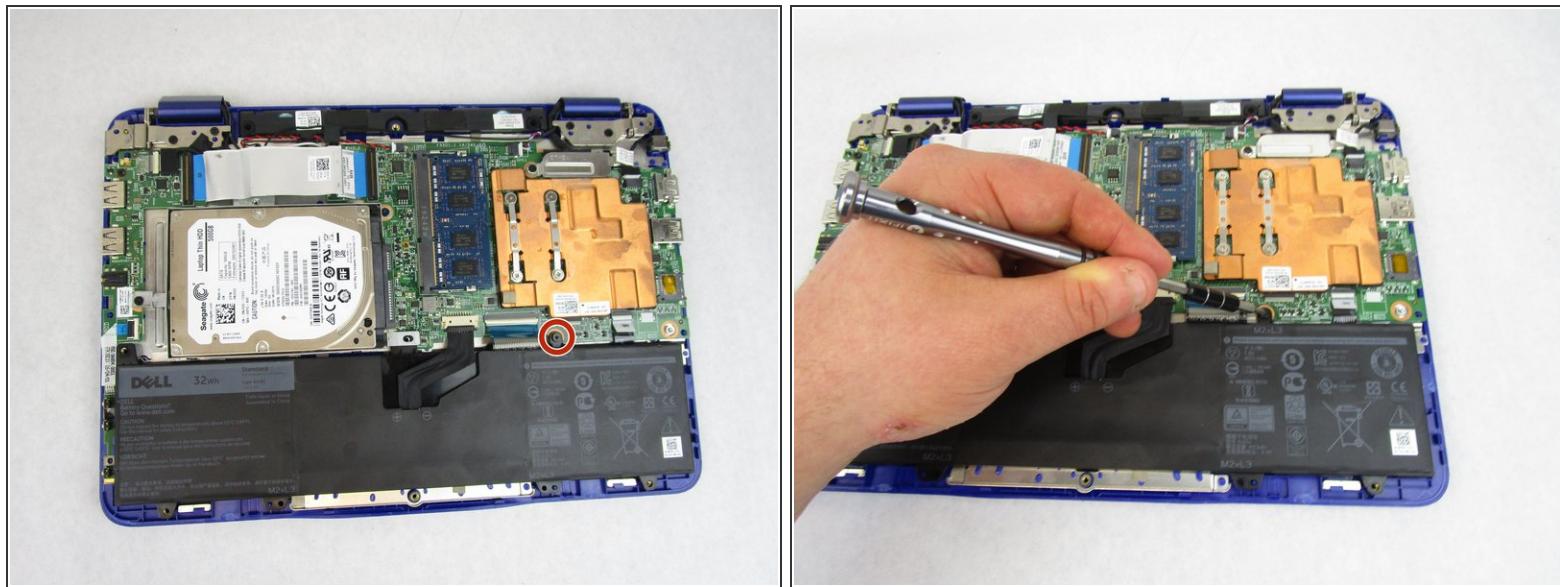

- Remove the one 7.5mm screw that is holding the battery in place.

Step 4

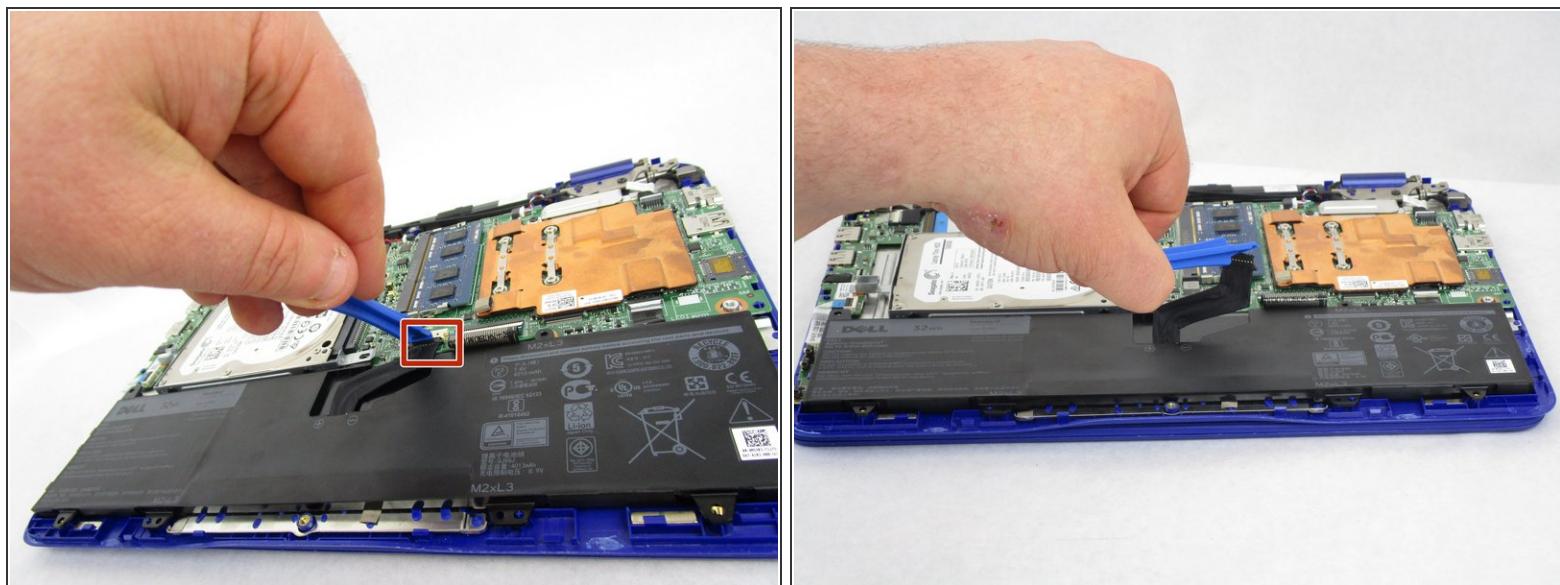

- Use the plastic opening tool to disconnect the battery cable.

Step 5



- Remove the battery.

Step 6 — Memory modules



- Press down on the two latches on either side of the memory module.
- Lift and remove the memory module.

To reassemble your device, follow these instructions in reverse order.