


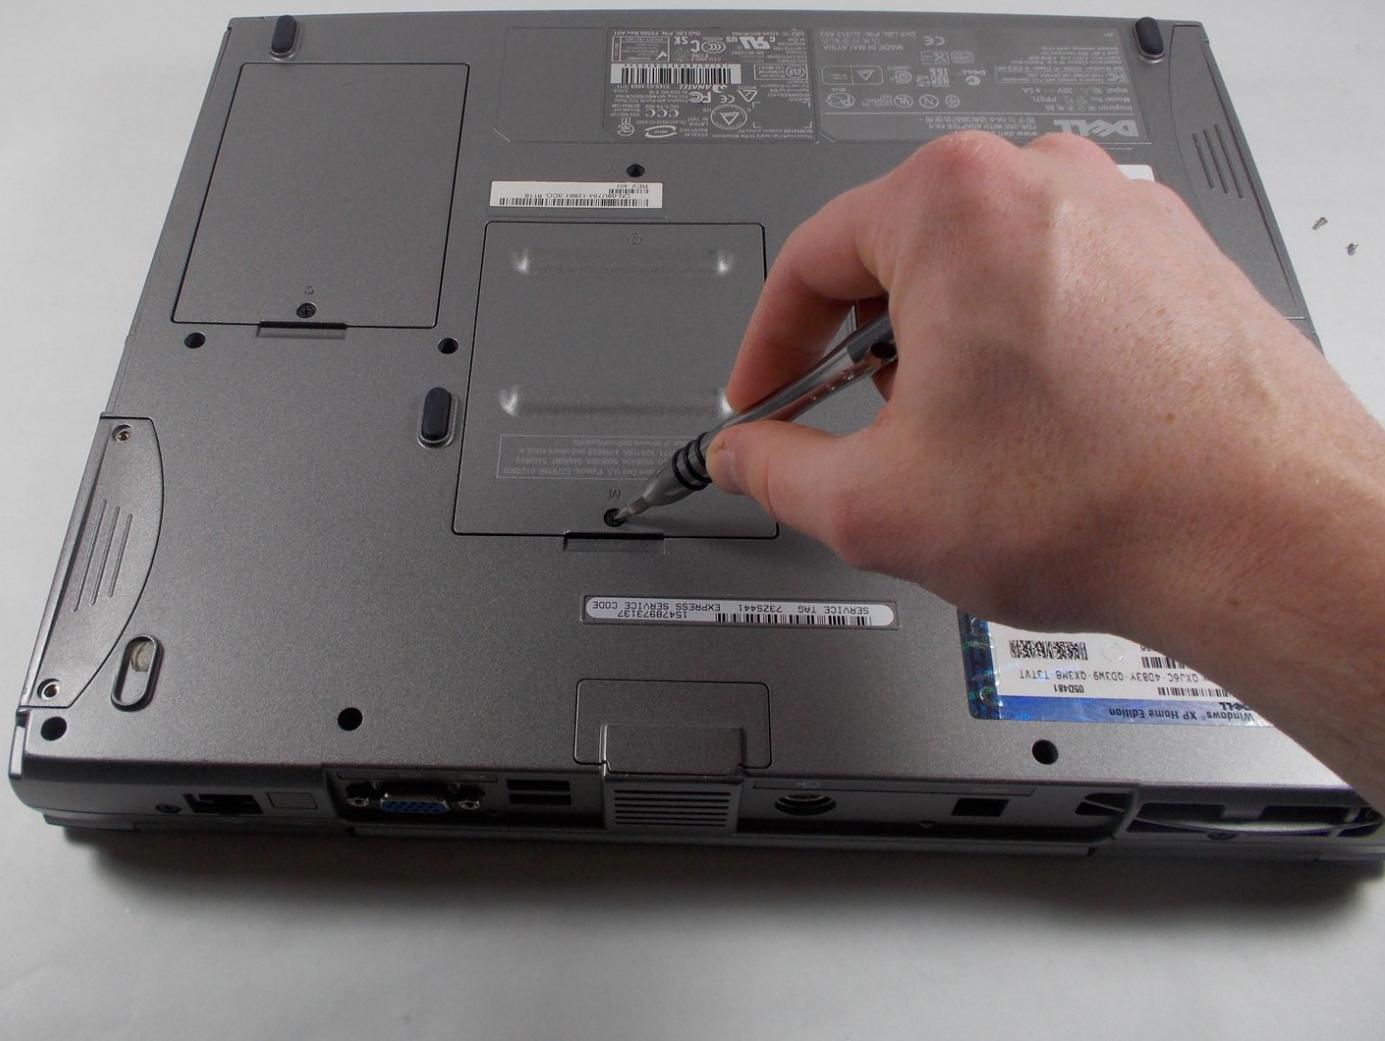

# Dell Inspiron 1100 RAM Replacement

This guide will demonstrate how to replace each of the two RAM sticks, collectively referred to as RAM, in the Dell Inspiron 1100.

Written By: Alexander Pacheco



## INTRODUCTION

RAM may need to be replaced if it is faulty or if a larger capacity is desired.

### TOOLS:

- Phillips #0 Screwdriver (1)

## Step 1 — RAM



- Remove the one Phillips #0 screw at the bottom-center of the panel covering the RAM and remove the panel.

**⚠** The screw does not separate from the cover. Be careful when using force to remove the cover as the screw may not be completely unscrewed.

## Step 2



- Use your hands to pull the two metal tabs away from the RAM.
- The RAM will rise out when clear of the metal tabs. Do not force it into the up position.

## Step 3



- Pull out the RAM.

**⚠** Be careful not to touch the metal contacts on the bottom of the RAM as this may damage it.

**(i)** Store the RAM in an anti-static bag or a non-conductive surface, such as a stone or wooden table.

To reassemble your device, follow these instructions in reverse order.