




# Dell Inspiron 1122 M102z Battery Replacement

Written By: Terrence15

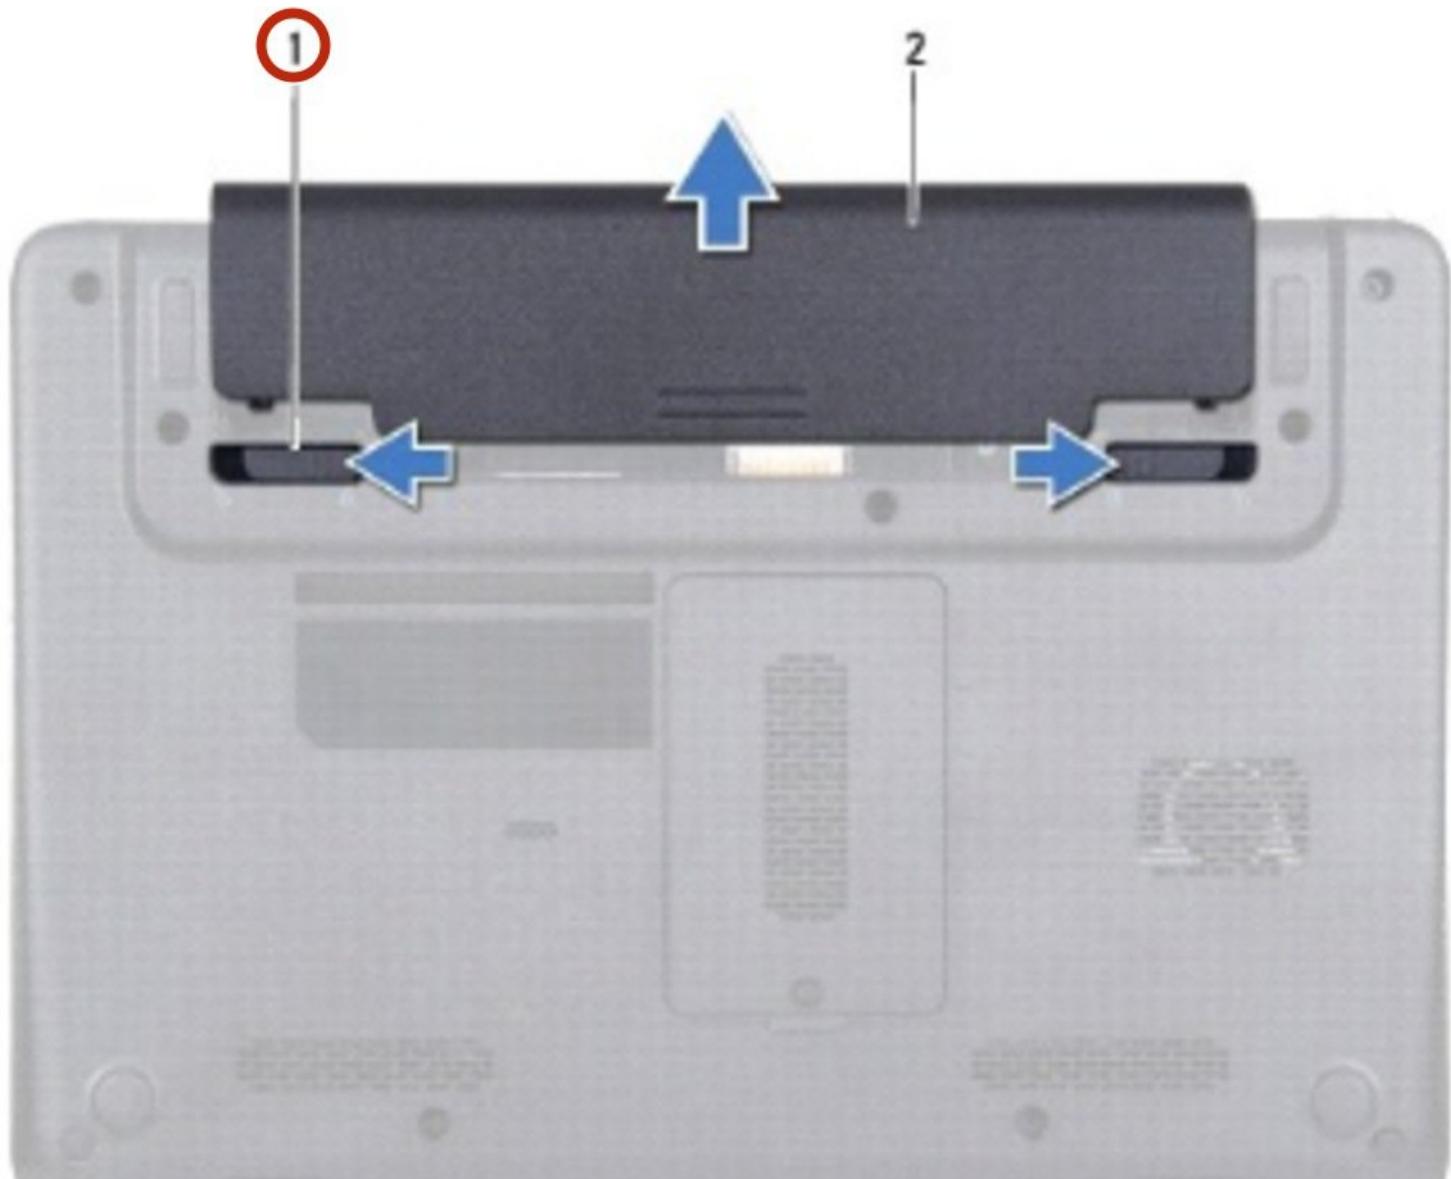


## INTRODUCTION

In this guide, we will show you how to remove and replace the Battery.

### TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)

## Step 1 — Sliding the Battery

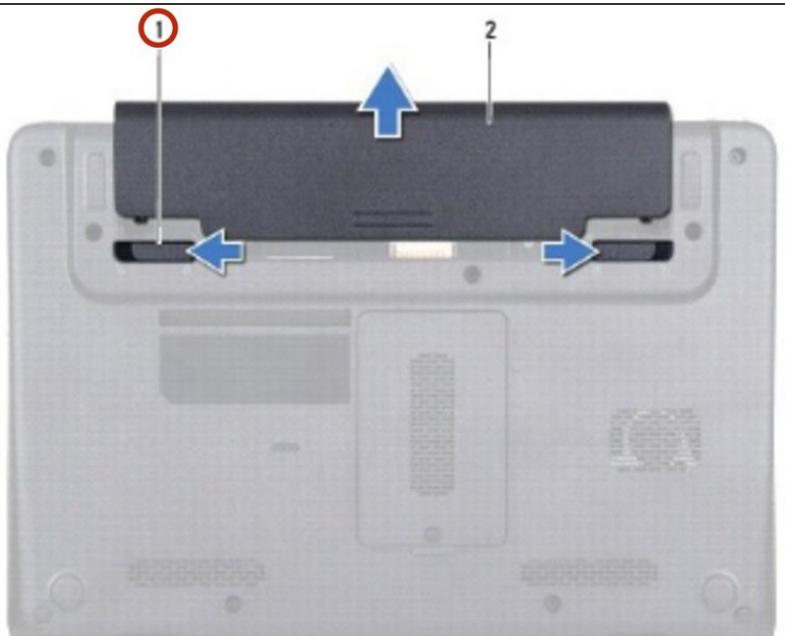


**⚠️** **WARNING:** Before working inside your computer, read the safety information that shipped with your computer. Follow the instructions in [Before You Begin](#).

**⚠️** **CAUTION:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer).


- Slide the battery release latches to the unlock position.

## Step 2 — Sliding the Battery

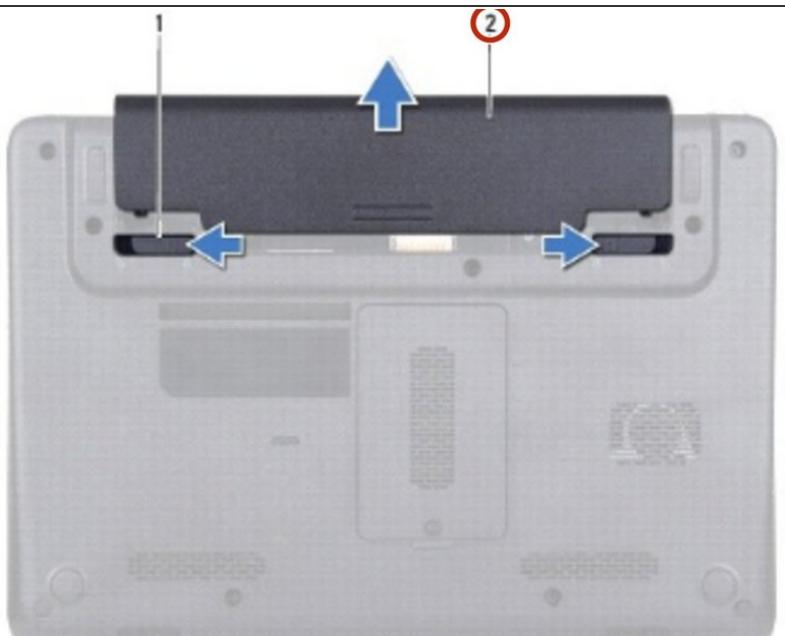

- Slide the battery out of the battery bay.

## Step 3 — Sliding the Battery

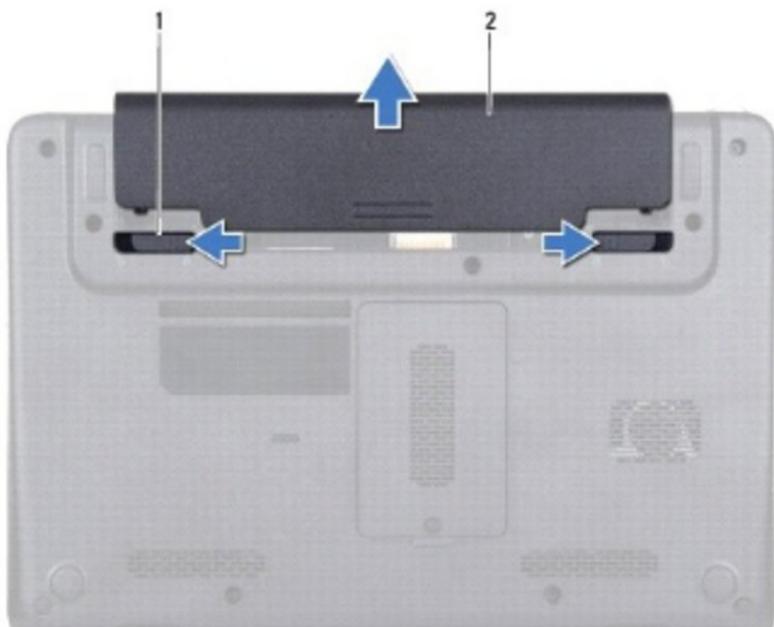

- Slide the battery into the battery bay, until it clicks into place.

To reassemble your device, follow these instructions in reverse order.