




Dell Inspiron 11z 1110 Hard Drive Replacement

Written By: Terrence15

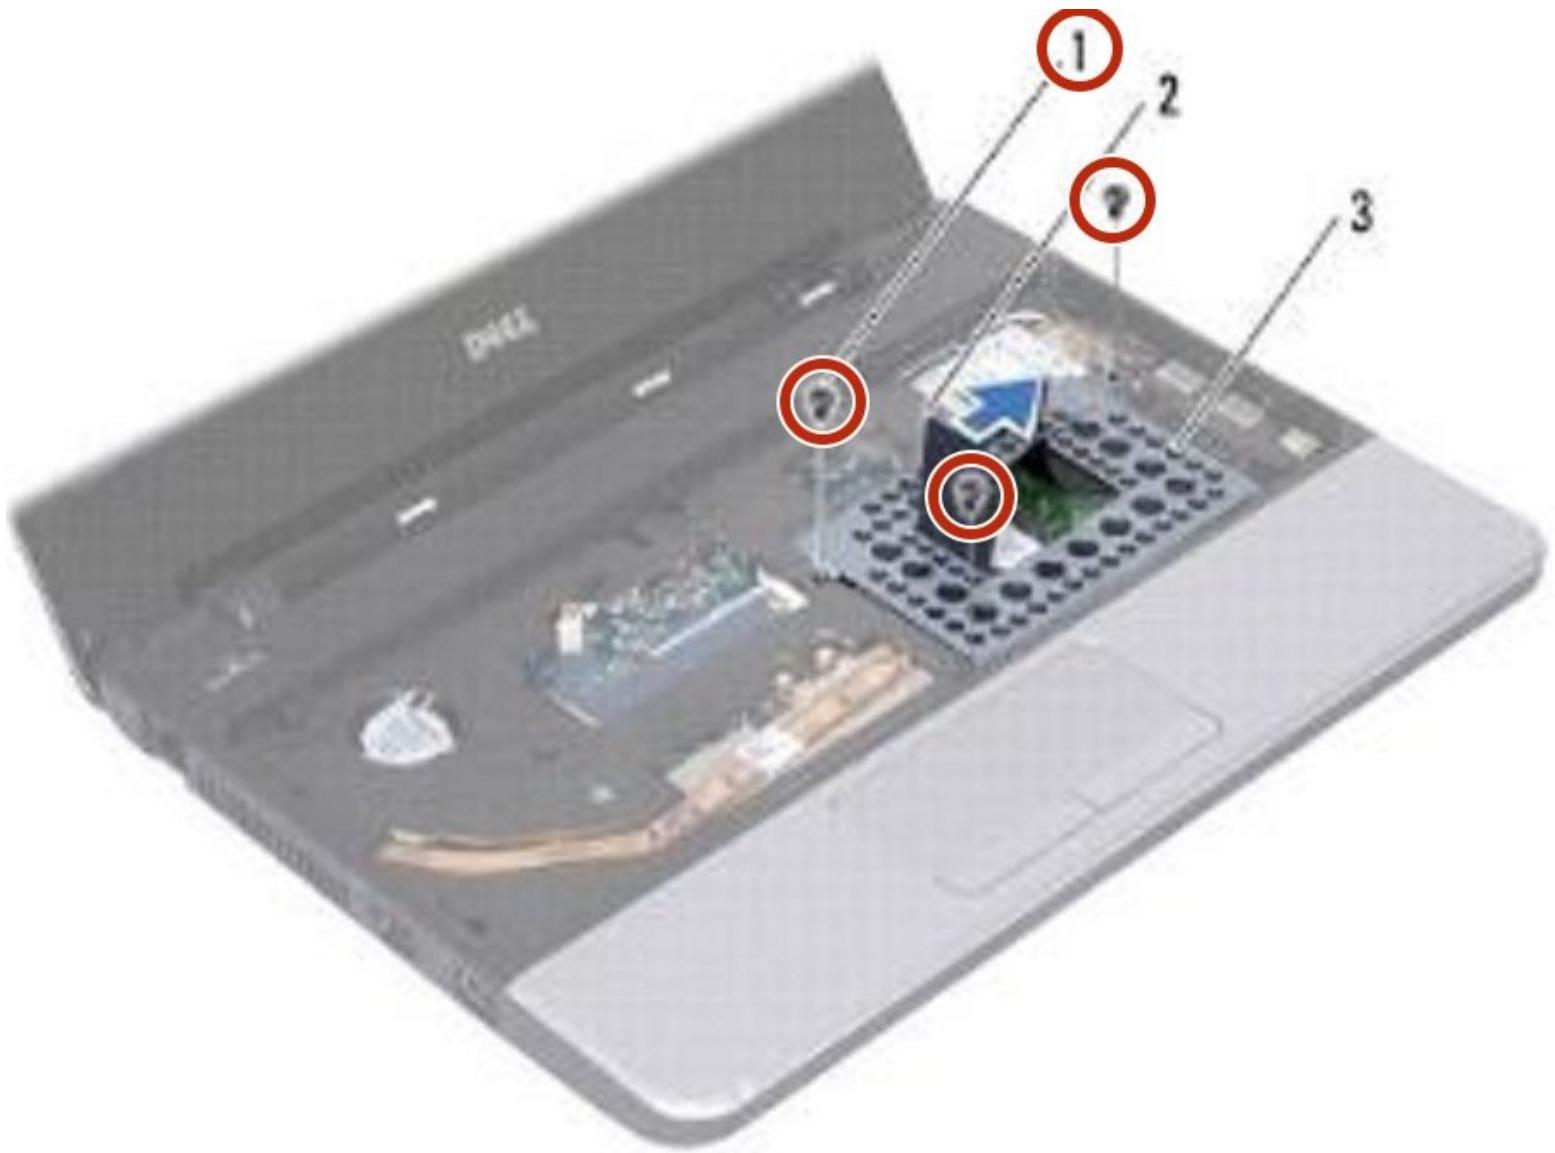


INTRODUCTION

In this guide, we will show you how to remove and replace the Hard Drive.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)


Step 1 — Remove the Screws

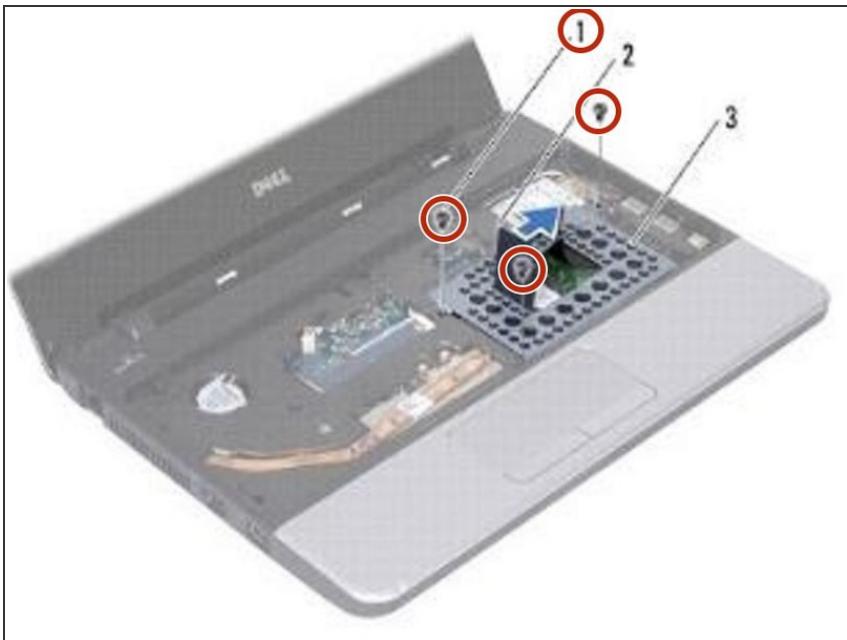

 **WARNING:** Before working inside your computer, read the safety information that shipped with your computer. Follow the procedures in [Before You Begin](#).

- Remove the three screws that secure the hard drive assembly to the computer base.

Step 2 — Pulling the Pull-Tab

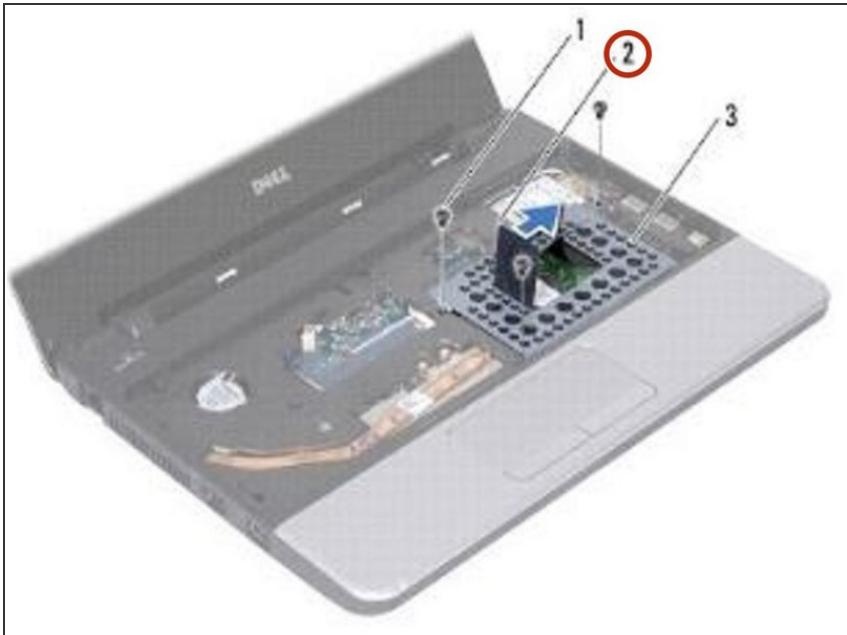


- Pull the pull-tab on the hard drive bracket towards the right to disconnect the hard drive assembly from the interposer.

Step 3 — Lifting the Hard Drive Assembly




- Pull the pull-tab on the hard drive bracket to lift the hard drive assembly at an angle and out of the hard drive compartment as shown in the illustration.

Step 4 — Remove the Screws

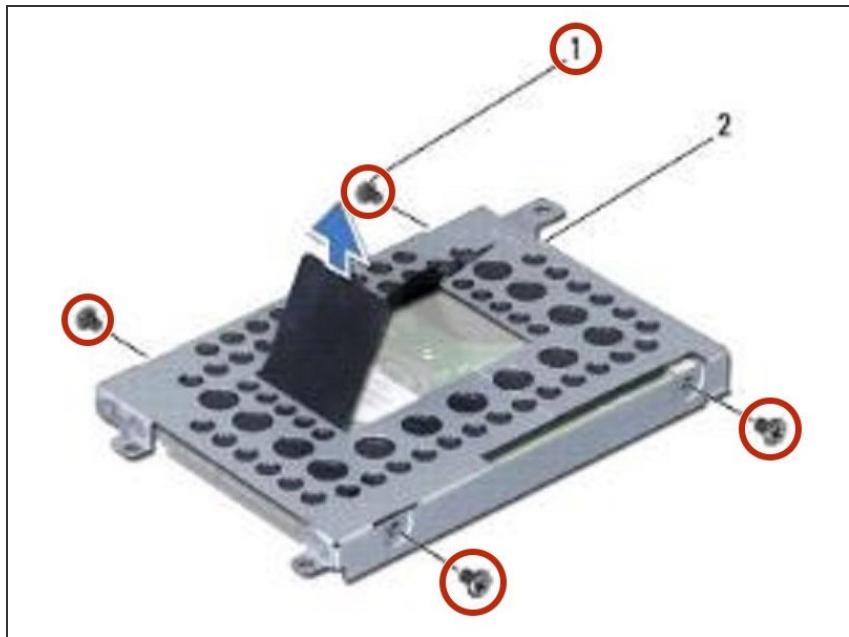


- Remove the four screws that secure the hard drive bracket to the hard drive and remove the hard drive bracket.

Step 5 — Replacing the Bracket

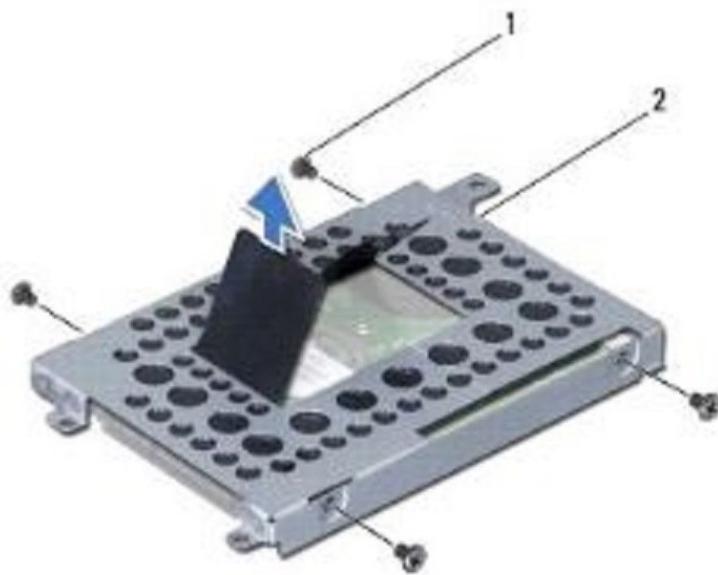


- Replace the hard drive bracket and the four screws that secure the **NEW** hard drive bracket to the hard drive.

Step 6 — Placing the Hard Drive Assembly

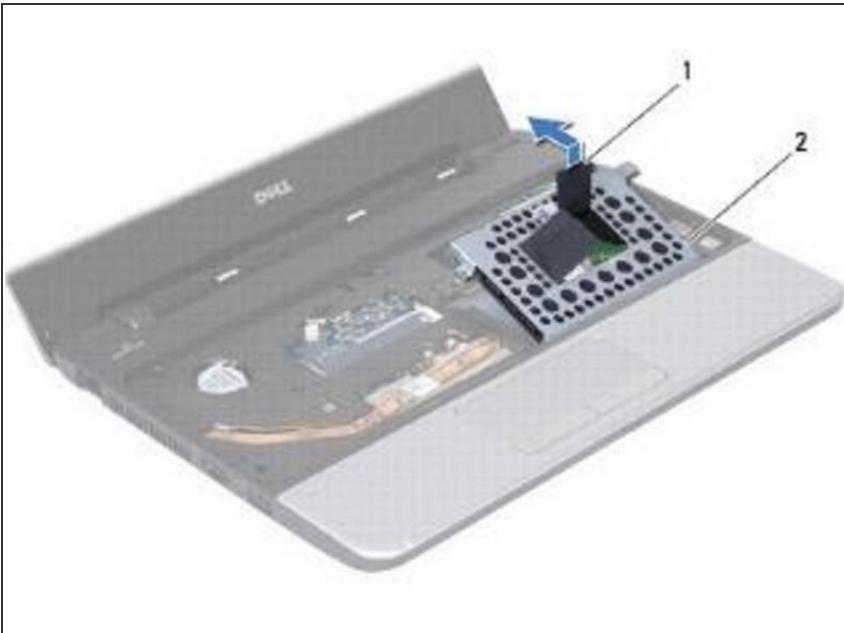


- Place the hard drive assembly in the hard drive compartment.

Step 7 — Connecting the Assembly

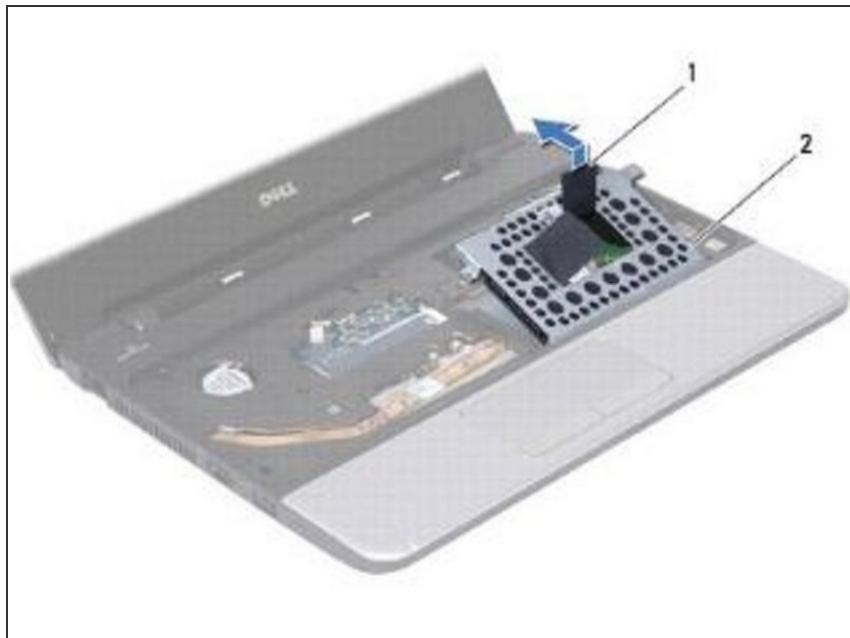

- Push the hard drive assembly towards the left until it is fully connected to the interposer.

Step 8 — Replace the Screws

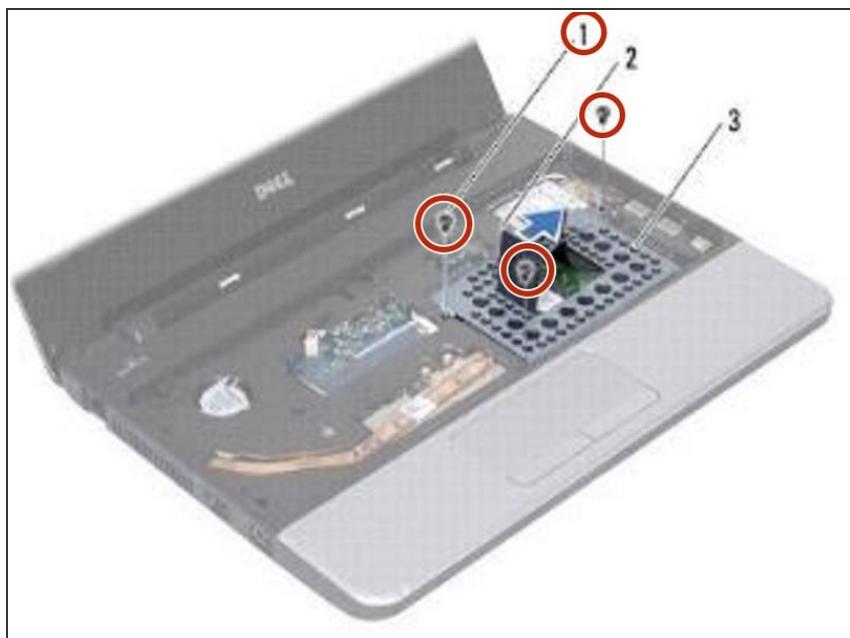

- Replace the three screws that secure the hard drive assembly to the computer base.

To reassemble your device, follow these instructions in reverse order.