




# Dell Inspiron 11z-1121 Display Assembly Replacement

Written By: Terrence15

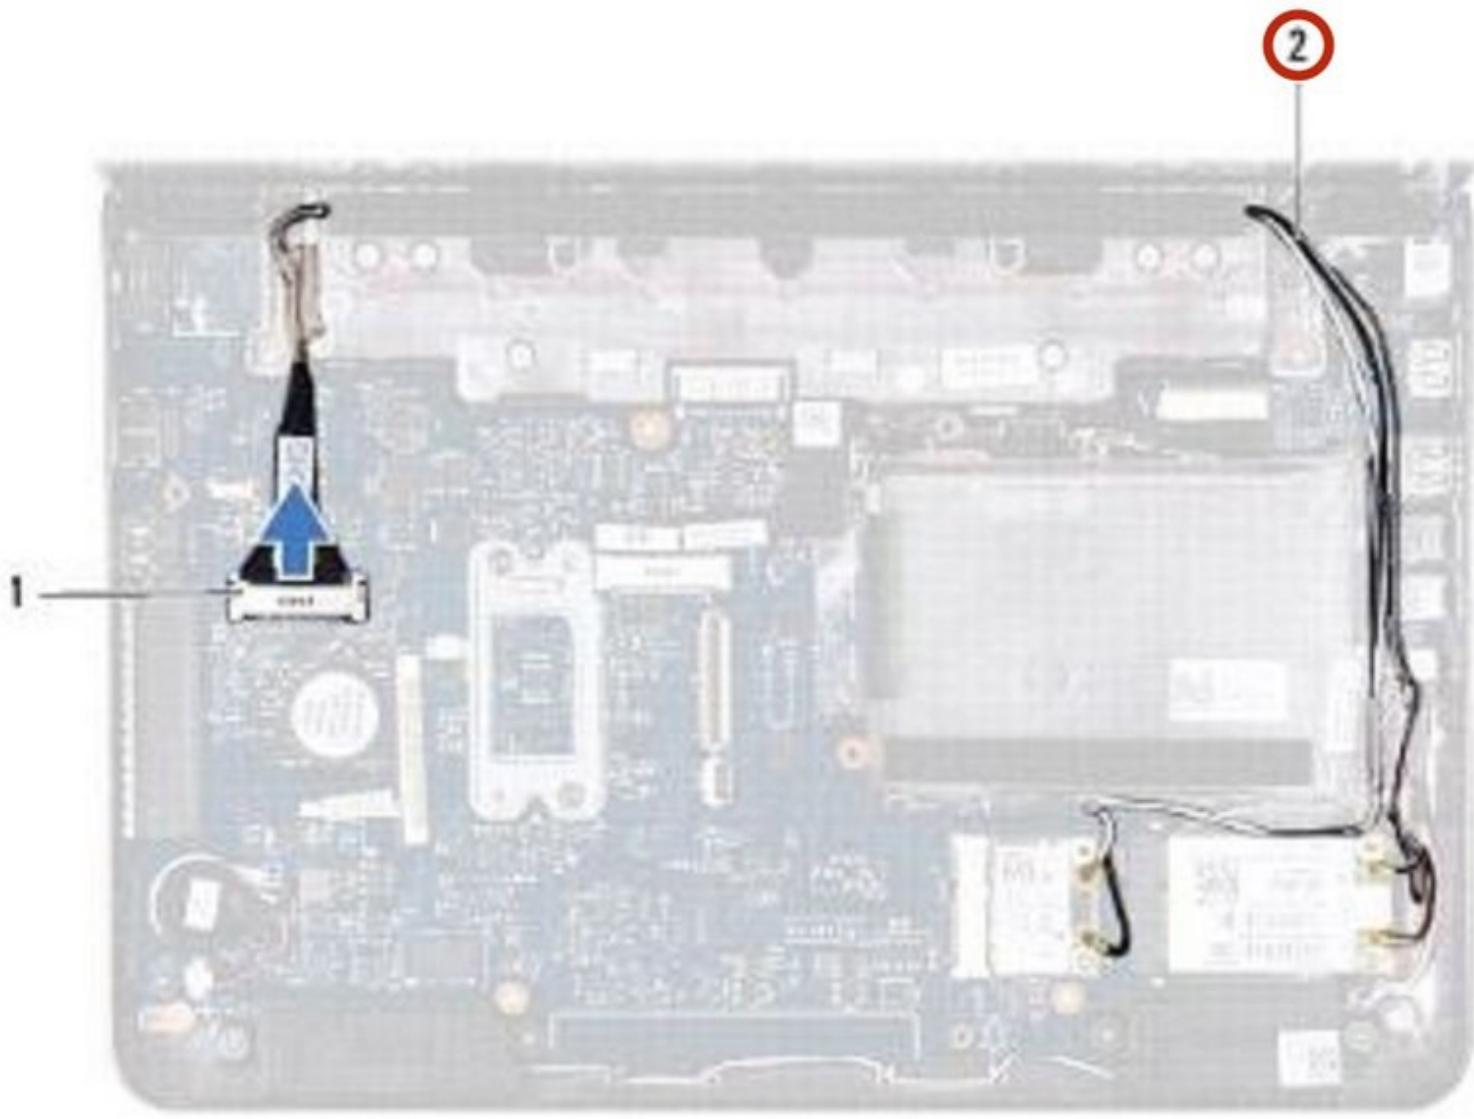


## INTRODUCTION

In this guide, we will show you how to remove and replace the Display Assembly.

### TOOLS:

- Essential Electronics Toolkit (1)


## Step 1 — Disconnecting the Mini-Card Cables

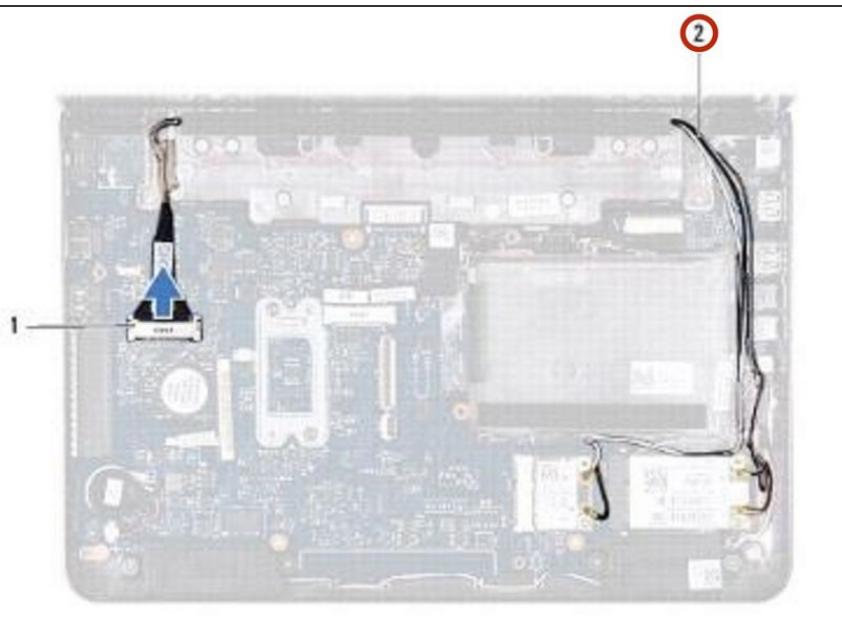

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer. Follow the instructions in [Before You Begin](#).


- Disconnect the Mini-Card antenna cables from the Mini-Card(s).

## Step 2 — Dislodge the Cables

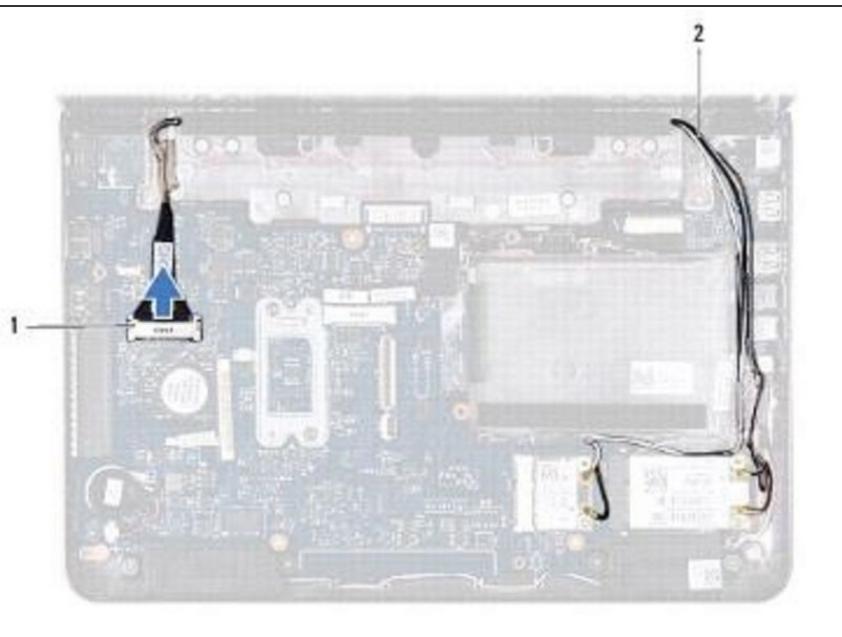


- Make note of the cable routing and carefully dislodge the Mini-Card antenna cables from the routing guides.

## Step 3 — Disconnecting the Display Cable

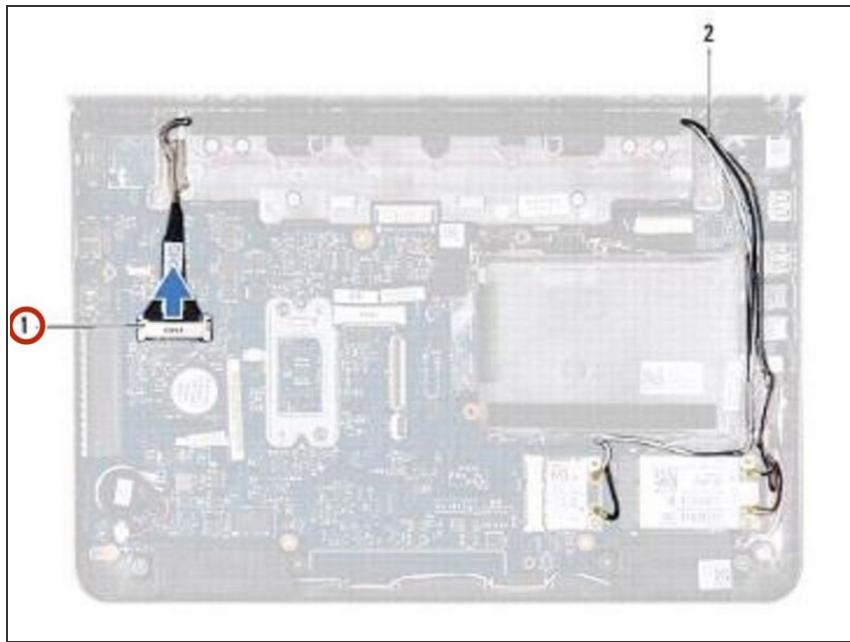


- Disconnect the display cable from the system board connector.

## Step 4 — Remove the Screws

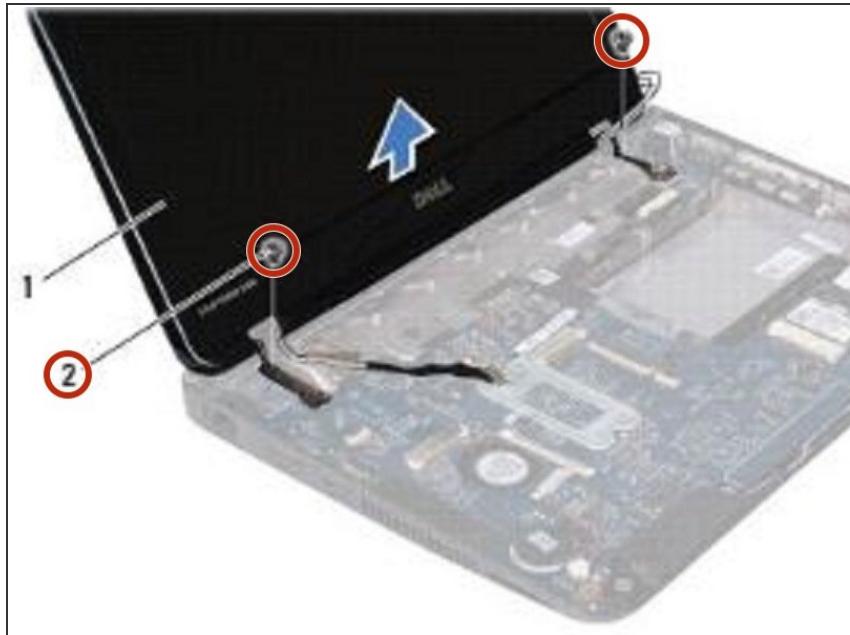


- Remove the two screws (one on each side) that secure the display assembly to the computer base.

## Step 5 — Lifting and Removing the Display Assembly

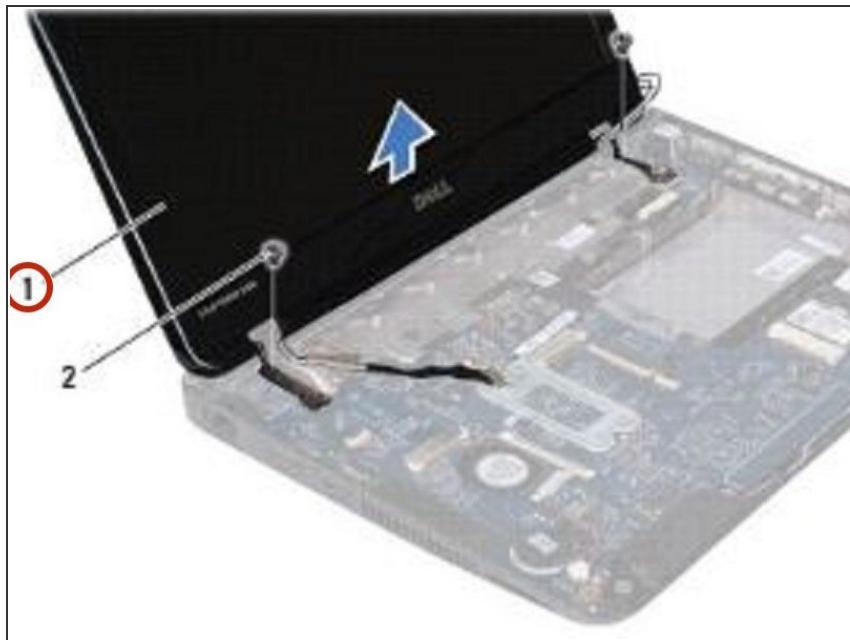

- Lift and remove the display assembly off the computer base.


## Step 6 — Replace the Screws

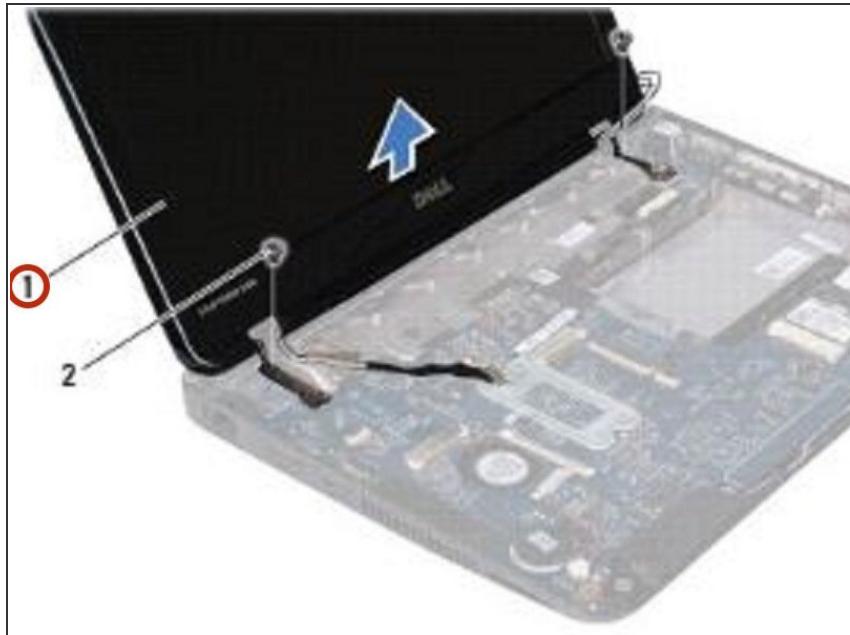

- Place the **NEW** display assembly in position and replace the two screws (one on each side) that secure the


display assembly to the computer base.

## Step 7 — Connecting the Display Cable

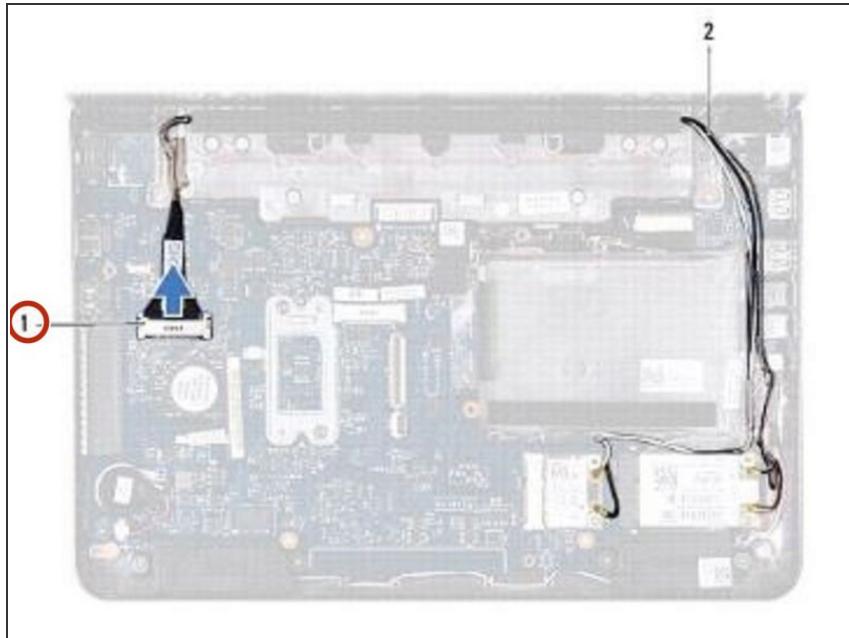


- Connect the display cable to the system board connector.

## Step 8 — Routing the Cables

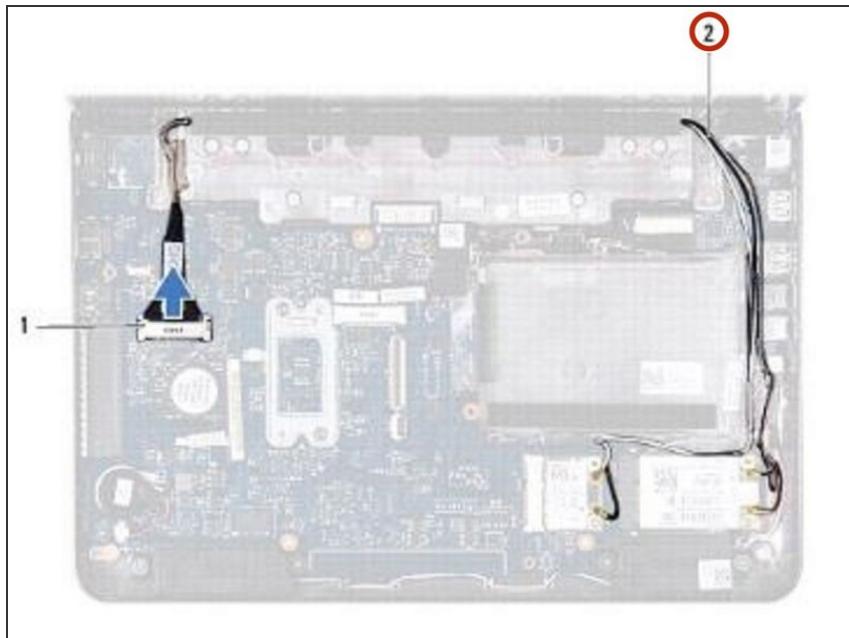

- Route the Mini-Card antenna cables through the routing guides on the computer base.

## Step 9 — Connecting the Cables

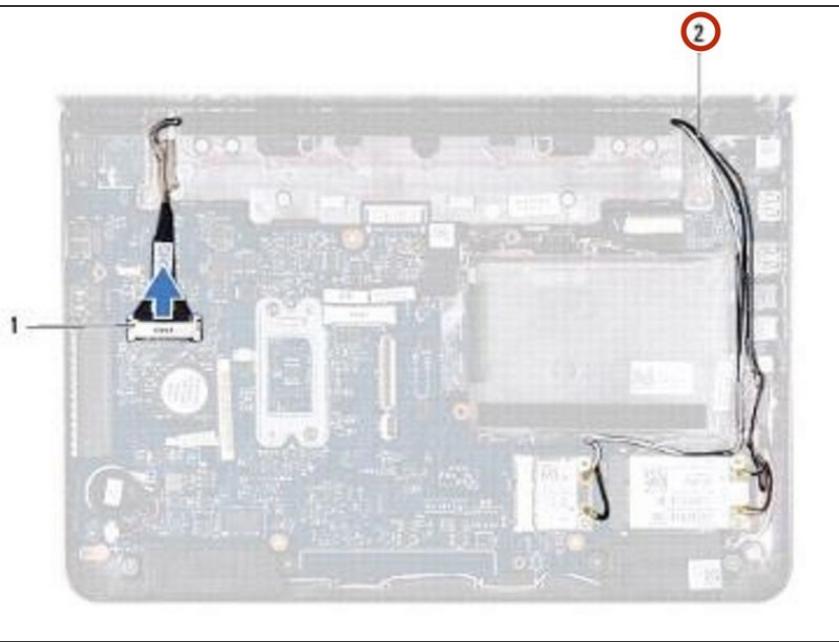

- Connect the Mini-Card antenna cables to the Mini-Card(s).

To reassemble your device, follow these instructions in reverse order.