


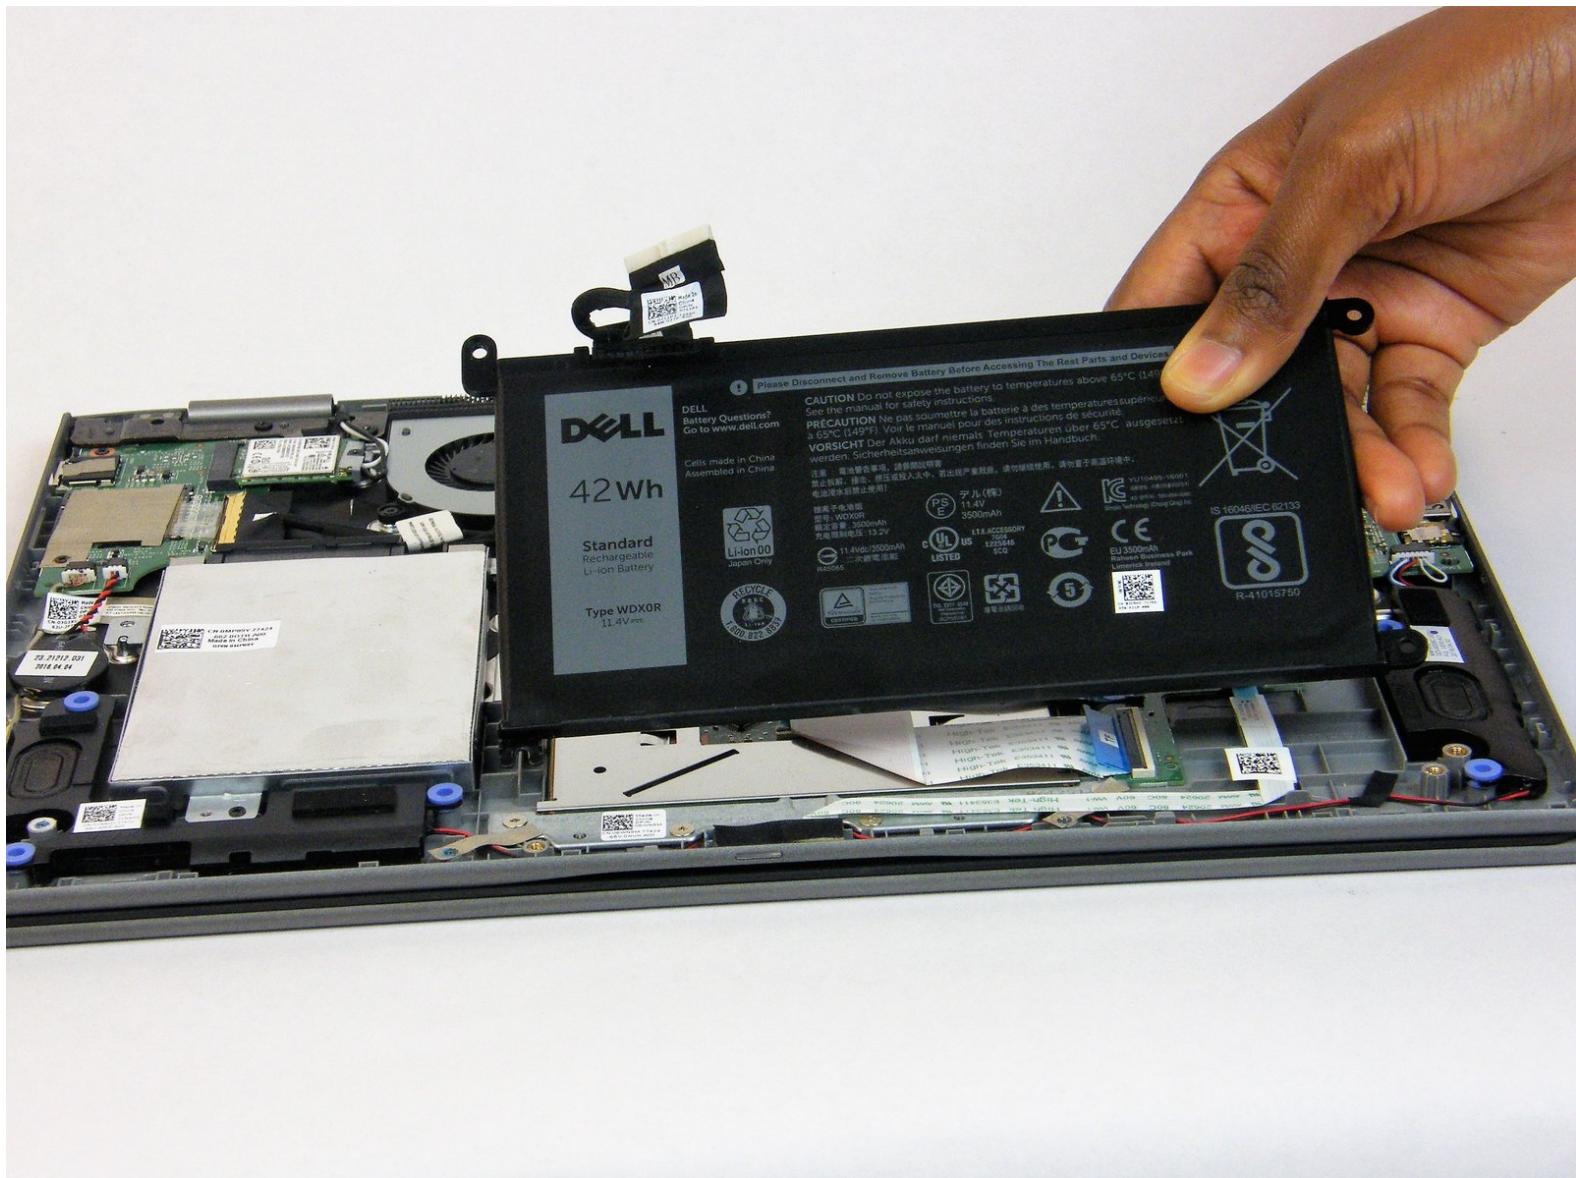

# Dell Inspiron 13-5368 Battery Replacement

A simple guide on how to remove and replace your Dell Inspiron 13-5368 Battery.

Written By: Matt Sugrim





## INTRODUCTION

This is a simple step-by-step guide on how to remove and replace a battery for a Dell Inspiron 13-5368. You will need a Philips Head J-0 screwdriver and a pry tool in order to perform this task. It is very easy to do and will only take about 5 minutes.

### TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

## Step 1 — Battery

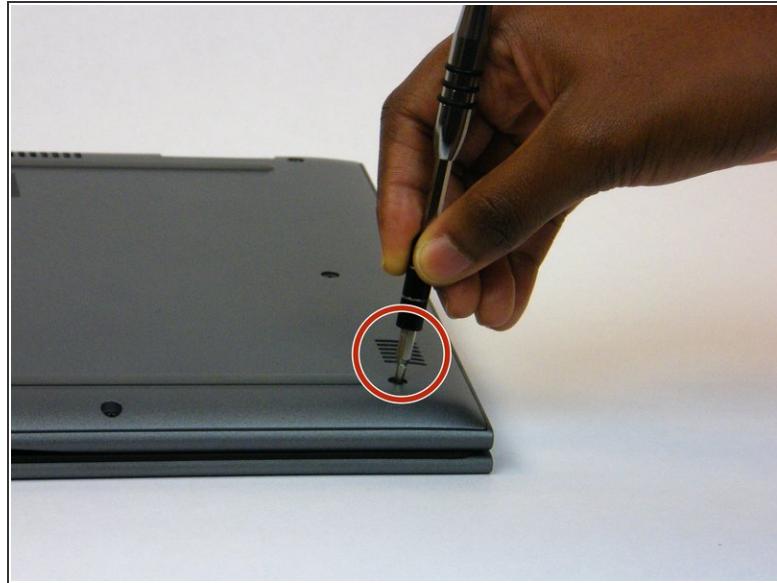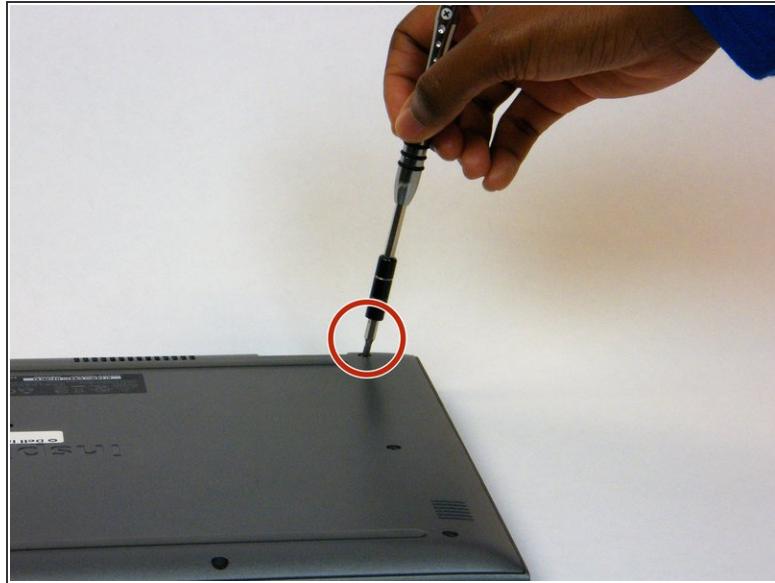


- Remove the nine 6mm Phillips #0 screws that secure the back cover of the laptop.

## Step 2





- Use spudger to remove the back cover.

## Step 3

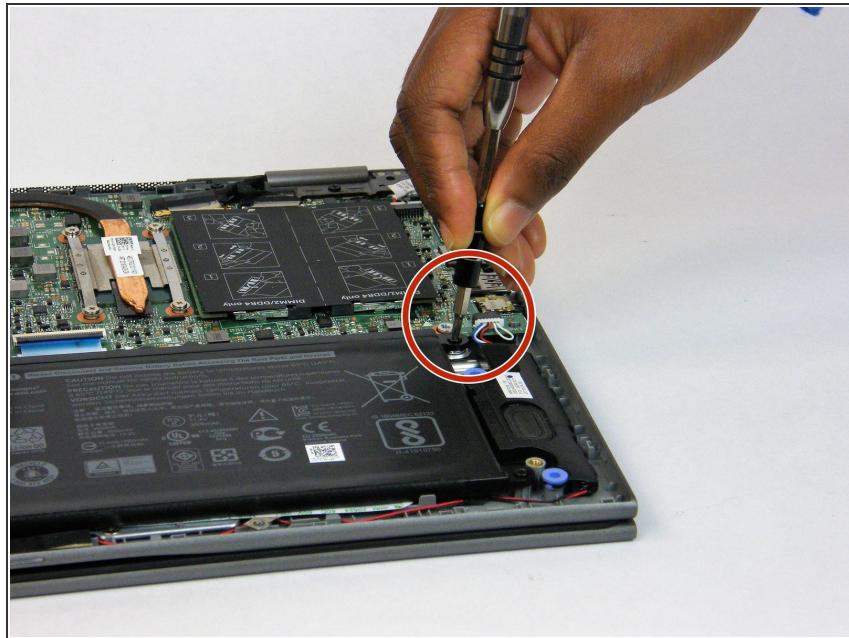


- Remove the four 3mm Phillips #0 screws that hold the battery to the case of the laptop.

## Step 4

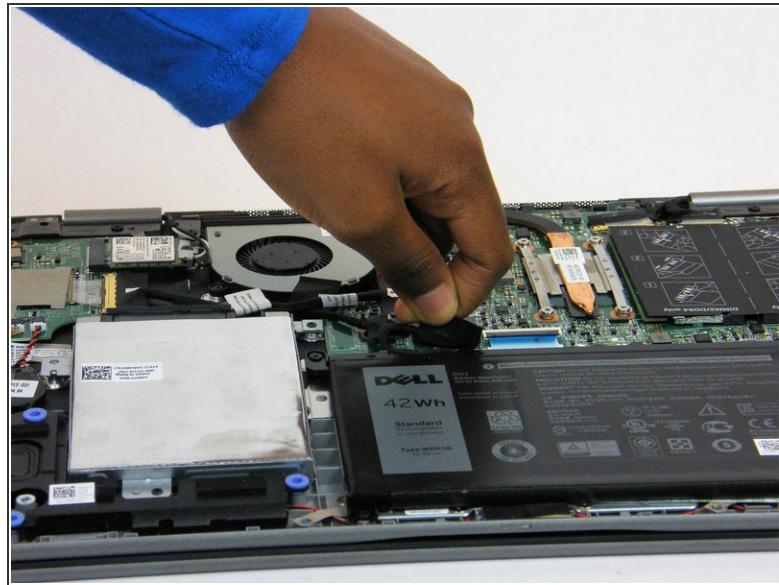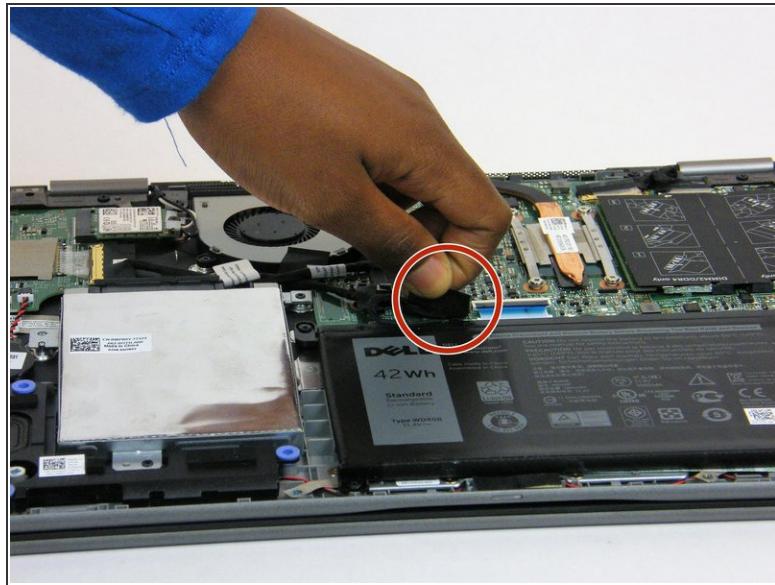

- Remove the power cord that connects the motherboard to the battery.

## Step 5

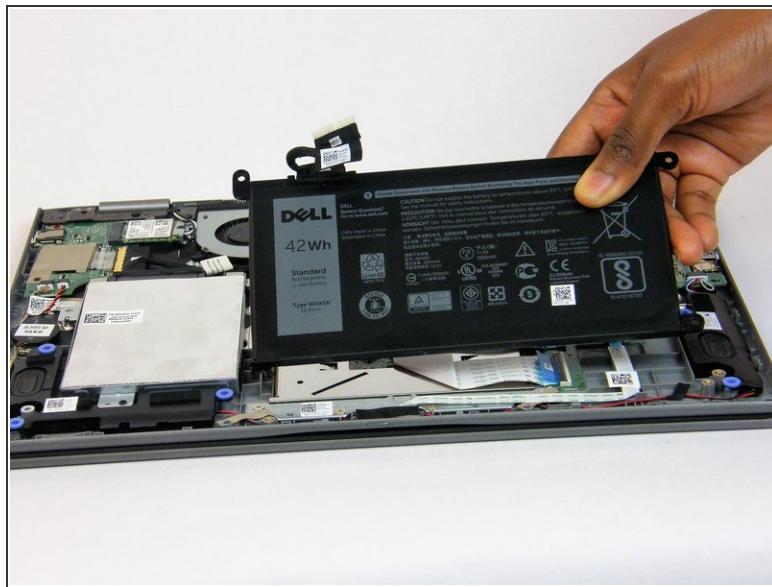

- Remove the battery.

To reassemble your device, follow these instructions in reverse order.