




Dell Inspiron 13-5368 Wifi Adapter Replacement

This guide is made to walk through the steps of removing and replacing the Network Adapter Card or Wifi Adapter card.

Written By: Raj Dhavalikar

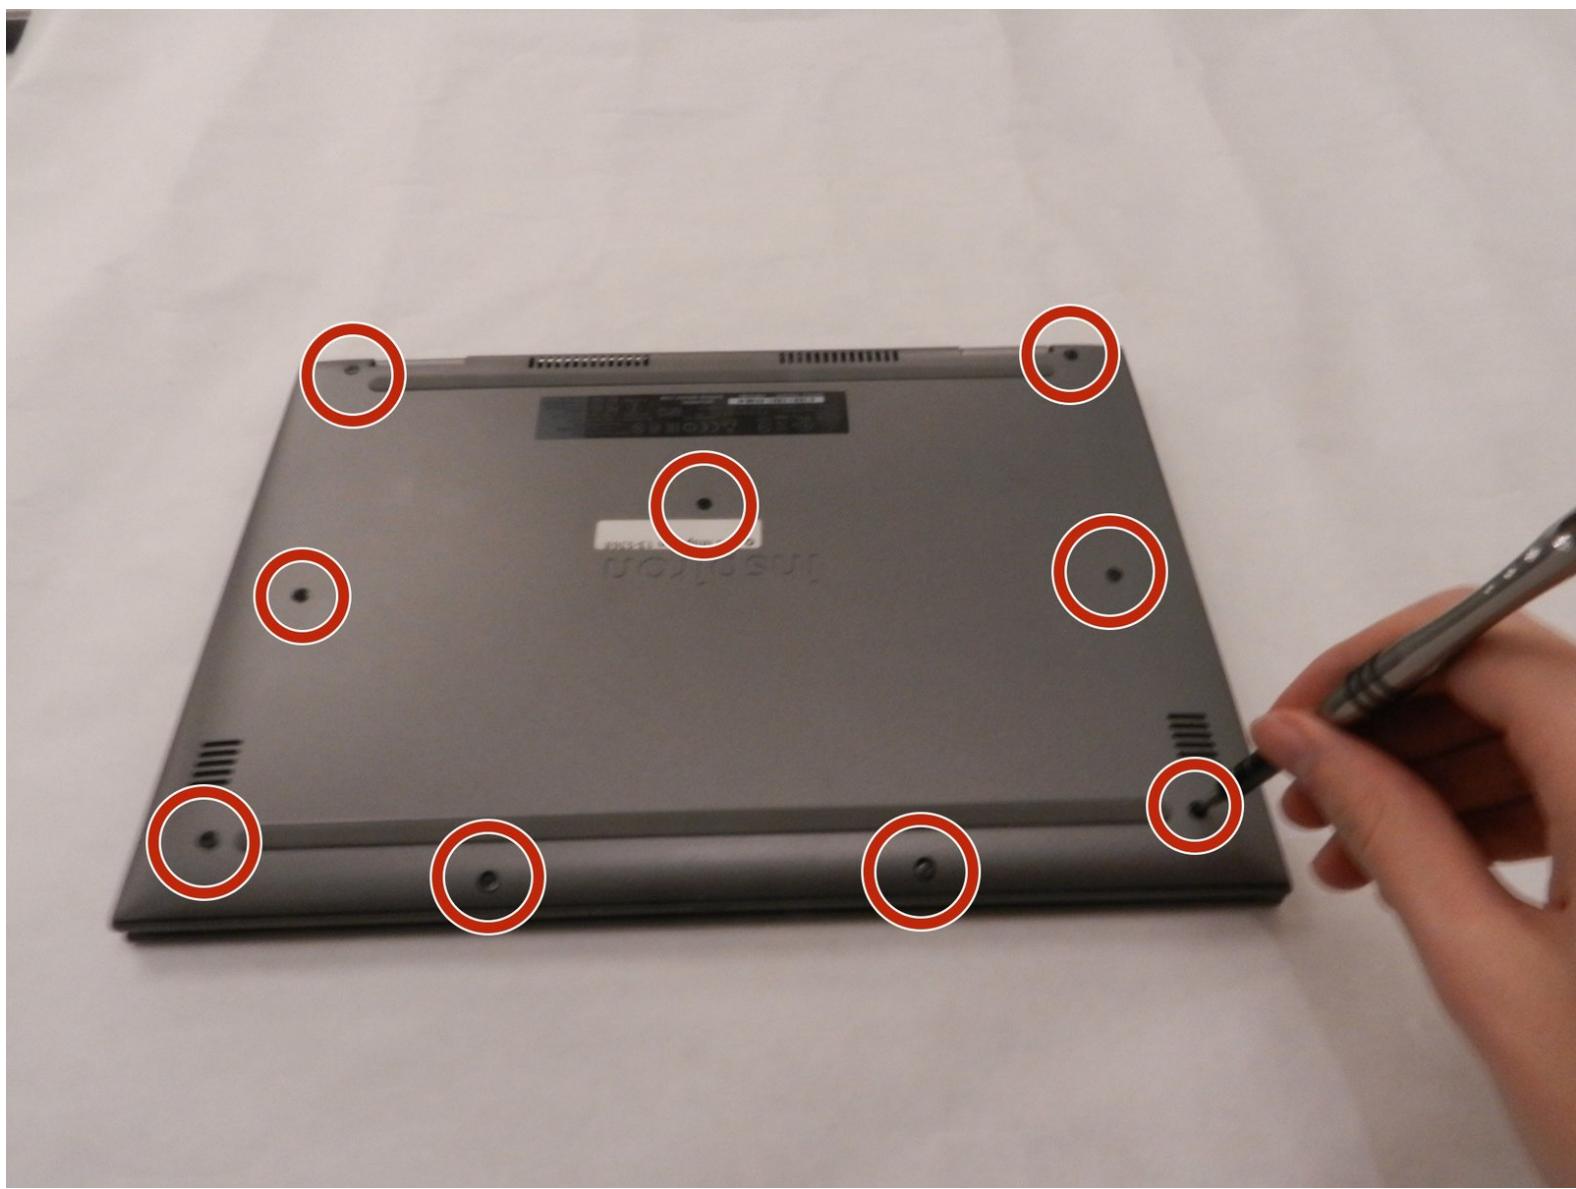

This document was generated on 2019-11-06 05:42:36 AM (MST).


INTRODUCTION

Is your computer experiencing trouble with connecting to the internet? Consider using this guide to replace the network adapter card in your laptop.

TOOLS:


- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Wifi Adapter

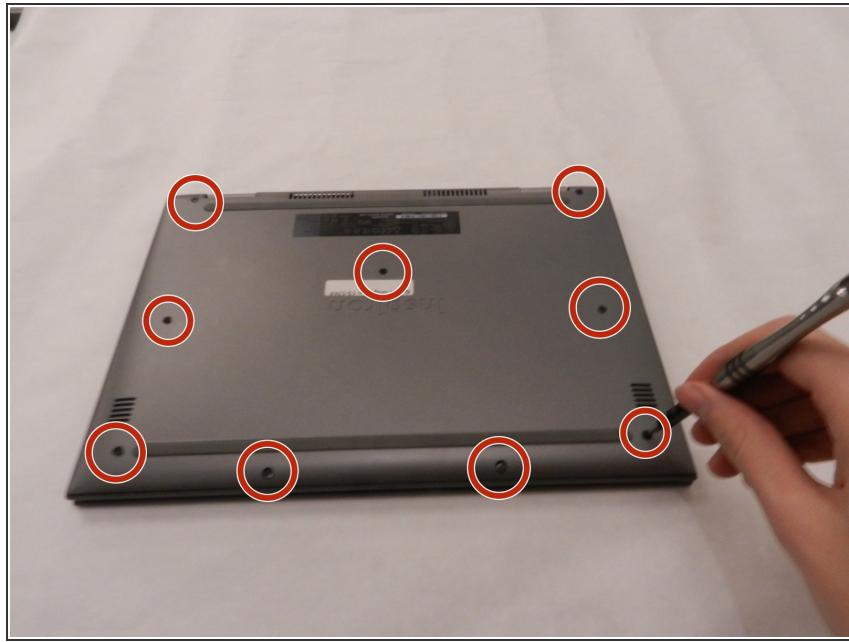


- Use a Phillips #0 screwdriver to remove the 9.6 mm screws securing the back plate of the laptop.

Step 2

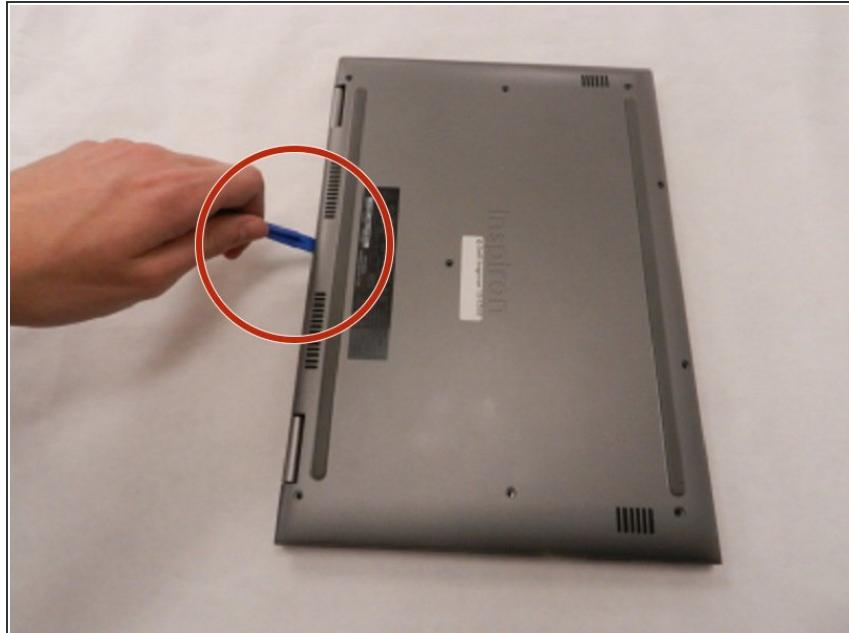


- Use a prying tool to remove the back plate.

Step 3

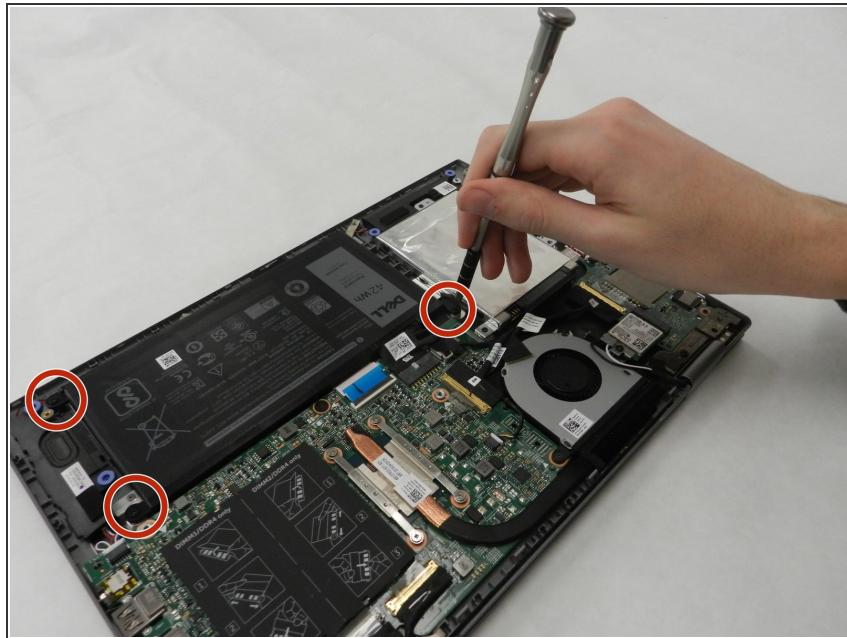


- Use a Phillips #0 screwdriver to remove the three 3 mm screws holding the battery in place.

Step 4

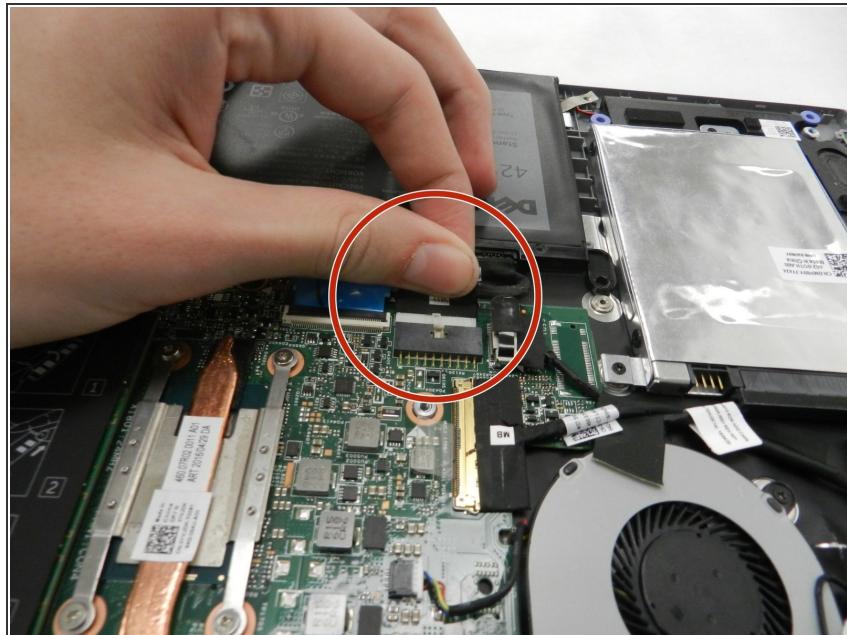



- Disconnect the cable connecting the battery to the motherboard, and then remove the battery

Step 5

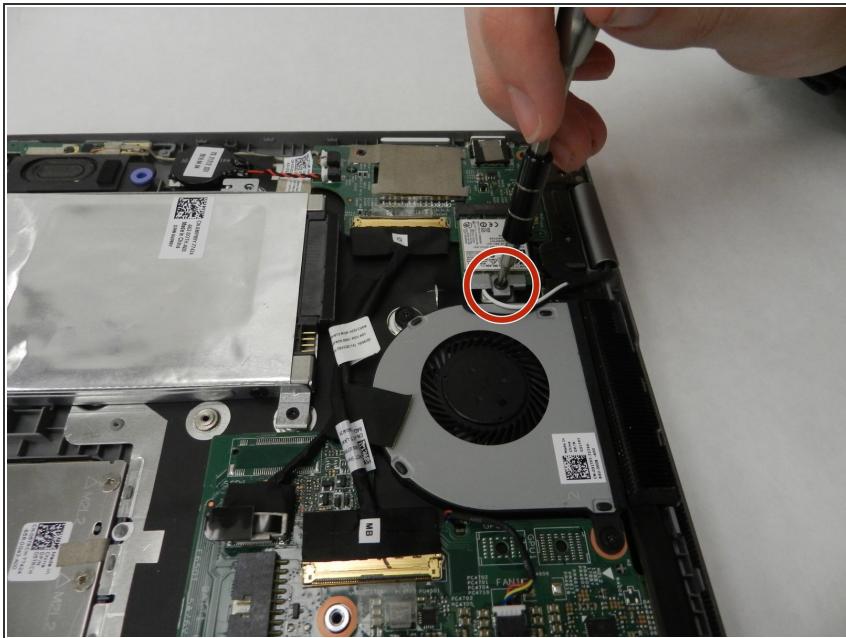

- Use a Phillips #0 screwdriver to remove the 3mm screw and the metal bracket that holds the network adapter card in place.

Step 6

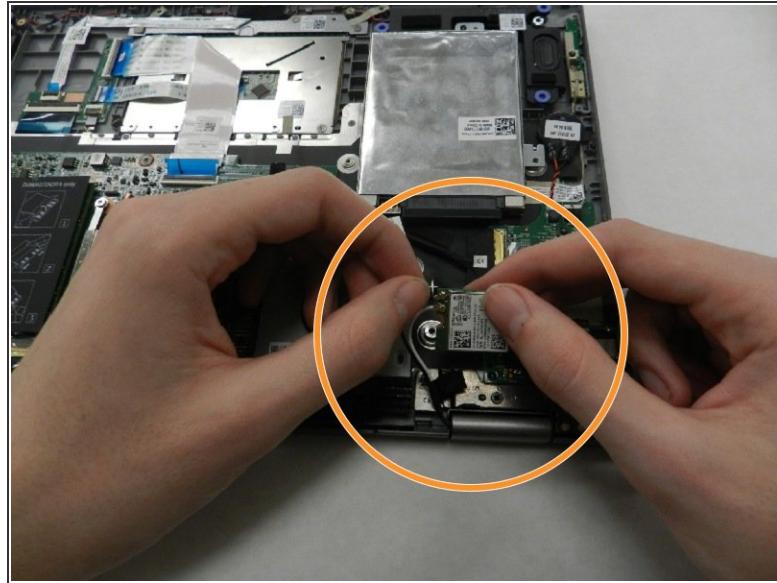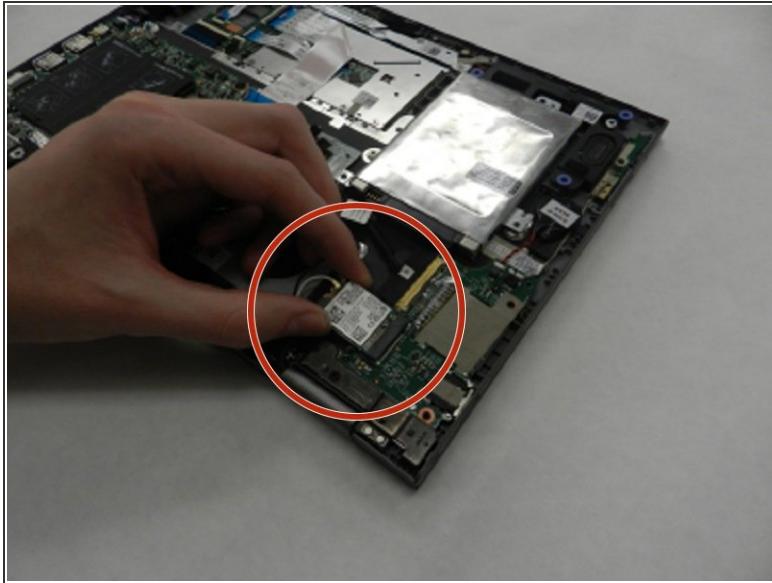

- Pull out the network card.
- To completely remove the network card, disconnect the two cords (white and black) from the adapter card. White on 1 and Black on 2.

To reassemble your device, follow these instructions in reverse order.