



Dell Inspiron 13-7352 Battery Replacement

This guide will help user remove battery to be able to complete most other device repairs safely and user will learn how to remove and replace battery.

Written By: Mikinna Martin



INTRODUCTION

The device battery provides the main source of power, and must be removed to perform most other repairs on the device.



TOOLS:


- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)




PARTS:

- [Dell Inspiron 13-7352 Laptop Battery](#) (1)



Step 1 — Battery

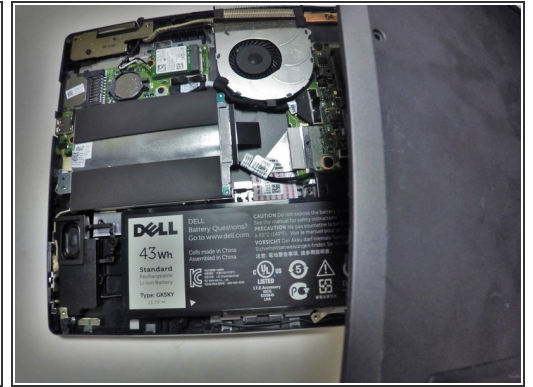

 Before disassembling your laptop, be sure it is powered off.

- Remove the ten 7.5mm screws that secure the back panel with the Phillips #0 head
- Use the plastic opening tool to remove the back panel.

Step 2

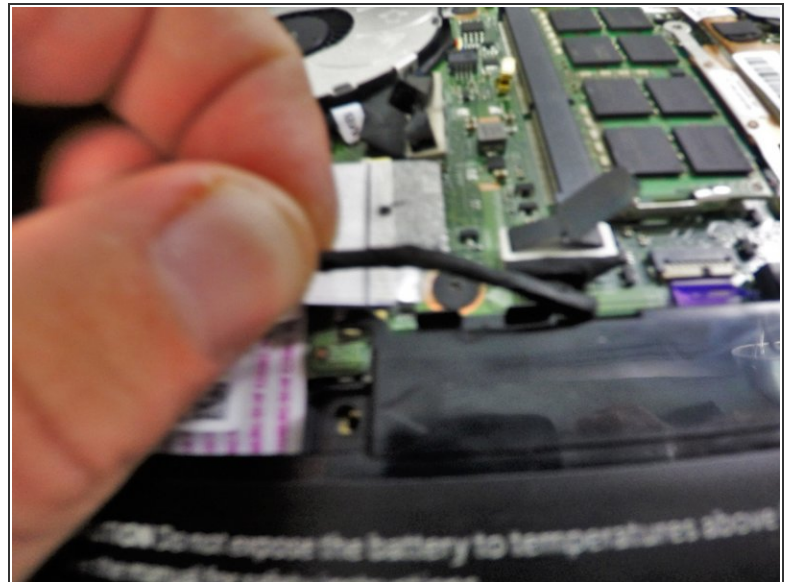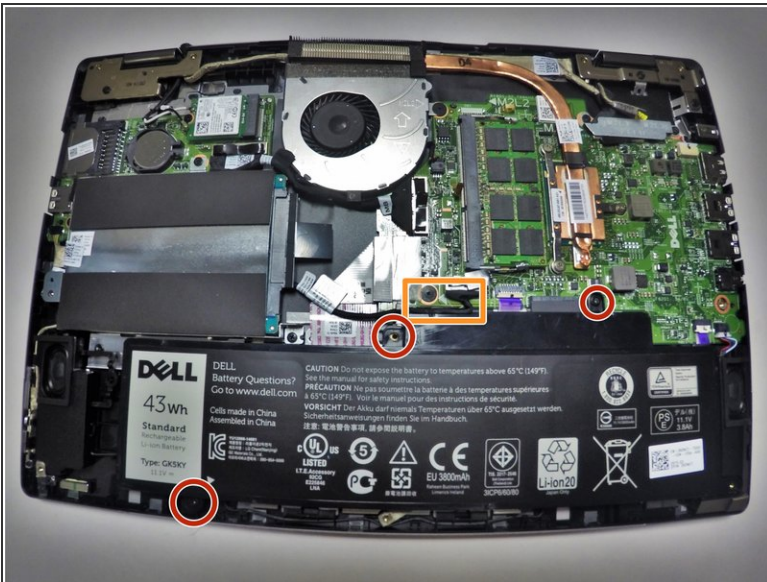

- Remove the two 3mm screws with the Phillips #0 head that hold down the battery.
- Remove the Hard Drive wire from the battery clip by detaching the wire

Step 3



- Gently remove the battery from the rest of the device.

To reassemble your device, follow these instructions in reverse order.