


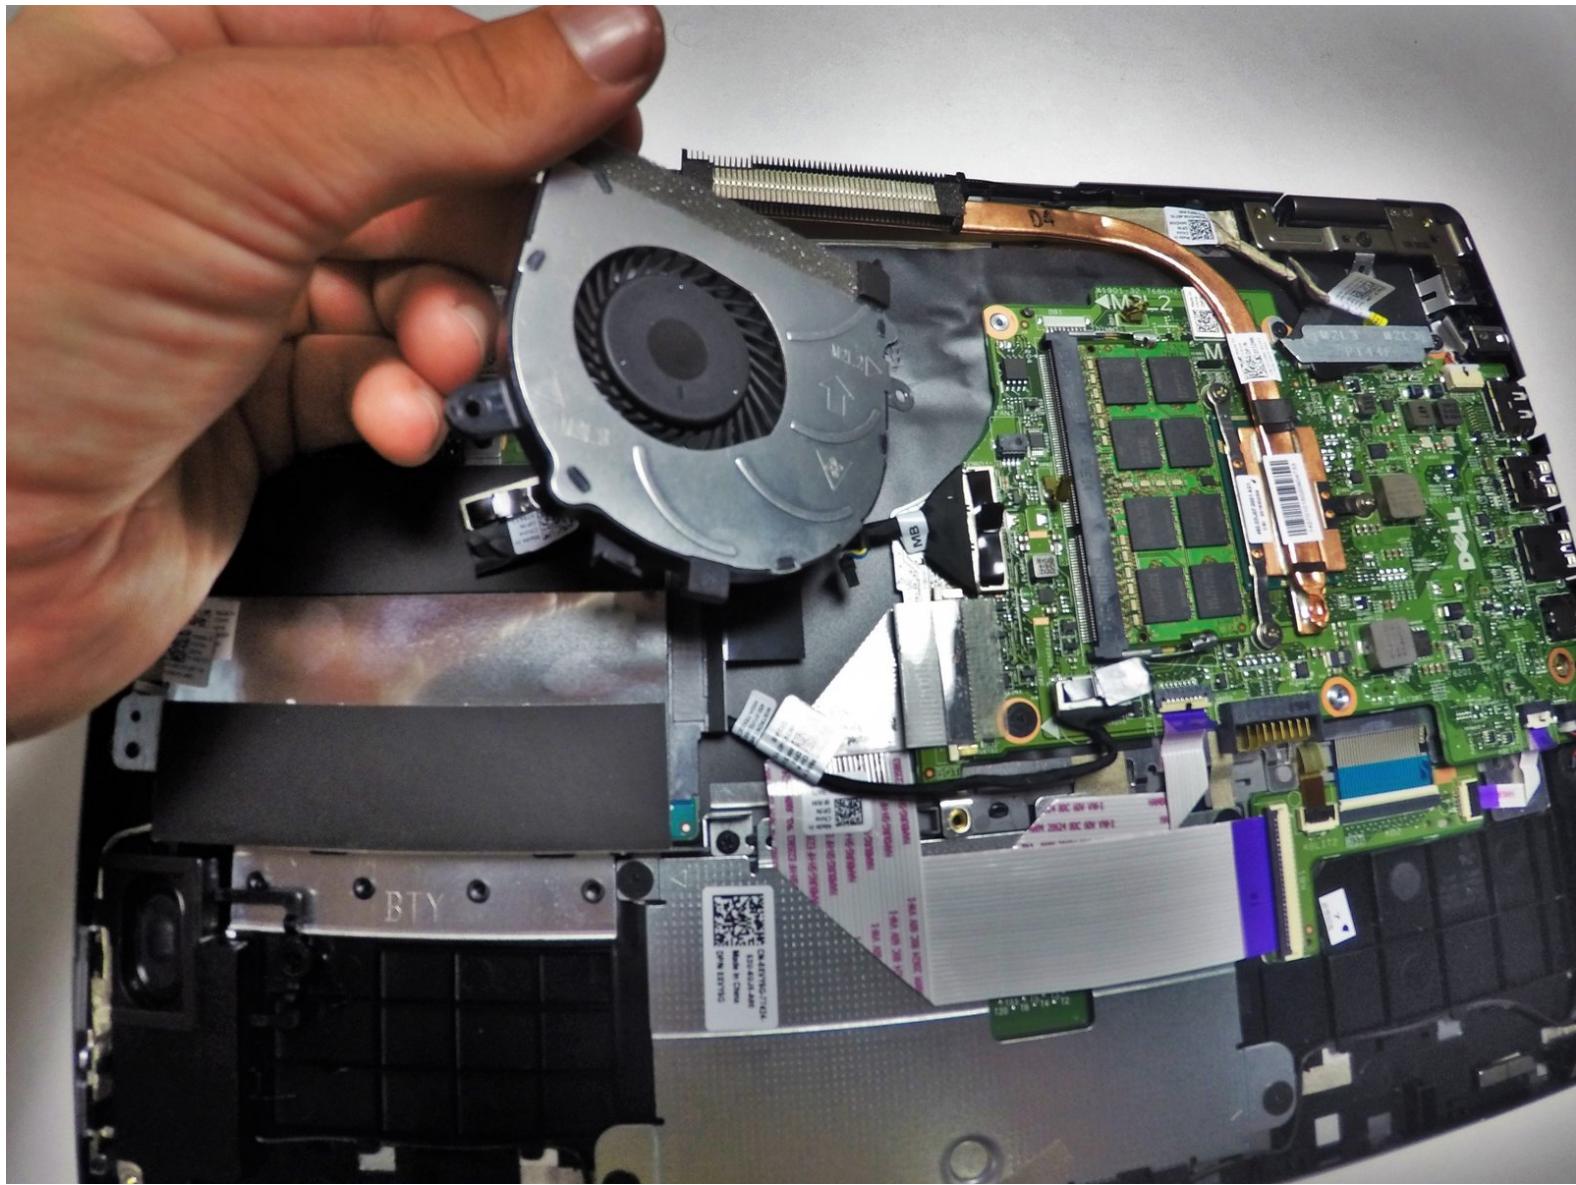

# Dell Inspiron 13-7352 Cooling Fan Replacement

This guide will explain how to change the cooling fan.

Written By: Chris Monte



## INTRODUCTION

The cooling fan keeps the devices internal components from overheating during operation. It is located in the rear center of the base next to the exhaust vent.

### **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)

### **PARTS:**

- [Dell Inspiron 13-7352 Laptop Fan \(1\)](#)


## Step 1 — Battery



 Before disassembling your laptop, be sure it is powered off.

- Remove the ten 7.5mm screws that secure the back panel with the Phillips #0 head
- Use the plastic opening tool to remove the back panel.

## Step 2

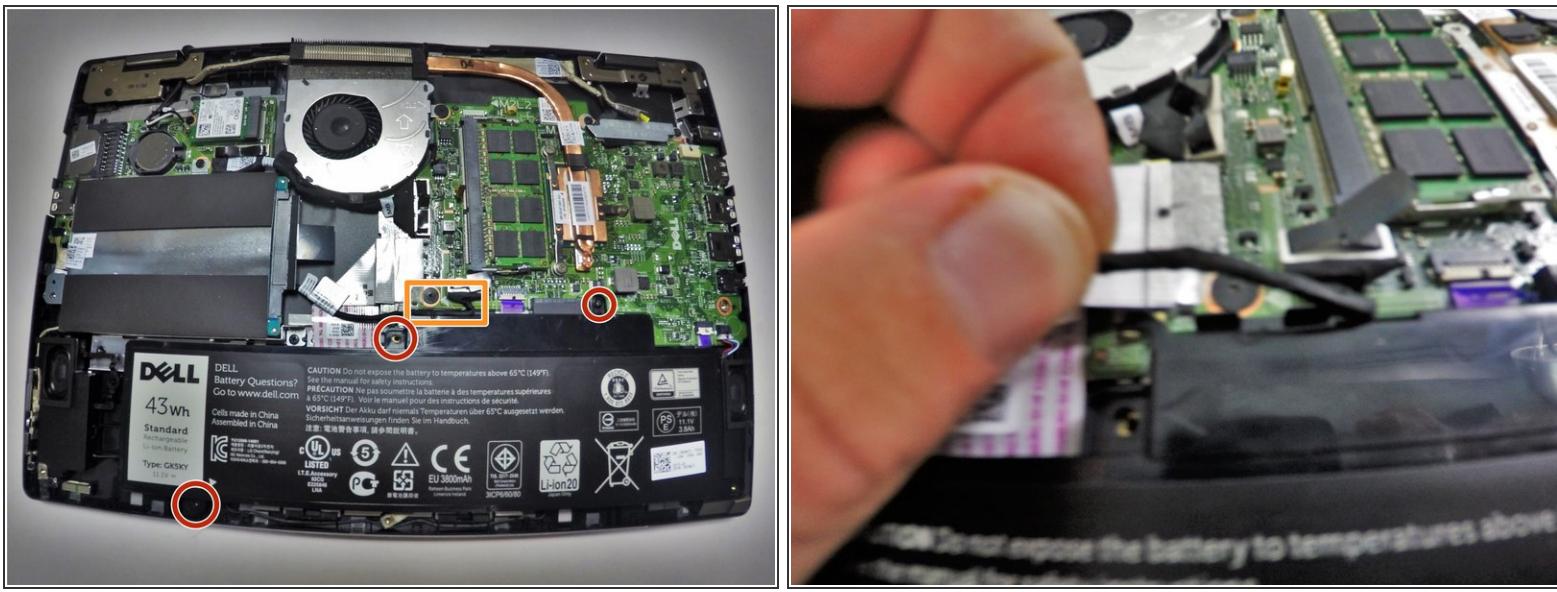

- Remove the two 3mm screws with the Phillips #0 head that hold down the battery.
- Remove the Hard Drive wire from the battery clip by detaching the wire

## Step 3




- Gently remove the battery from the rest of the device.

## Step 4 — Cooling Fan




- Remove the cord that runs from system board to the I/O board.

## Step 5

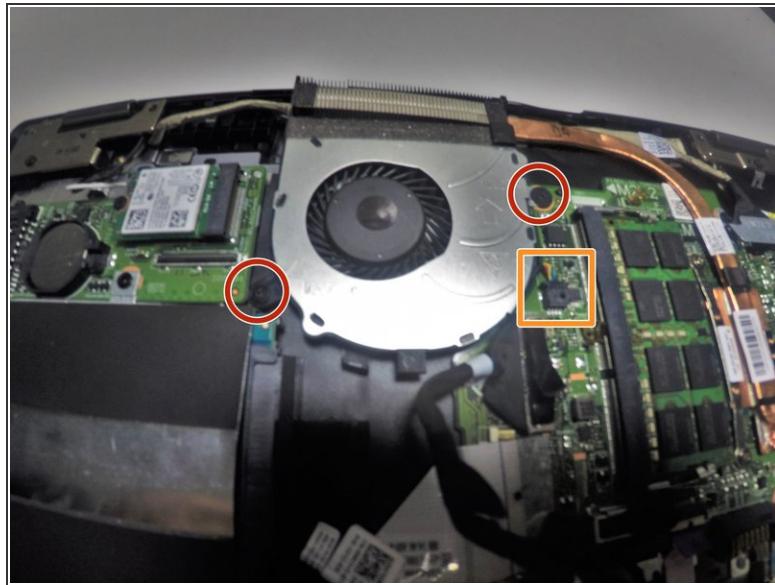

- Remove the 3mm and 4mm screws holding down fan with the Phillips #0 head.
- Disconnect the fan wire from the system board.

## Step 6

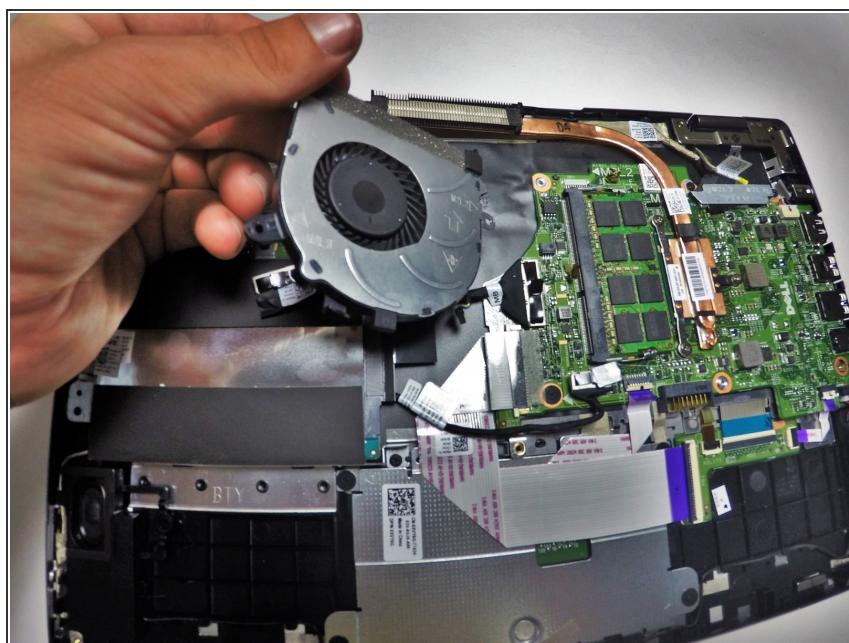

- Lift the fan from the rest of the device by picking up a single side and separating it from device.

To reassemble your device, follow these instructions in reverse order.