 




Written By: Anthony Burke

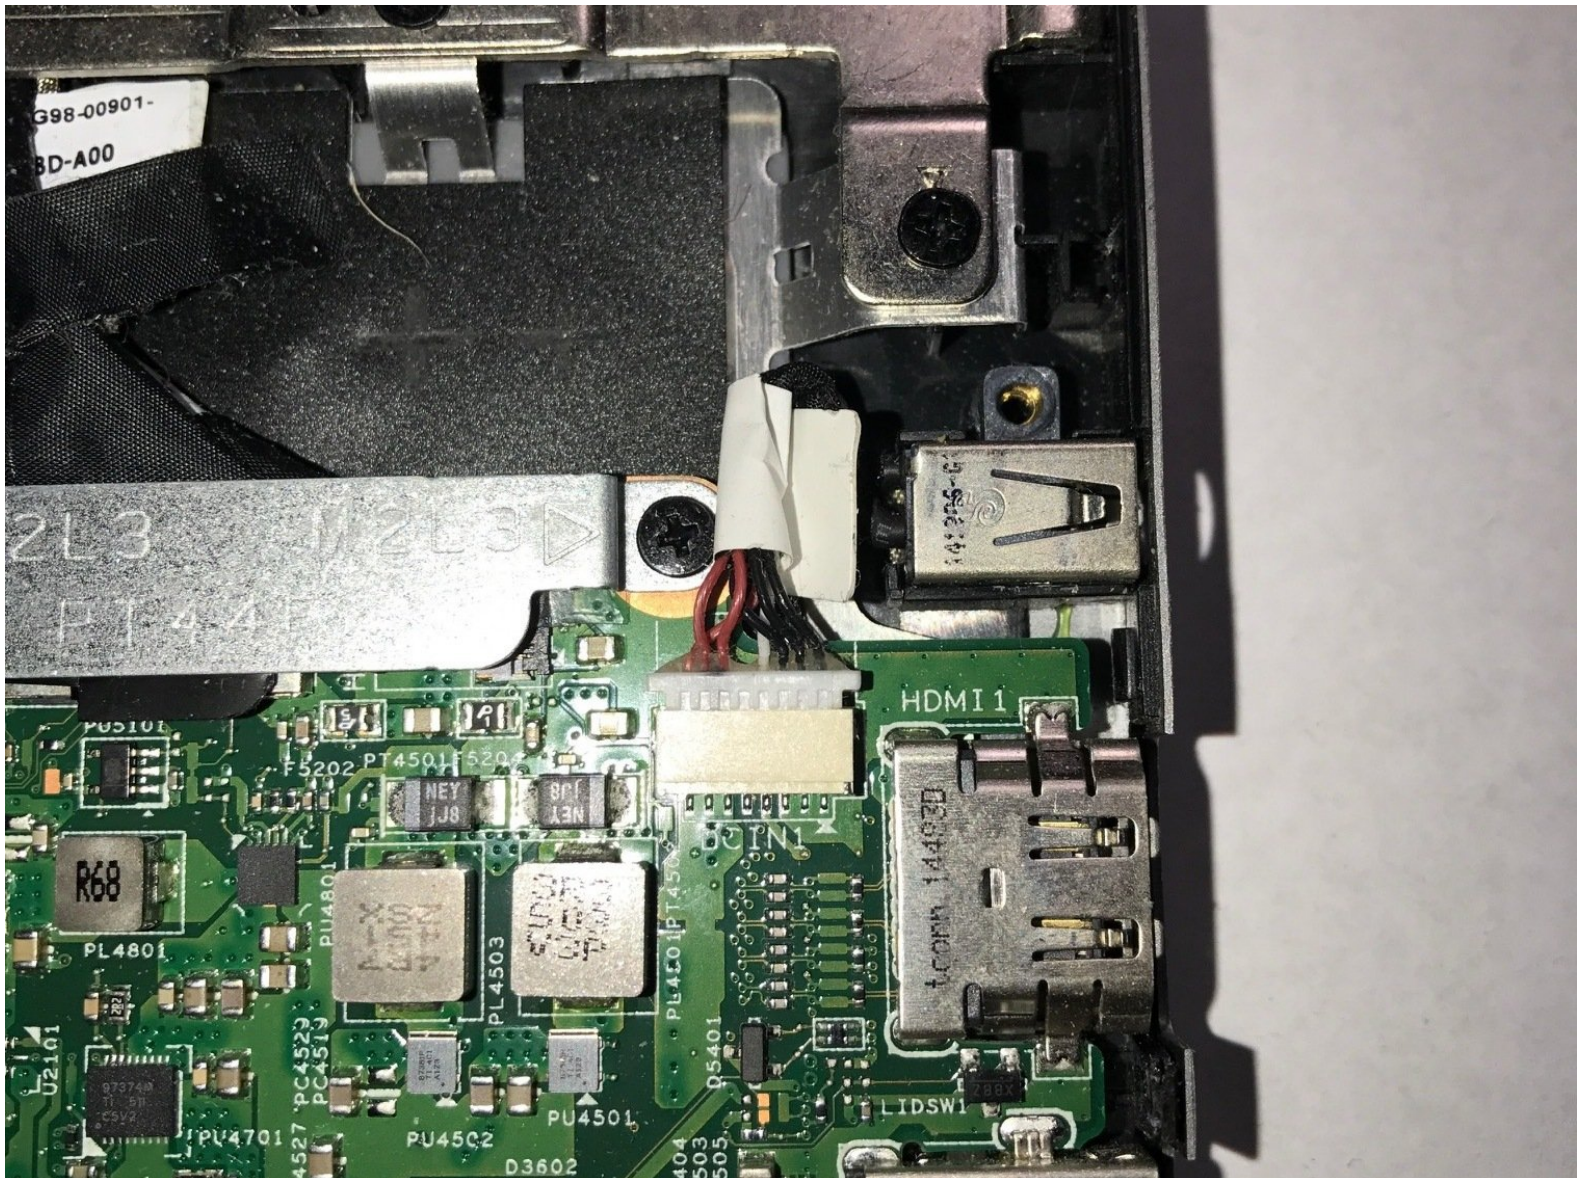

Page 1 of 4

**TOOLS:**

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)


**PARTS:**

- [Dell Inspiron 13-7352 DC POWER JACK HARNESS](#) (1)



 
## Step 1 — Back Panel Removal



 Before disassembling your laptop, be sure it is powered off.

- Remove the ten 7.5mm screws that secure the back panel with the Phillips #0 head
- Use the plastic opening tool to remove the back panel. Start at the back corner and work across. The front edge of the laptop panel hinges and pivots upward after the back edge and the side edges are separated from the casing.

## Step 2

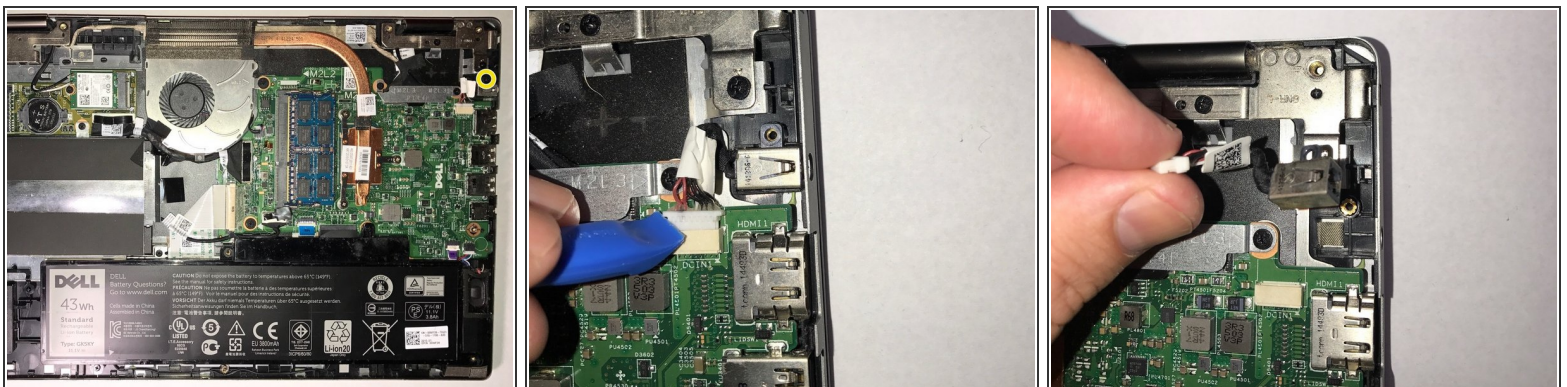

- Remove the one 4mm screw with the Phillips #0 head that hold down the battery.
- Use the plastic opening tool to remove DC Power Jack harness connector from the motherboard.
- Gently remove the DC power jack harness from the device and replace it with a new one.

To reassemble your device, follow these instructions in reverse order.

