


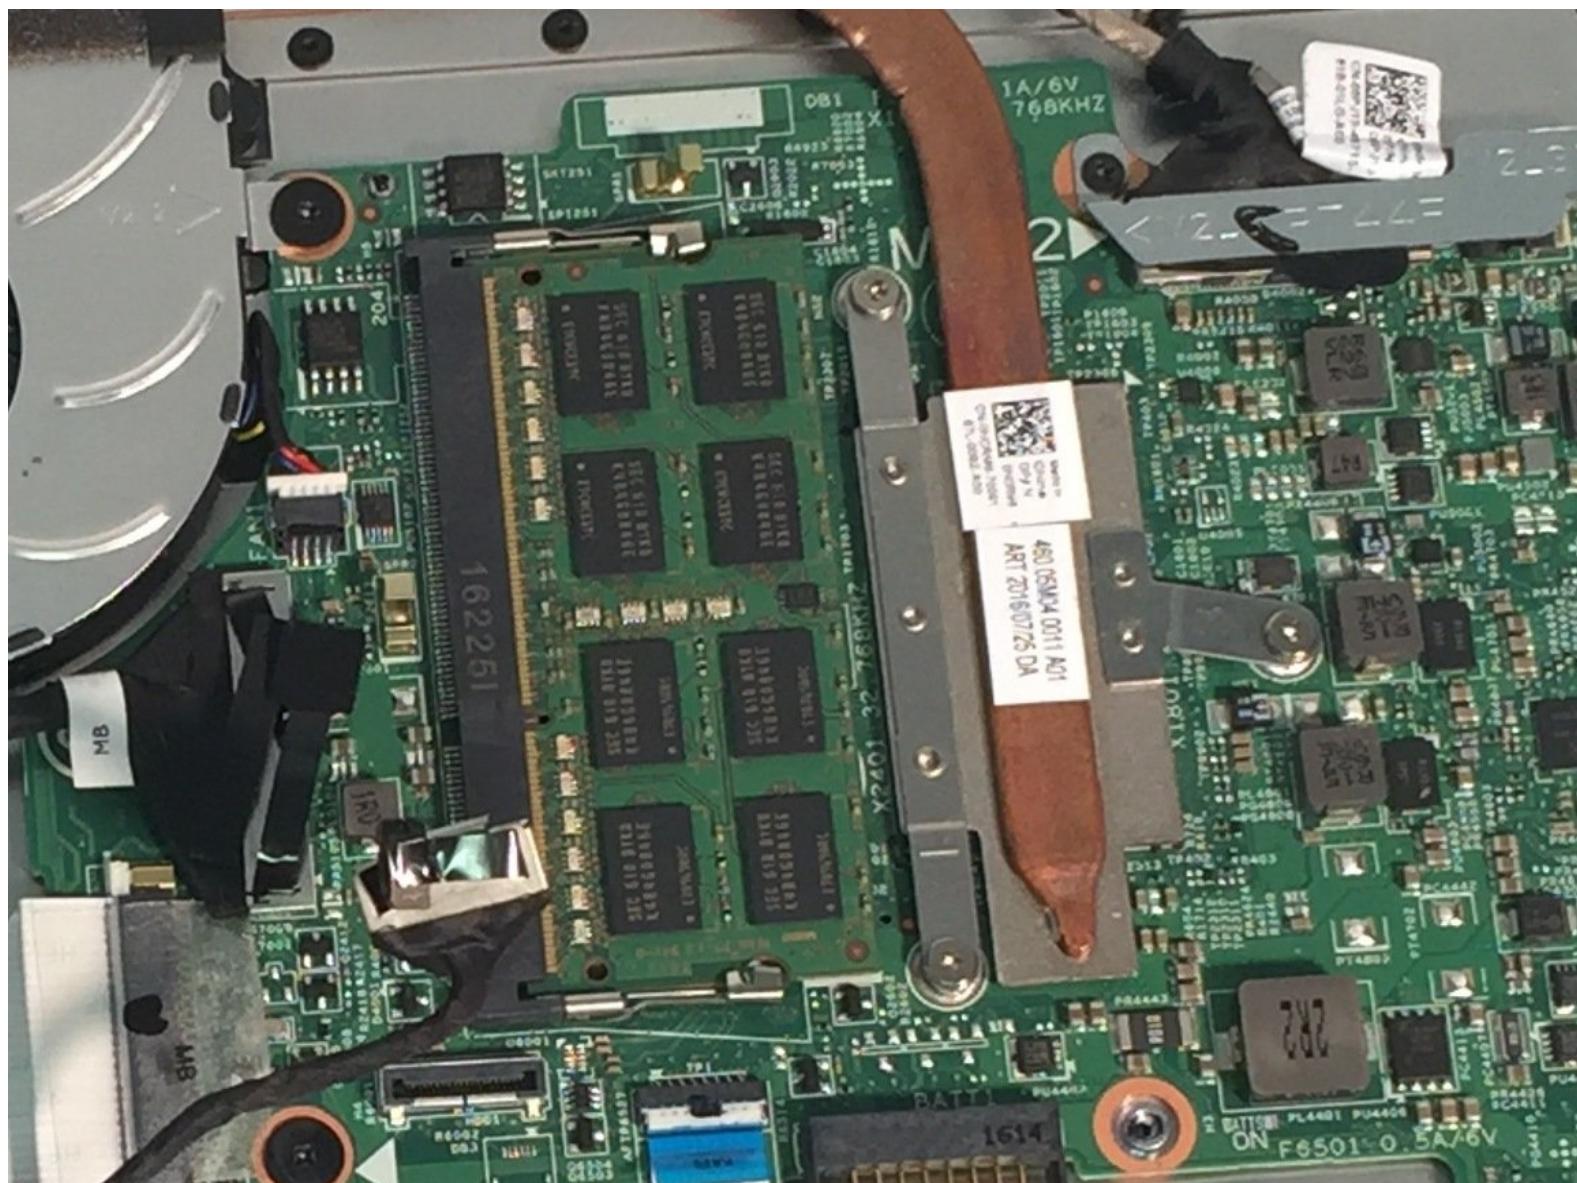

Dell Inspiron 13-7353 RAM Replacement

If you notice your computer programs or computer are slowing, then this guide may be able to help. This guide will show you how to replace the RAM.

Written By: Stephany Marin Restrepo




INTRODUCTION

If you notice your computer programs or computer are slowing, then this guide may be able to help. This guide will show you how to replace the RAM in a few steps.

TOOLS:

- J00 Phillips head screwdriver (1)
- Phillips #0 Screwdriver (1)


Step 1 — Flip the Computer

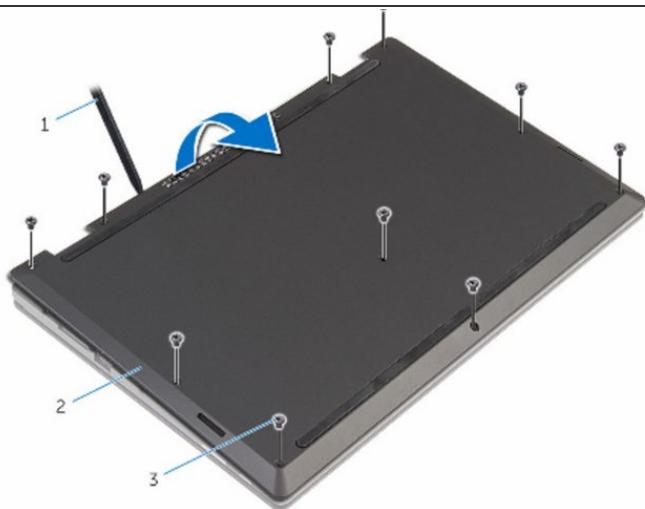

⚠ WARNING : Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer.


- Close the display and turn the computer over

Step 2 — Secure the Base

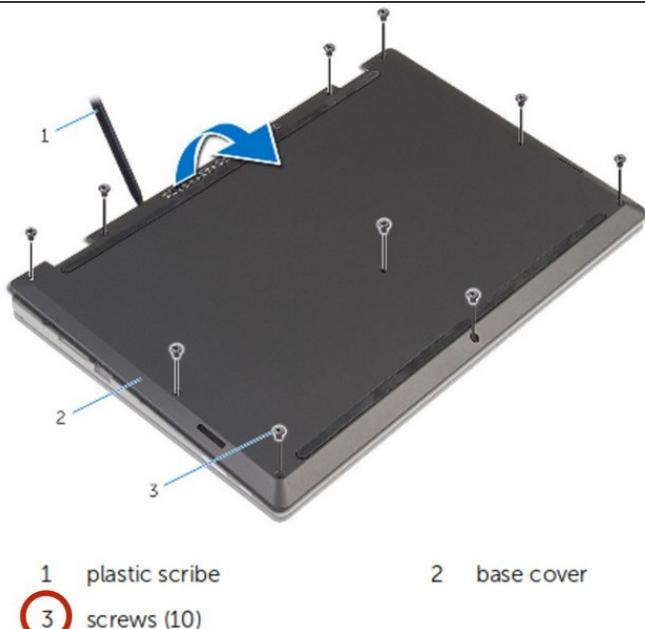


- Remove the screws that secure the base cover to the computer base.

Step 3 — Pry the Base cover

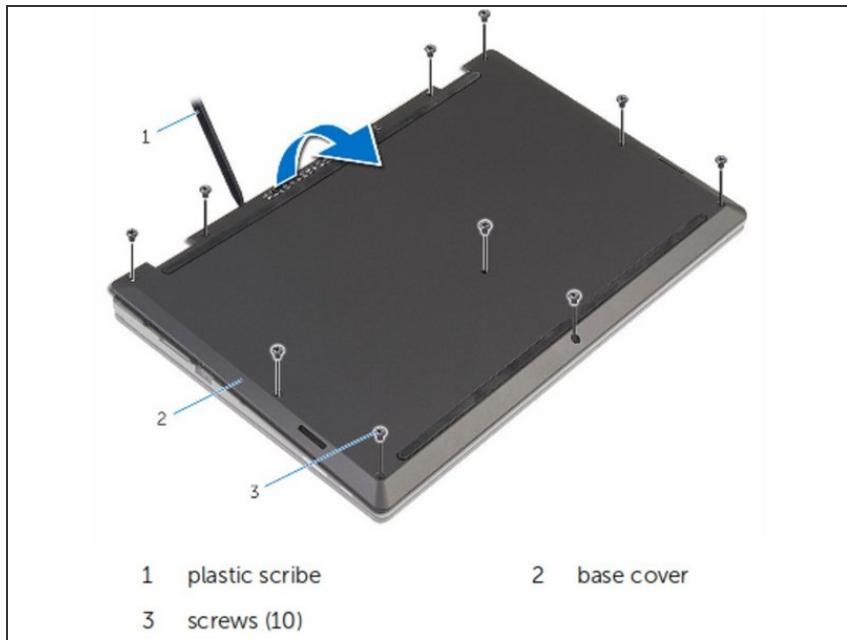



- Using a plastic scribe (plastic opening tool), pry the base cover off the computer base.

Step 4 — RAM

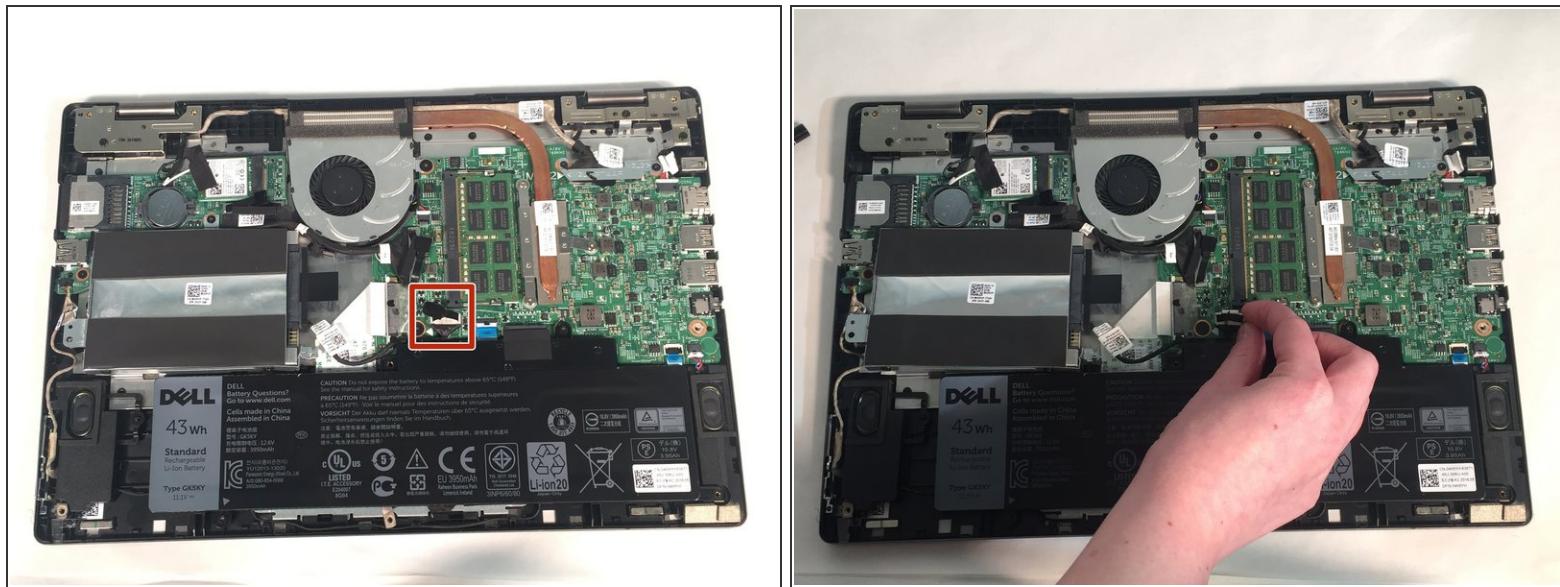




- Before opening device, ensure that all data is backed up on a hard drive to prevent data loss.
- Loosen and then unplug the hard drive cable.

Step 5

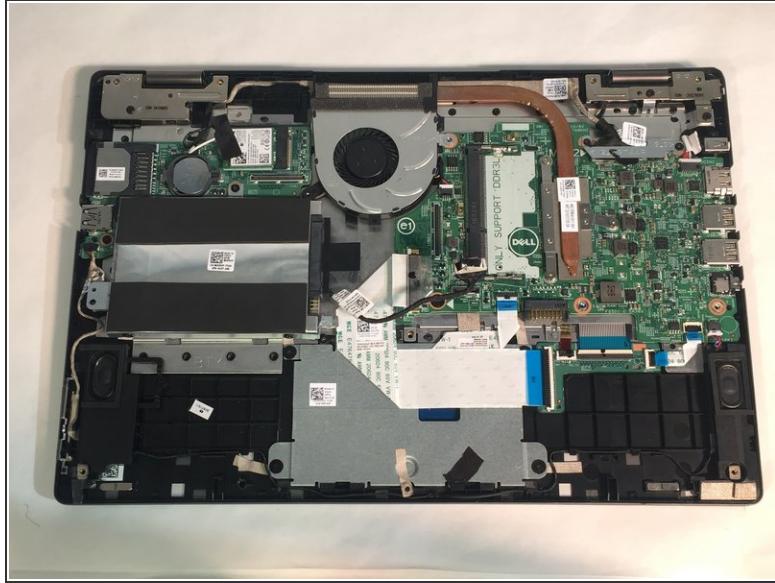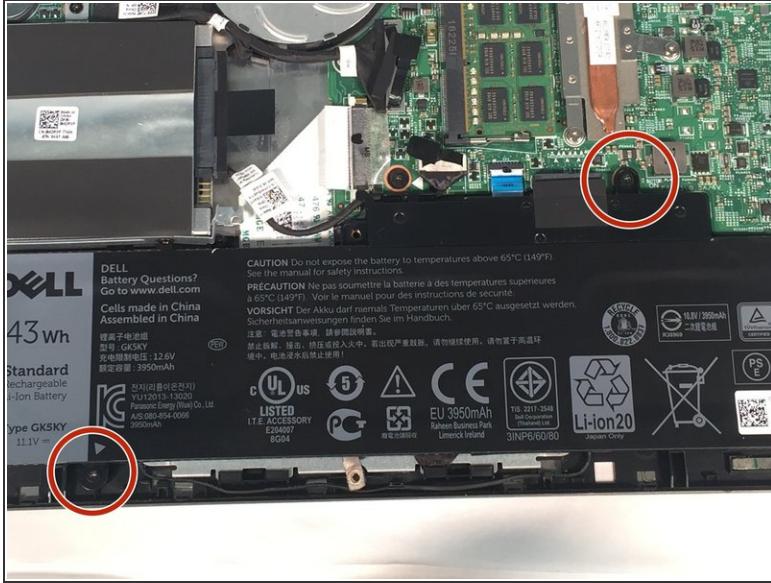

- Remove 2 M2 3mm screws, using the Phillips 1 screwdriver.
- Remove the battery.

Step 6

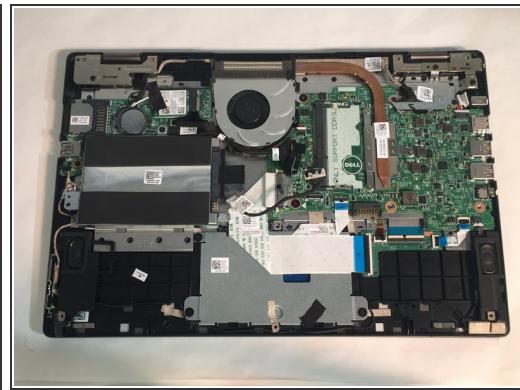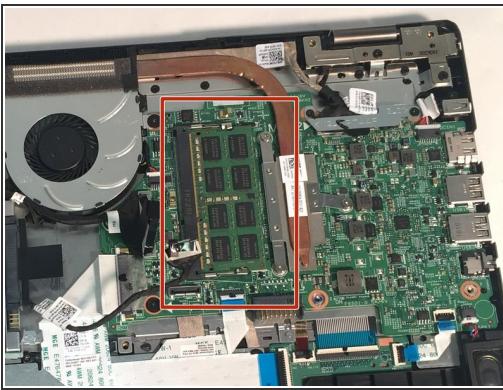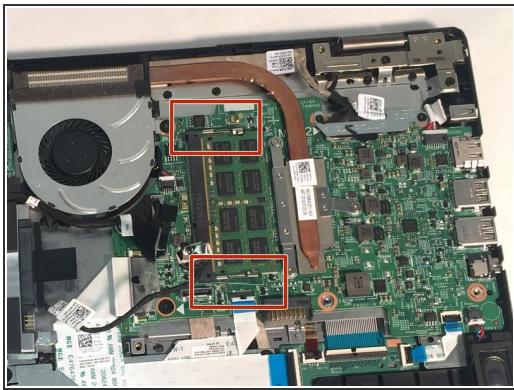

- Pry open the clips and remove the RAM.

To reassemble your device, follow these instructions in reverse order.