



Dell Inspiron 13-7353 Screen Replacement

This guide will help you accomplish replacing the screen of the dell inspiron 13 7353 screen replacement.

Written By: Stephany Marin Restrepo




INTRODUCTION

If you notice your computer screen is damaged and needs to be replaced, this guide may be able to help. This guide will show you how to replace the display screen in a few steps.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-


Step 1 — Flip the Computer

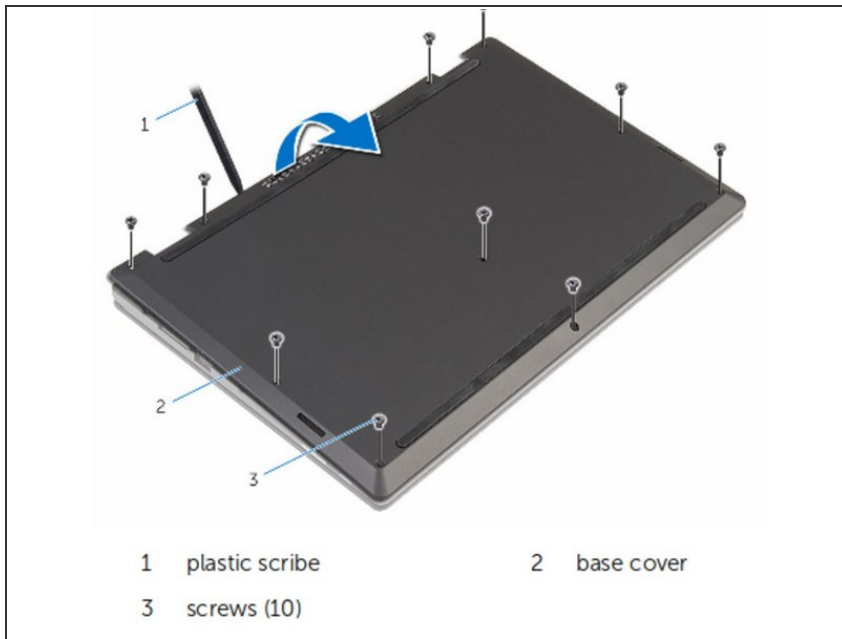

WARNING : Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer . After working inside your computer, follow the instructions in After working inside your computer.


- Close the display and turn the computer over

Step 2 — Secure the Base

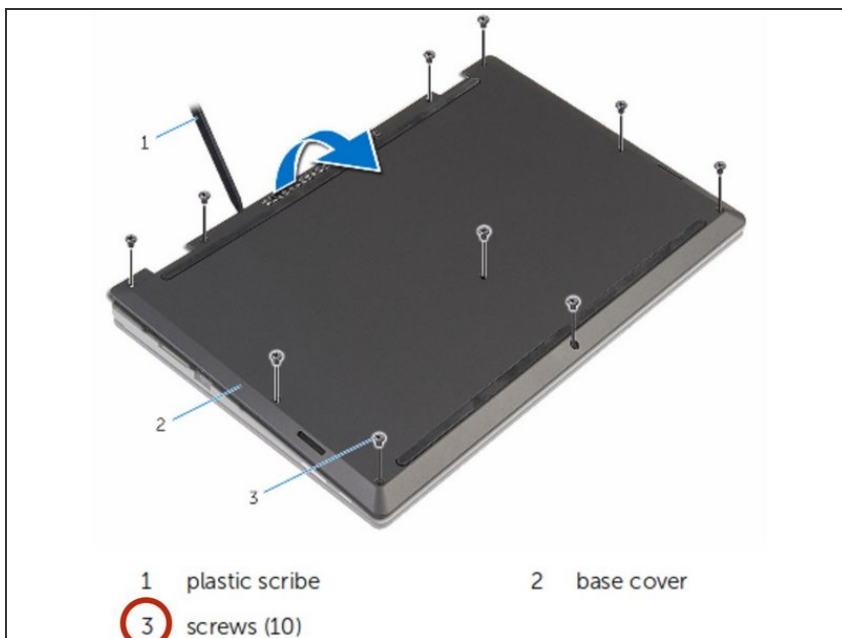



- Remove the screws that secure the base cover to the computer base.

Step 3 — Pry the Base cover

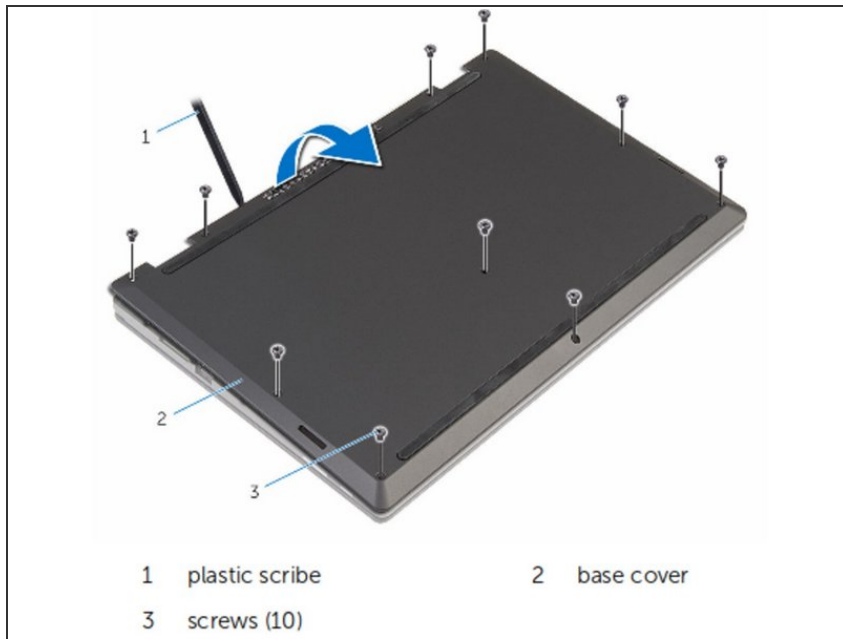



- Using a plastic scribe (plastic opening tool), pry the base cover off the computer base.

Step 4 — RAM

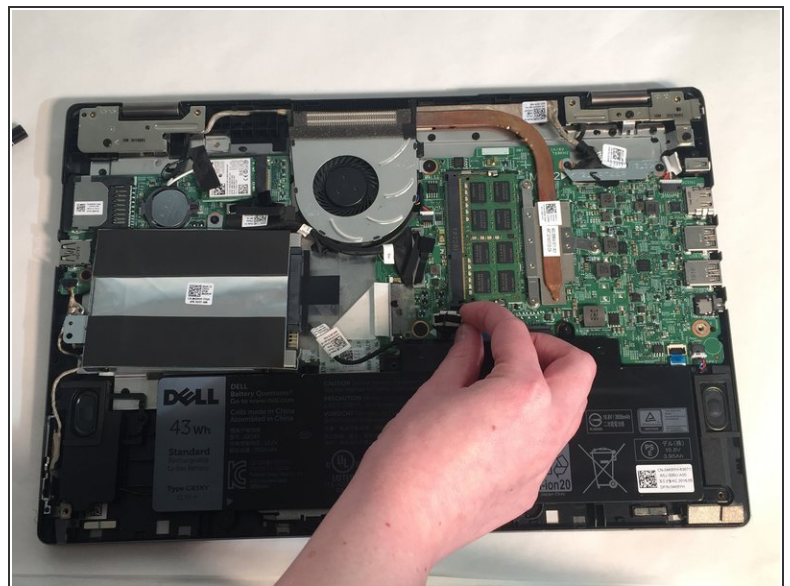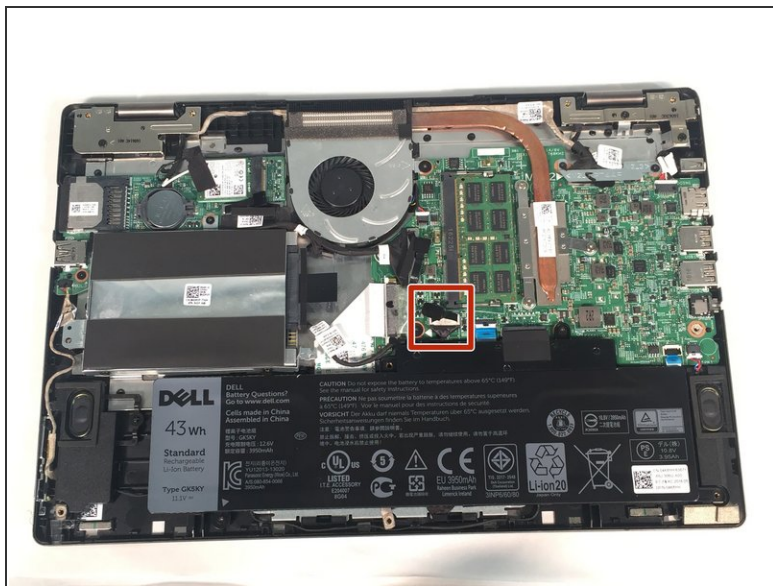




- ⓘ Before opening device, ensure that all data is backed up on a hard drive to prevent data loss.
- Loosen and then unplug the hard drive cable.

Step 5

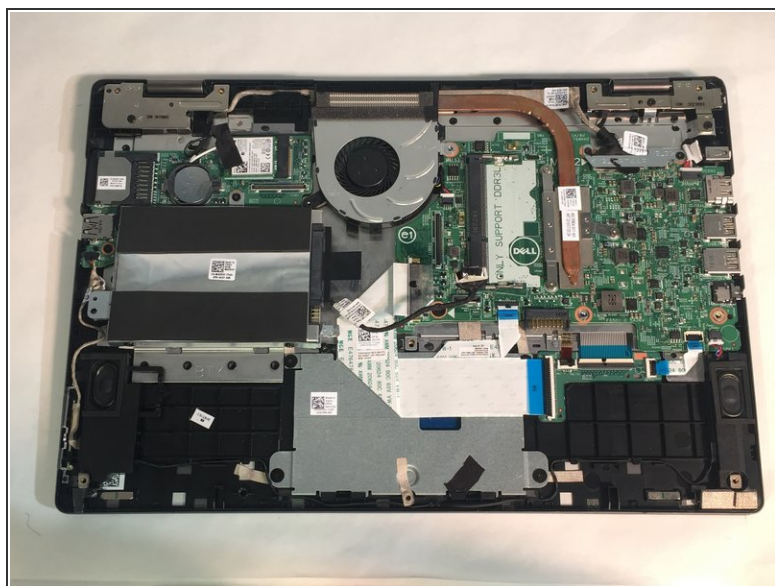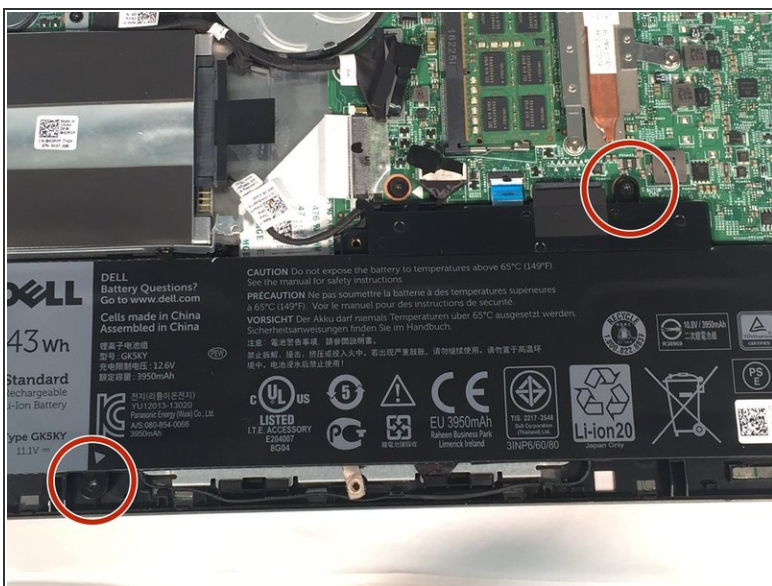




- Remove 2 M2 3mm screws, using the Phillips 1 screwdriver.
- Remove the battery.

Step 6

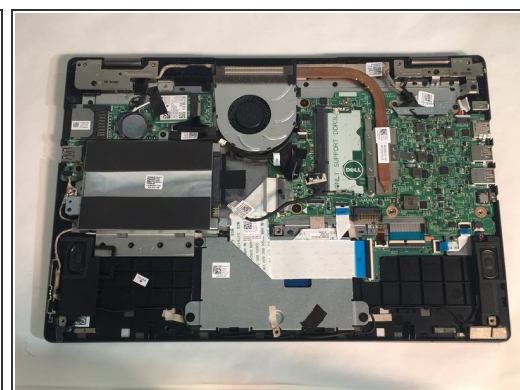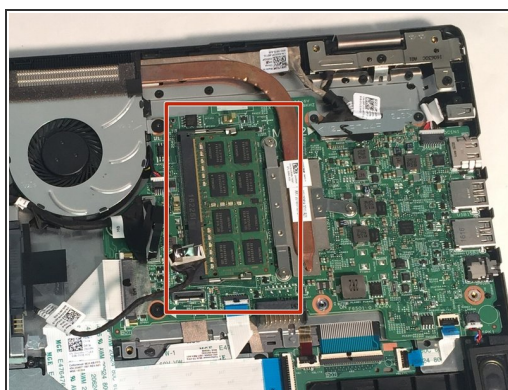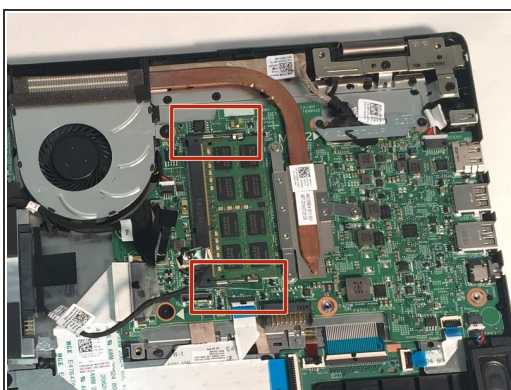




- Pry open the clips and remove the RAM.

Step 7 — Fan

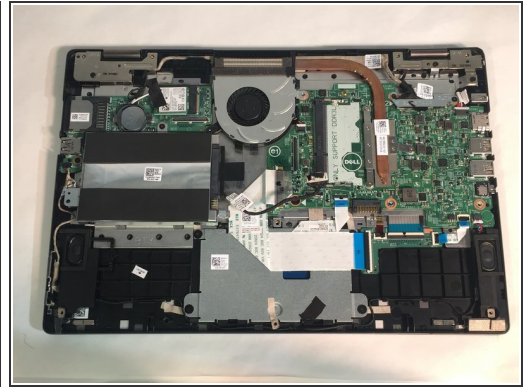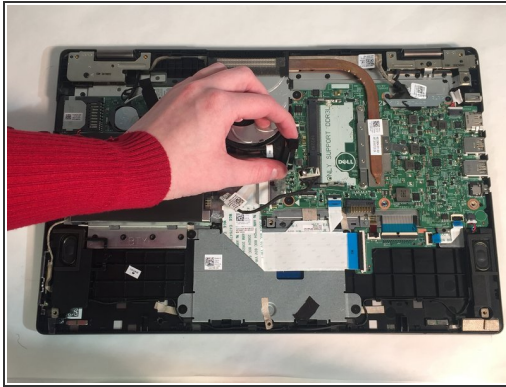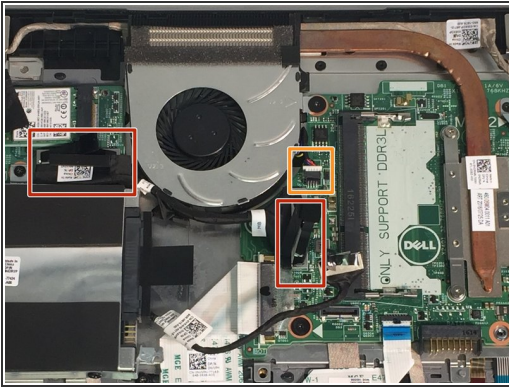




- Unplug the daughter board cable in two places marked in red, then remove it.
- Unplug the fan cable marked in orange.

Step 8

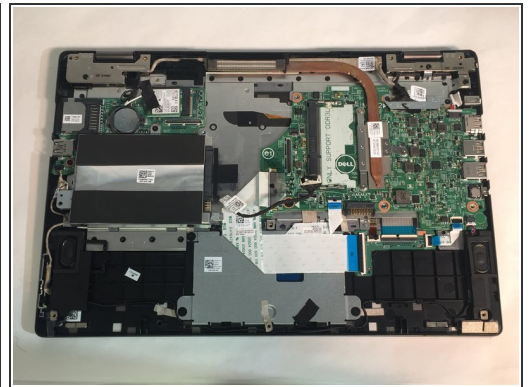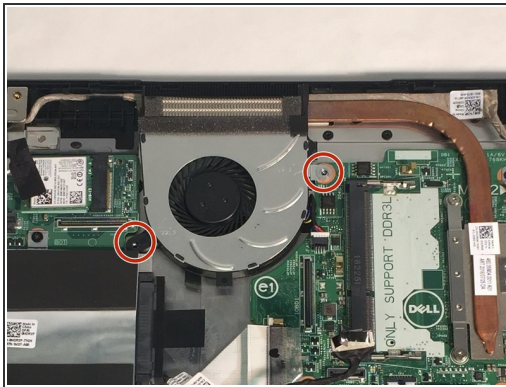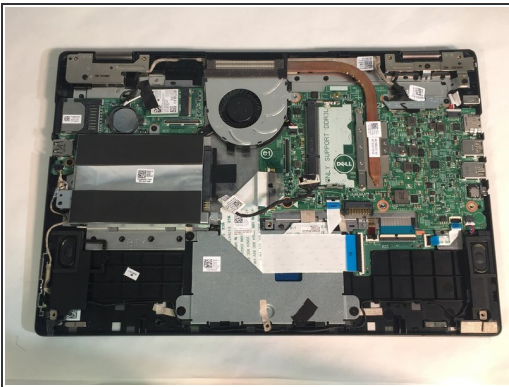




- Remove 1 MR 3mm screw, using the Phillips 1 screwdriver, on the cooling fan.
- Remove 1 M2 2mm wafer screw, using the Phillips 1 screwdriver, on the cooling fan.
- Remove the cooling fan.

Step 9 — Heat Sink

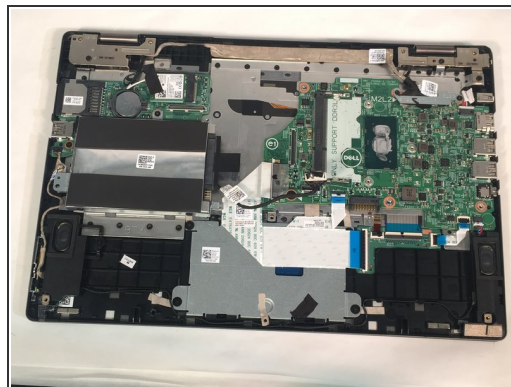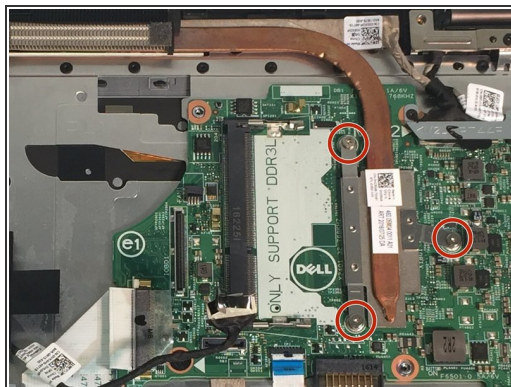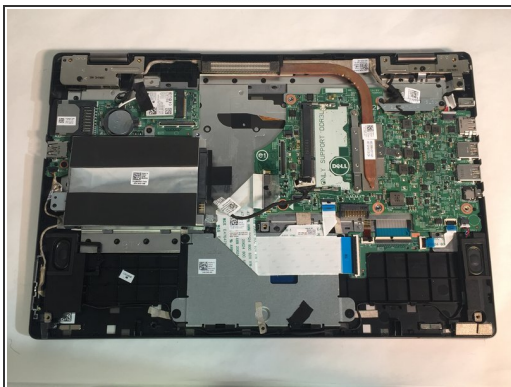




- Remove 3 M2 2mm screws, using the Phillips 0 screwdriver, on the heat sink.
- Remove the heat sink.

Step 10 — Screen

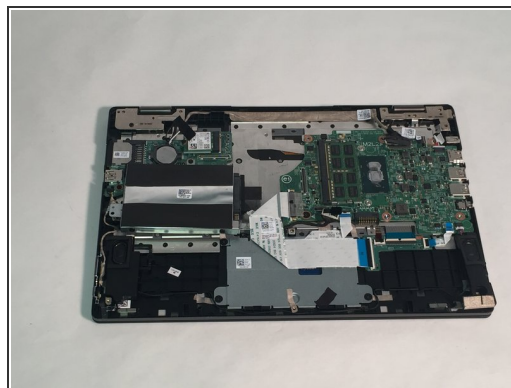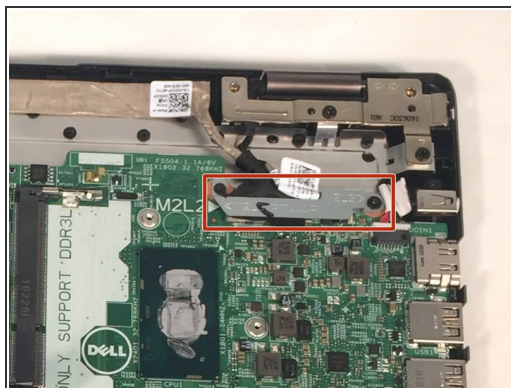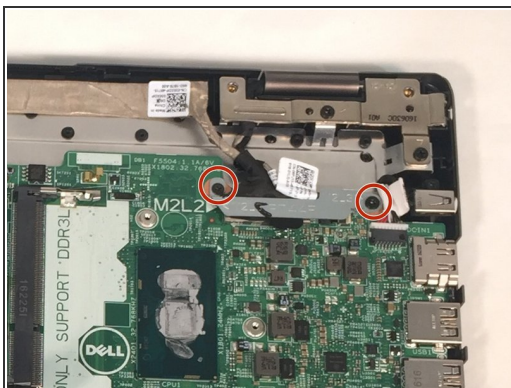




- Remove the screws from the LCD cable bracket.
- Remove the LCD cable bracket.

Step 11

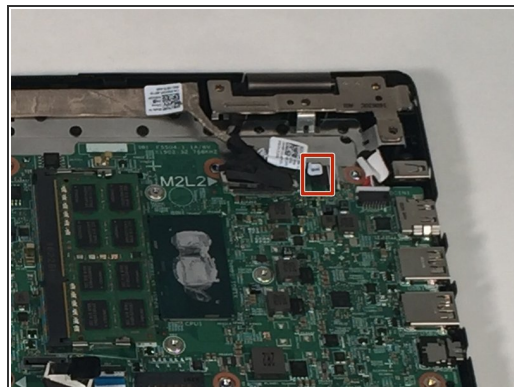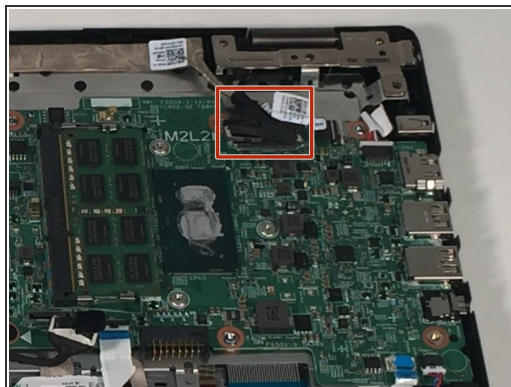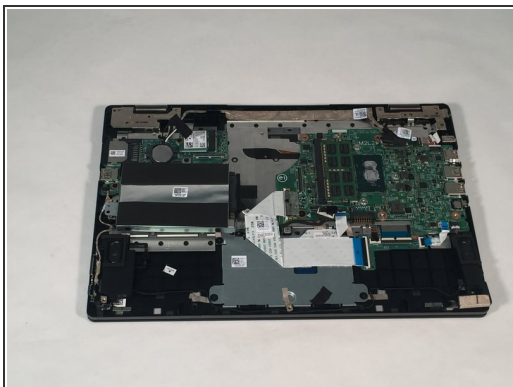



- Unplug the LCD cable.
- Unplug the touchscreen cable.

Step 12

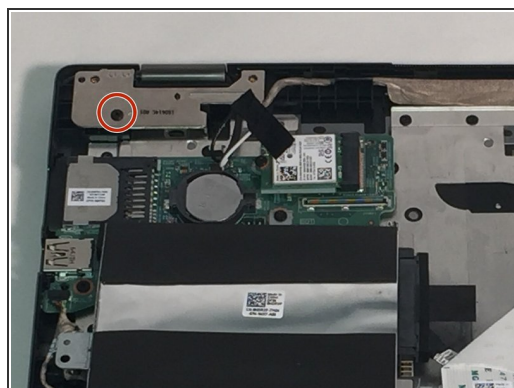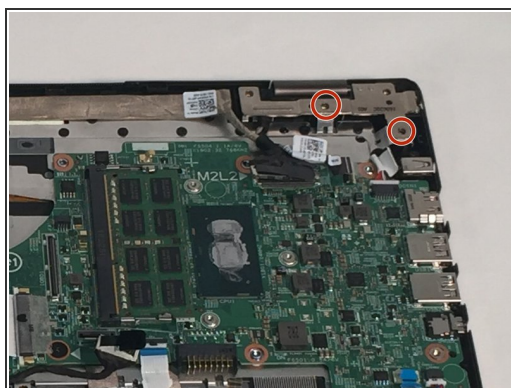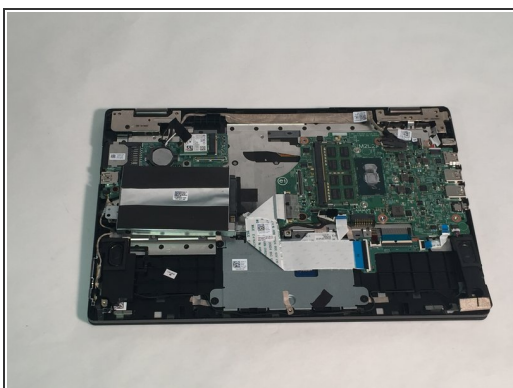



- Unscrew 2 M2.5 7mm screws, using the Phillips 1 screwdriver, on the right screen hinge.
- Unscrew 1 M2.5 7mm screw, using the Phillips 1 screwdriver, on the left screen hinge.

Step 13

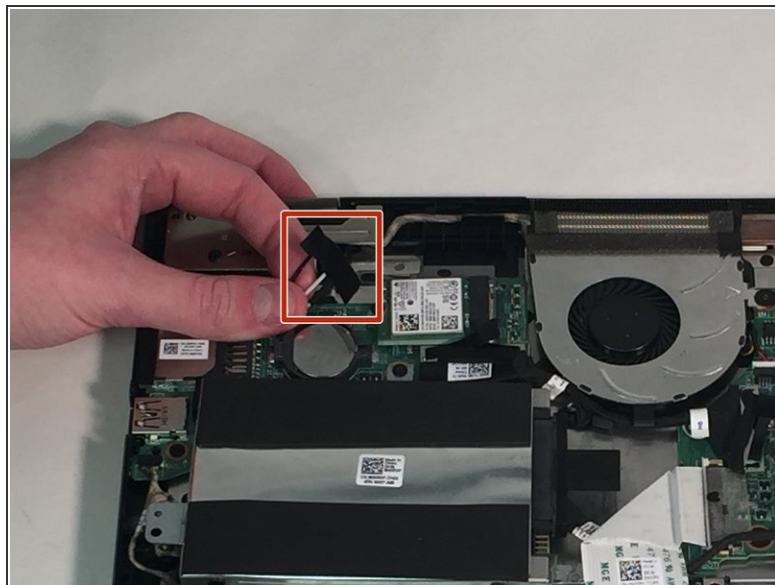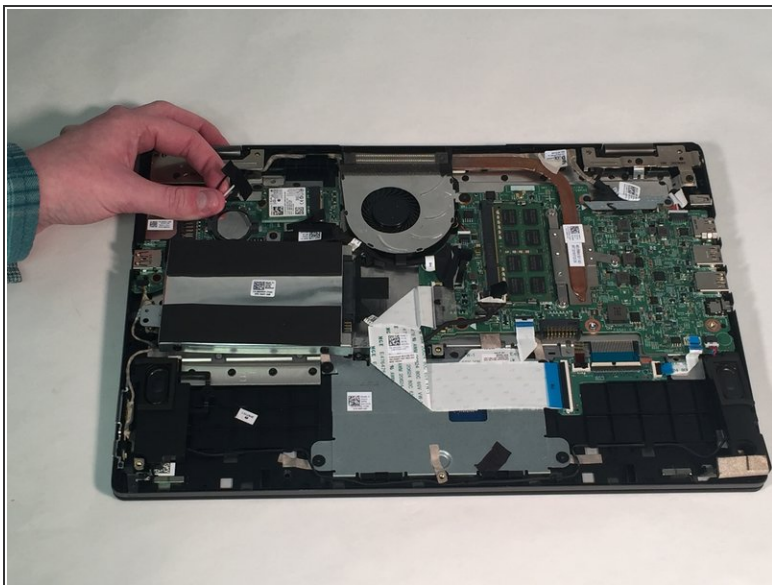

- Carefully undo the tape
- Unplug the two black and white wire leads

Step 14

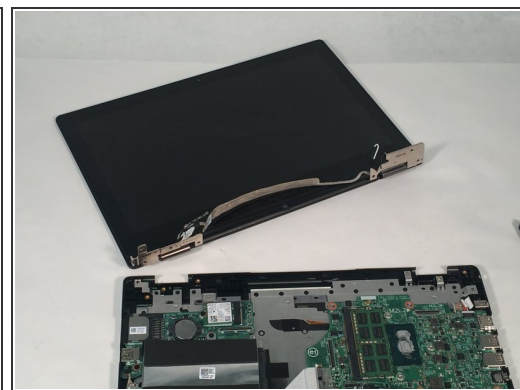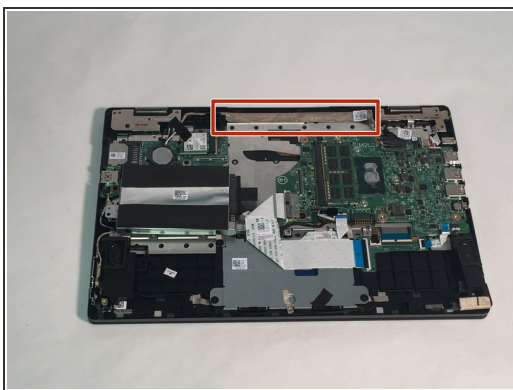

- i** Carefully remove the tape that is attached to the screen by prying it off with your fingers.
- Remove the tape outlined in red.
 - Adjust the screen so that the laptop is open flat against the surface.
 - Remove the LCD display screen by pulling it gently away from the back.

To reassemble your device, follow these instructions in reverse order.