




# Dell Inspiron 13-7359 Speaker Replacement

This guide will teach you how to replace a malfunctioning speaker.

Written By: Katie Ragsdale

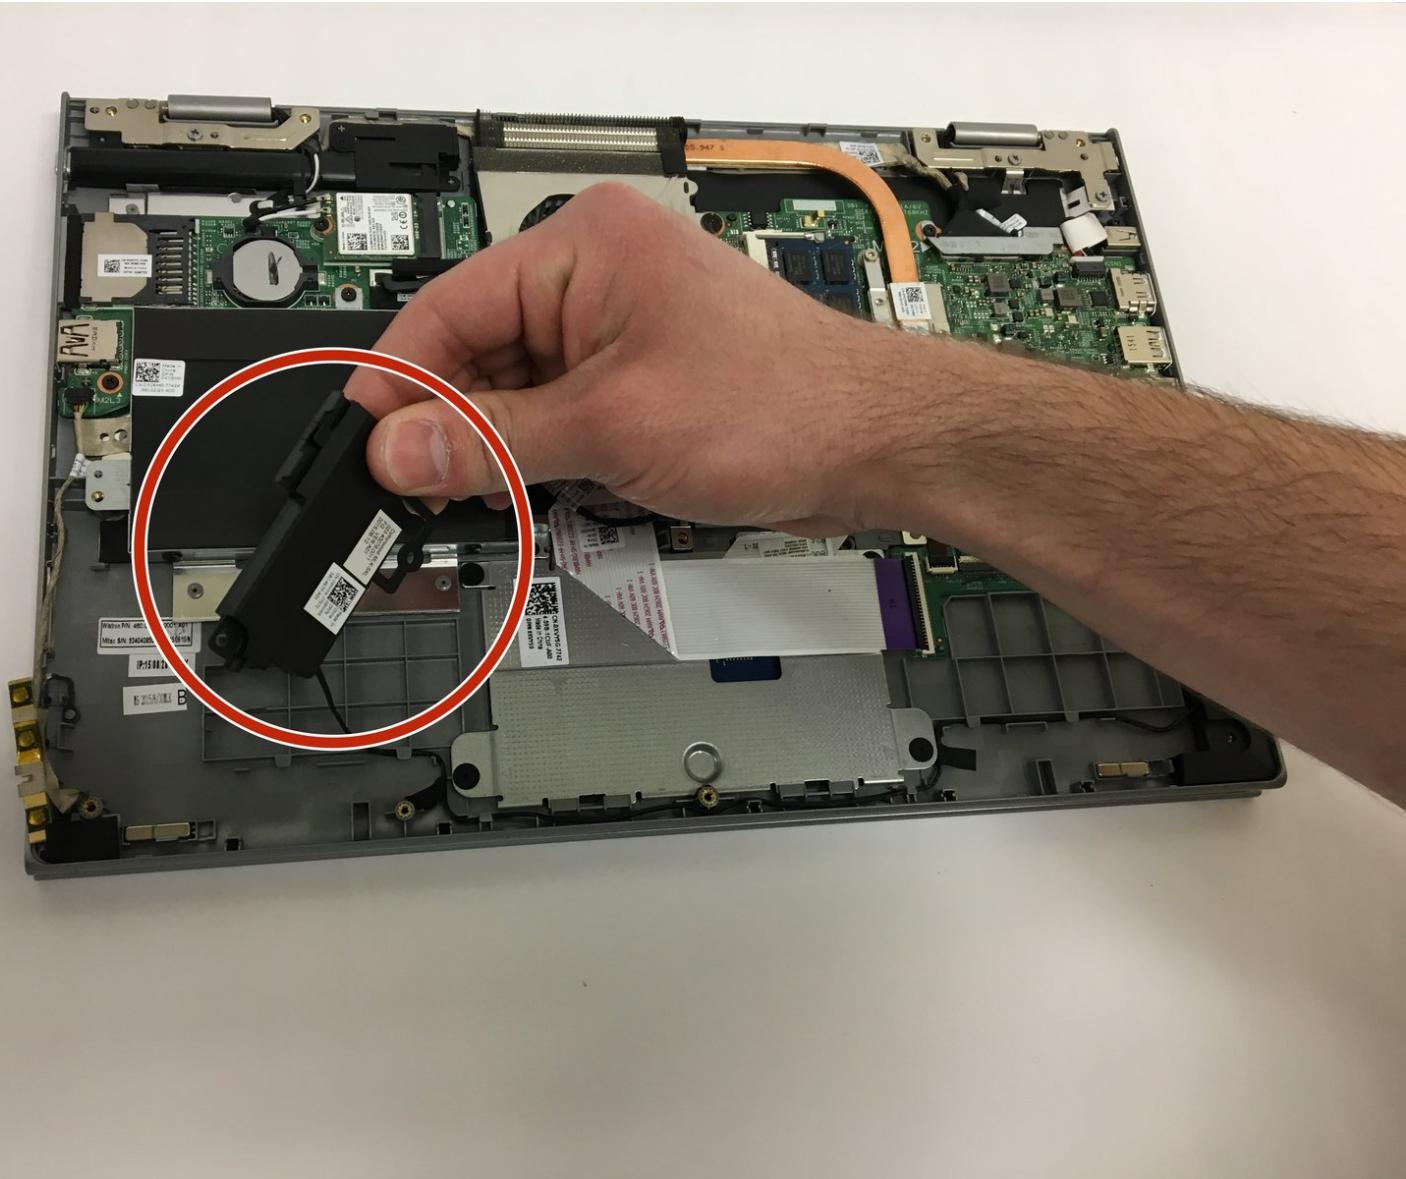


## INTRODUCTION

This guide will give you step by step instructions to removing your Dell Inspiron 13-7359 laptop speaker. You will need a phillips head #0 screwdriver and a plastic spudger.

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Battery

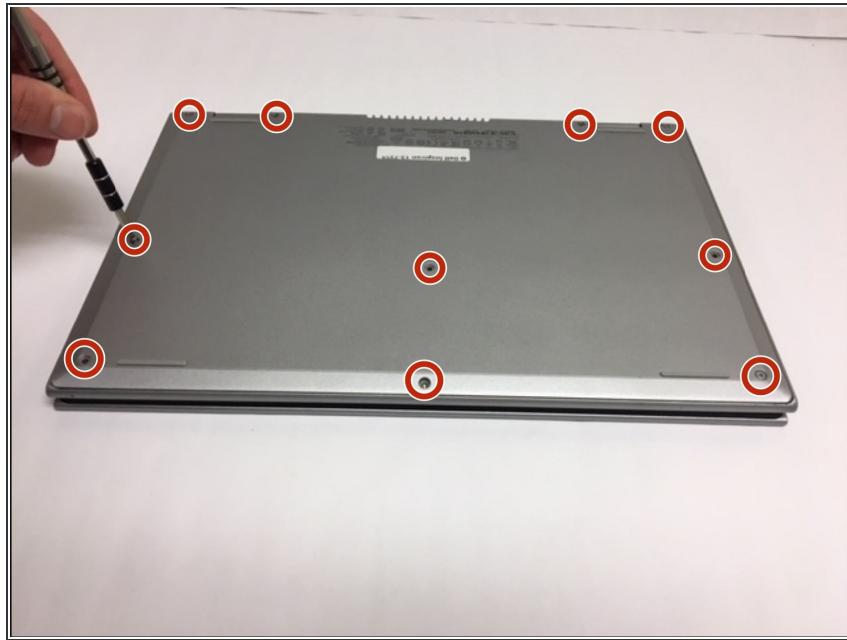


- First flip over the laptop to expose the back panel
- Use a Phillips #0 screwdriver to unscrew all ten 7mm Phillips head screws holding the back panel in place.

## Step 2



- With a plastic spudger, carefully remove the back panel by prying each corner off individually
- Slowly pick up the panel and set it aside

## Step 3

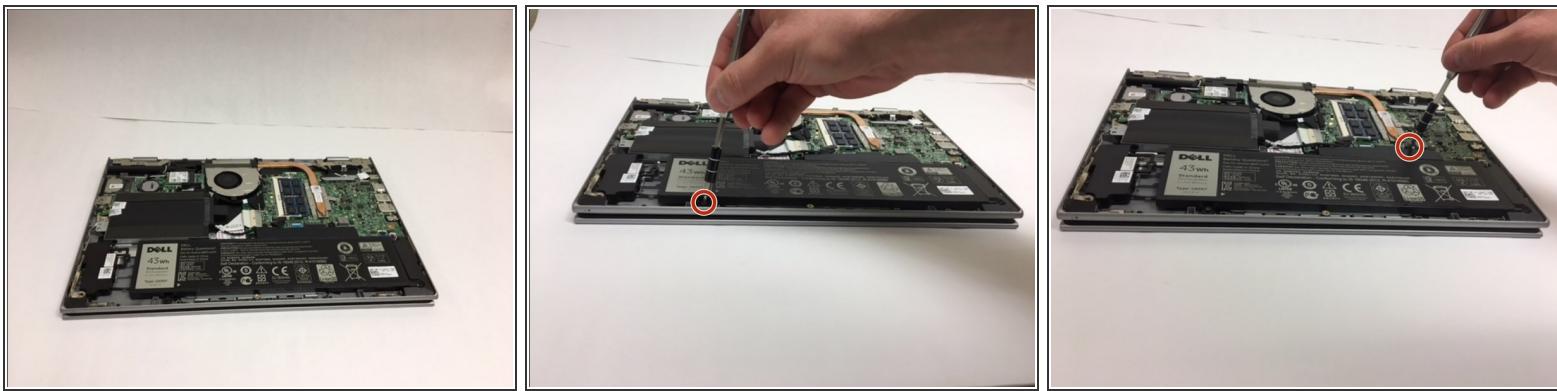


- The battery will be the largest black component in the device located near the bottom edge. Using a Phillips #0 screwdriver, unscrew the two 3mm Phillips head screws holding in the battery.

## Step 4





- To remove the old battery, slightly lift the bottom edge of the battery with your hands
- Now slowly pull the battery towards you to fully detach the battery

## Step 5 — Speaker

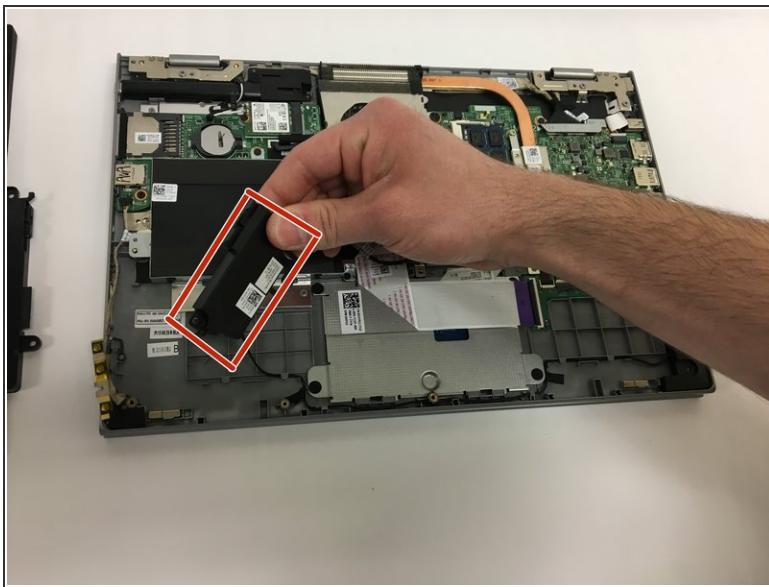


- Following the removal of the Battery, remove the left speaker.
- As you lift the left speaker, carefully lift the wire that connects the left and right speakers.

## Step 6

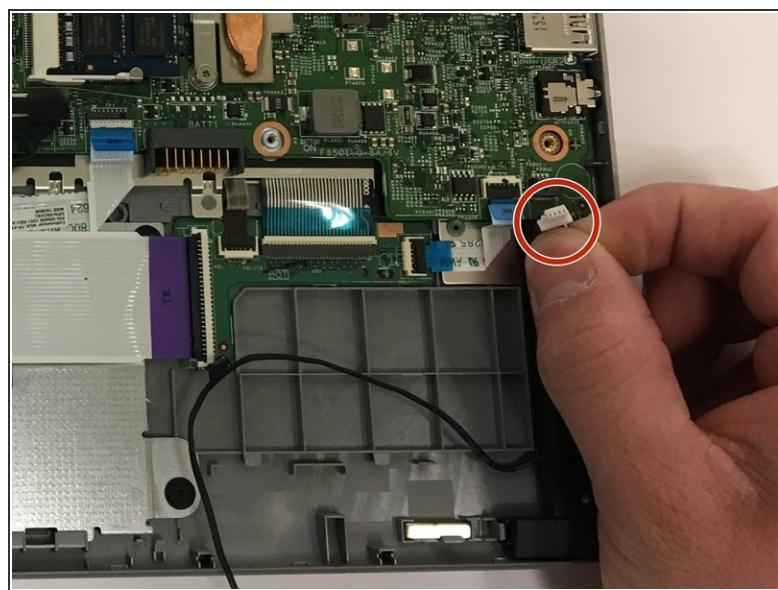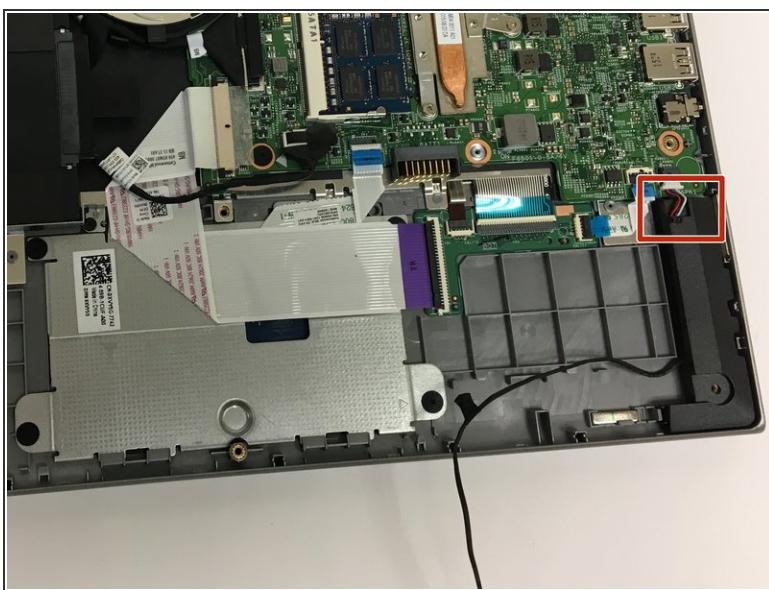

- Disconnect the small wires attached to the top of the right side speaker as marked in the photo.

## Step 7

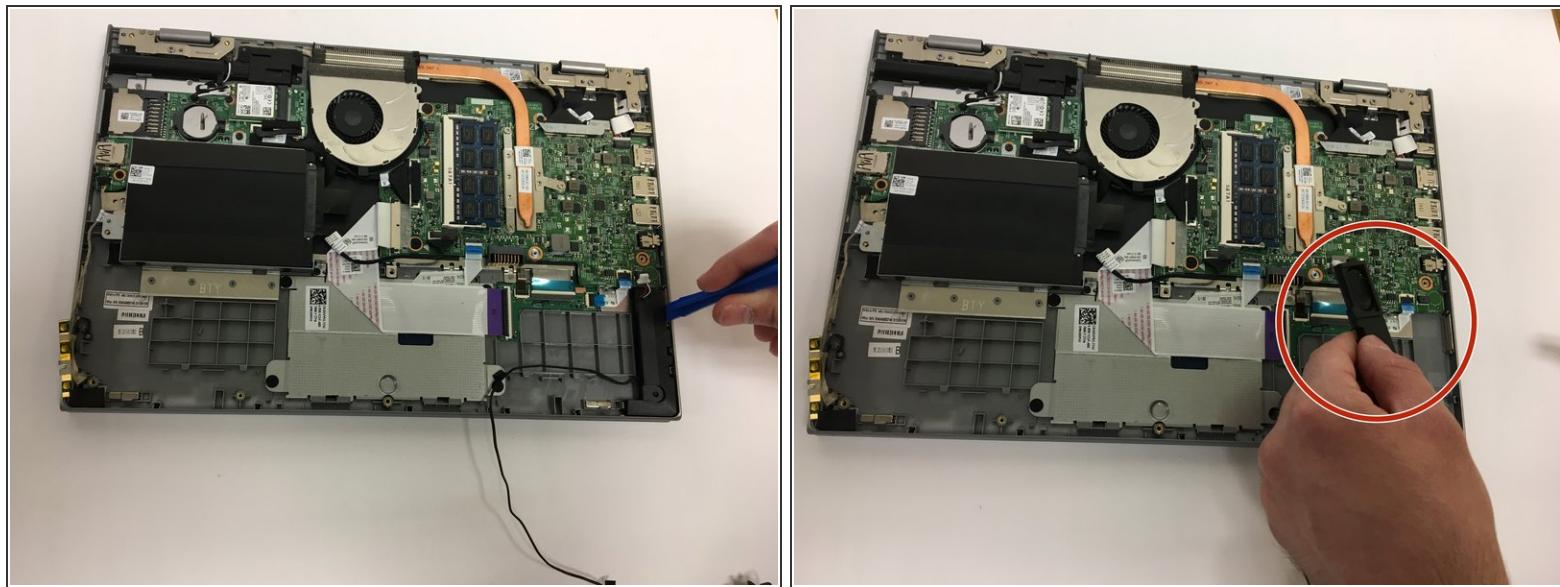

- Use the plastic spudger to safely and easily detach the right speaker from the device.
- Lift the right speaker out to complete the removal.

To reassemble your device, follow these instructions in reverse order.