




Dell Inspiron 14 3468 Battery Replacement


Written By: darrius

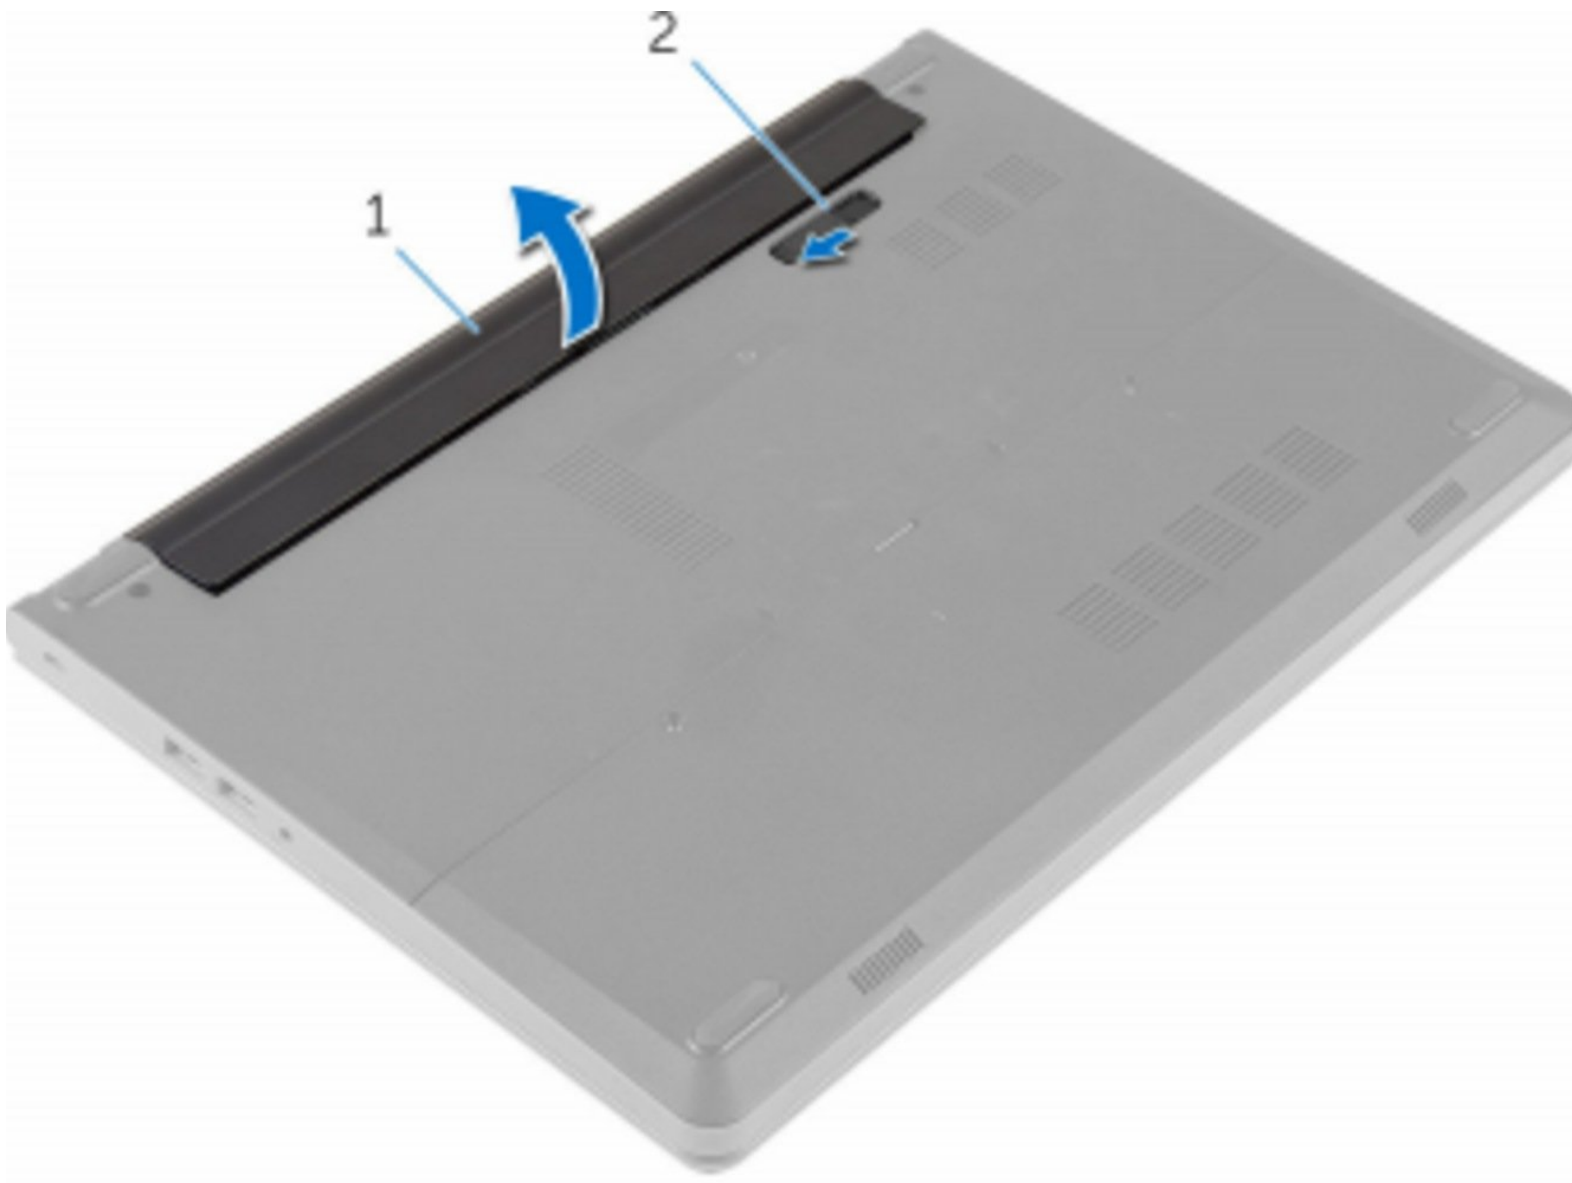

INTRODUCTION


How to remove and replace the Battery.

Step 1 — Turning over the Computer

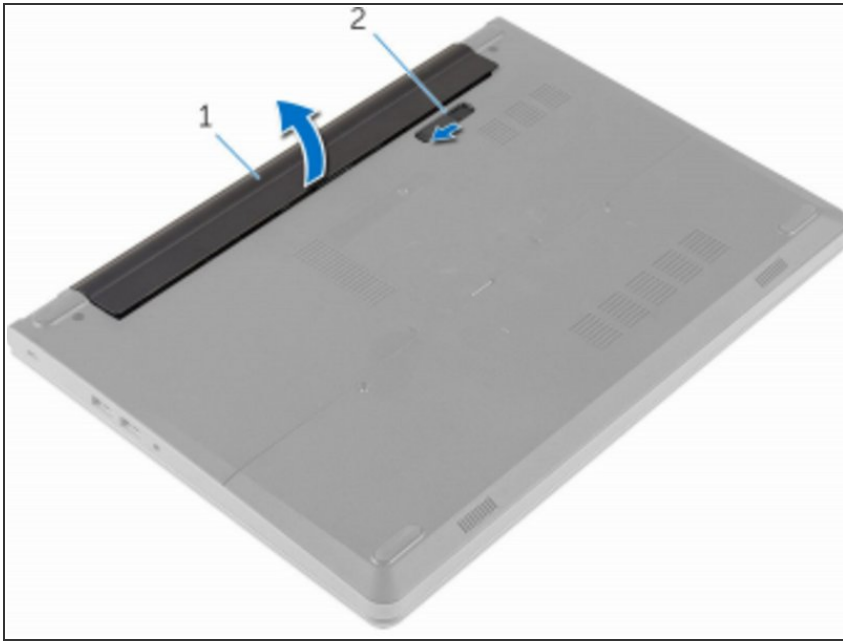


- Close the display and turn the computer over.

Step 2 — Sliding the Battery

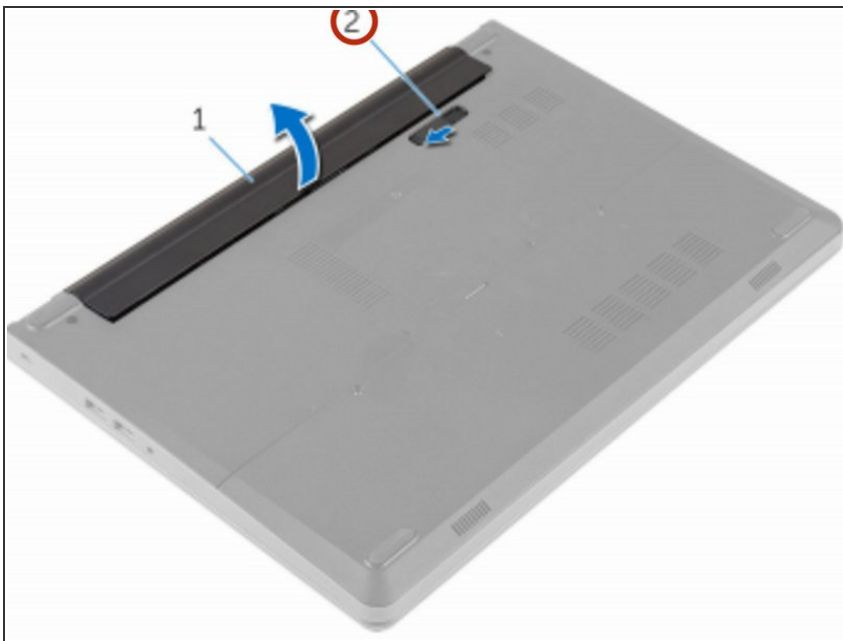


- Slide the battery-release latch to the unlocked position.

Step 3 — Lifting the Battery

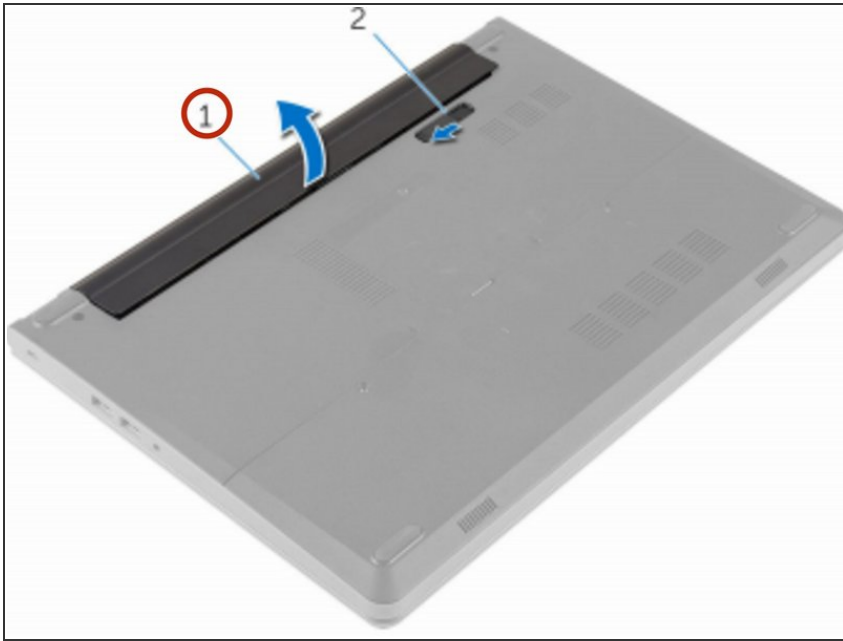


- Lift the battery at an angle and remove it from the battery bay.

Step 4 — Turning the Computer Over

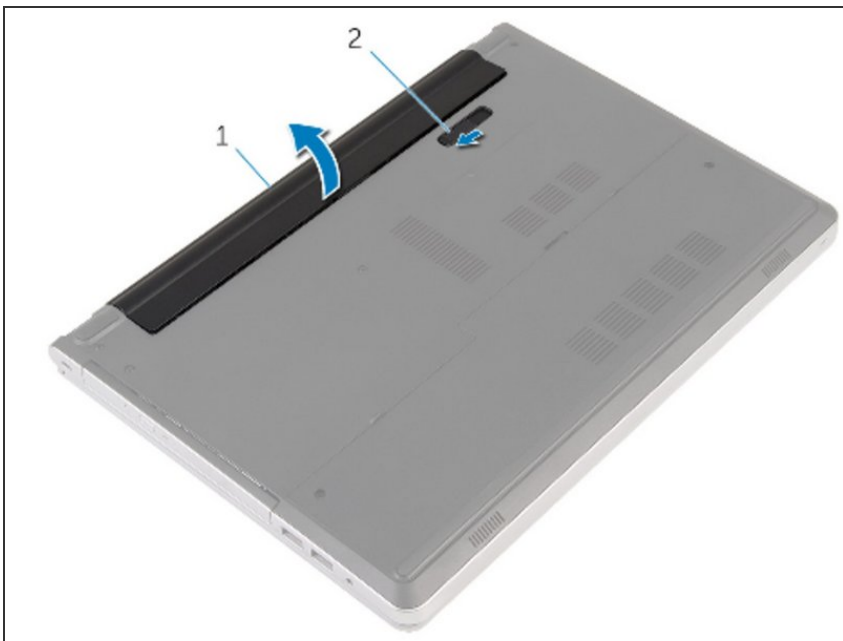

- Turn the computer over and open the display.

Step 5 — Grounding the System Board

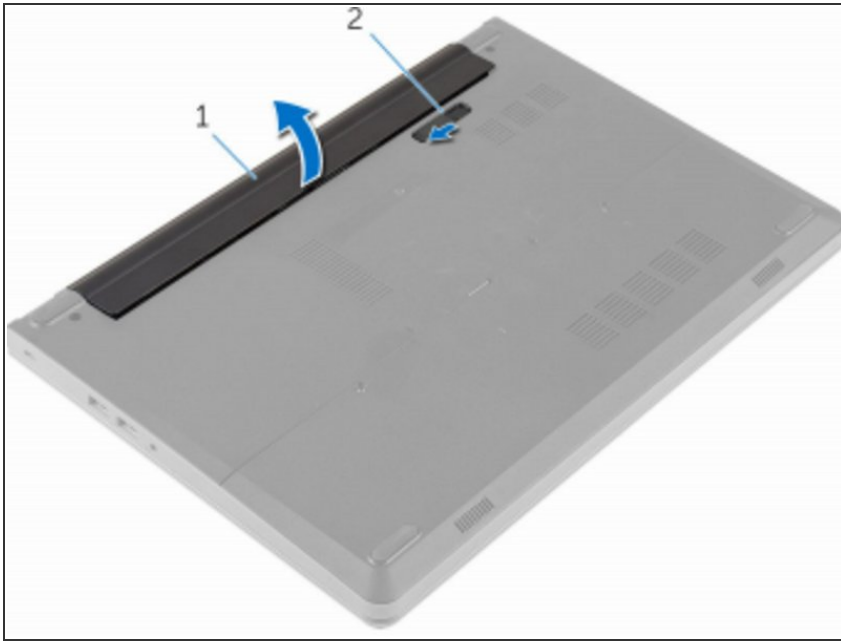

- Press and hold the power button for 5 seconds to ground the system board.