




# Dell Inspiron 14 5100 Disassembly

Cover Disassembly of Dell Inspiron 14 5100

Written By: Ting-Hao Lao

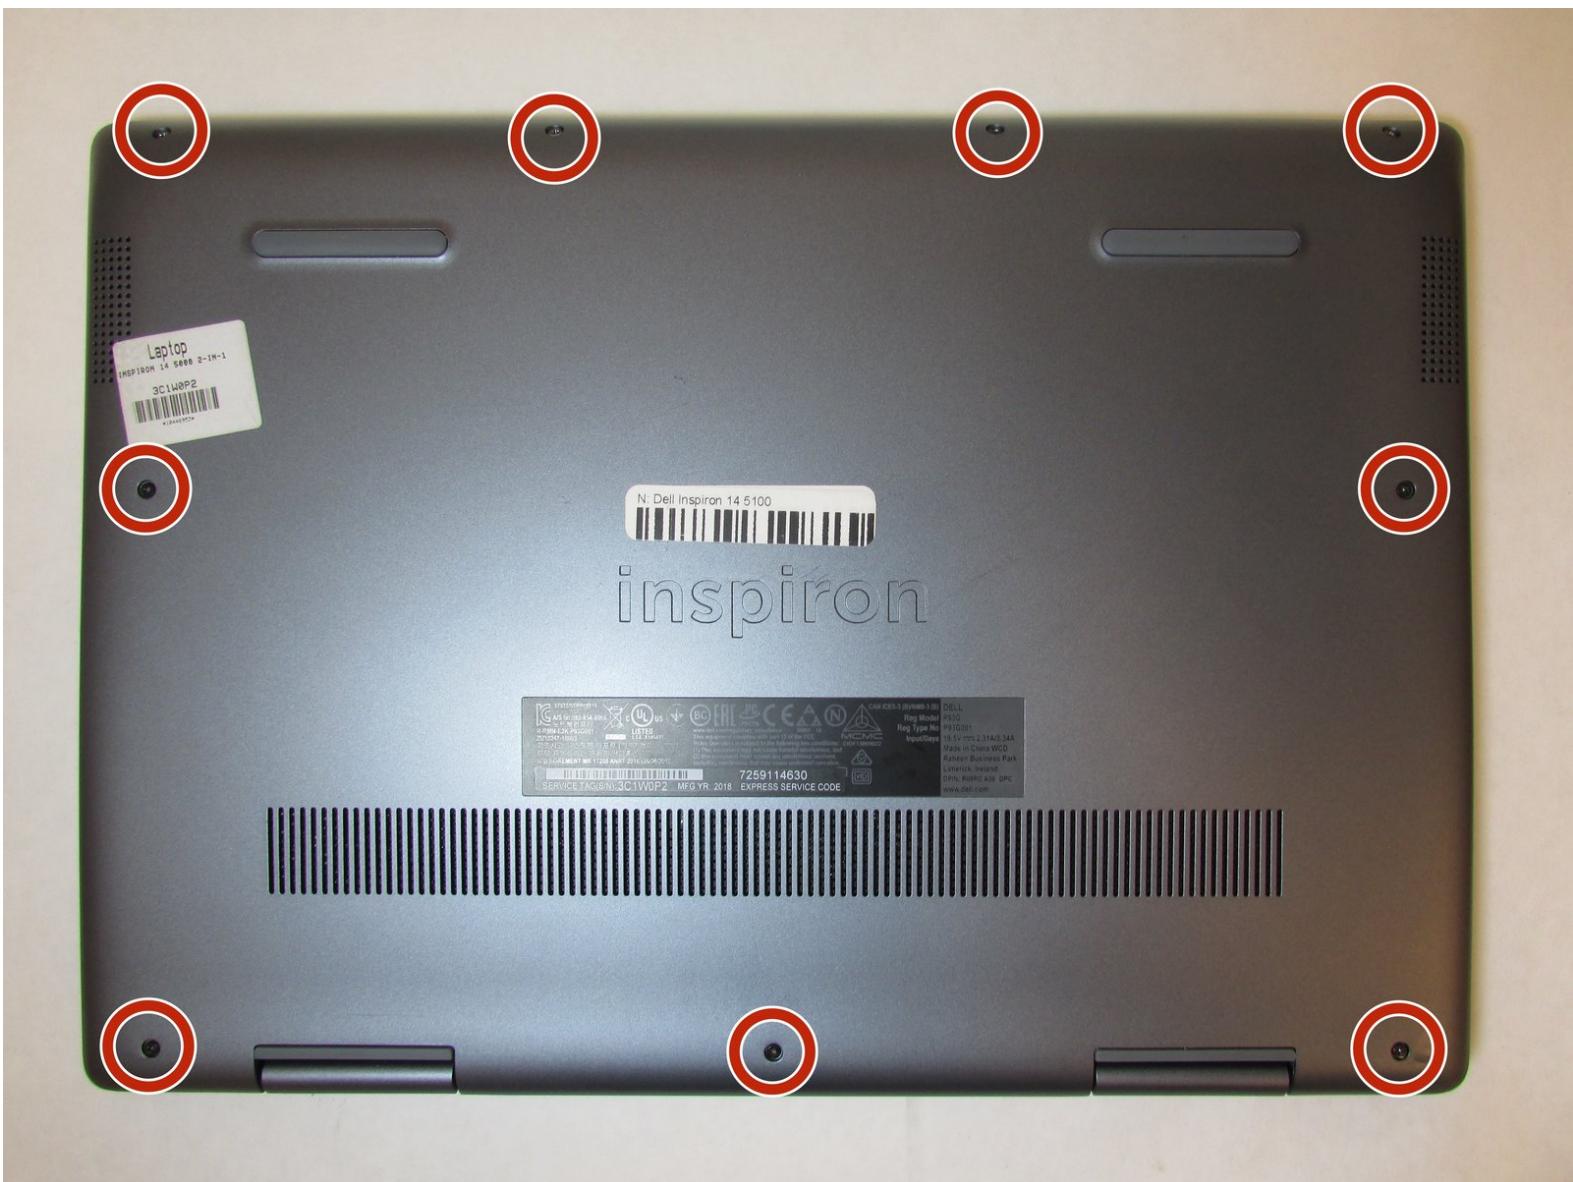

## INTRODUCTION

Look through the other guides on the [device page](#) to make sure the disassembly of the device is required.

This guide will be the basic requirement for the majority of the replacement guides created for the Dell Inspiron 14 5100.

### **TOOLS:**

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

## Step 1 — Dell Inspiron 14 5100 Disassembly



 Make sure to disconnect the power source to the device.

- Remove nine screws securing the base cover of the laptop's keyboard assembly using the Phillips #0 screwdriver.
- There are 2 sets of screws.
  - Remove the 3 captive screws.
  - Remove the 6M2\*6 screws.

## Step 2



- Pry open the laptop to separate the base cover from the keyboard assembly.
- You may use your fingertips or use plastic opening tools.

To reassemble your device, follow these instructions in reverse order.