




Dell Inspiron 14 7447 Battery Replacement


Written By: Terrence15

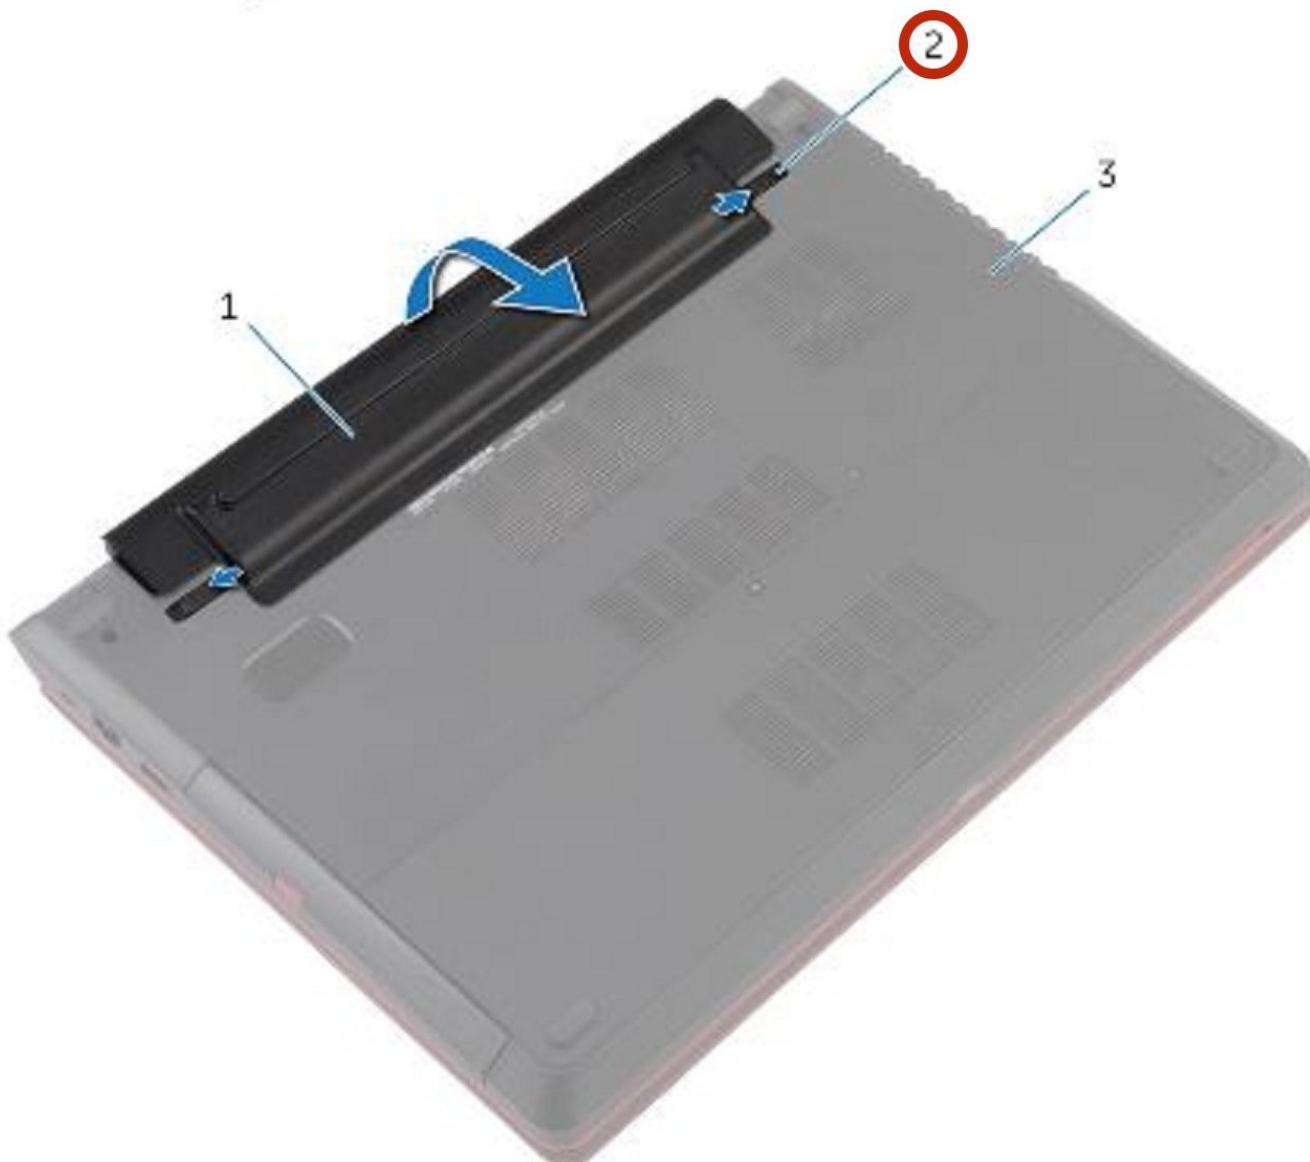

INTRODUCTION

In this guide, we will be showing you how to remove and replace the Battery.


Step 1 — Sliding the Release Latches

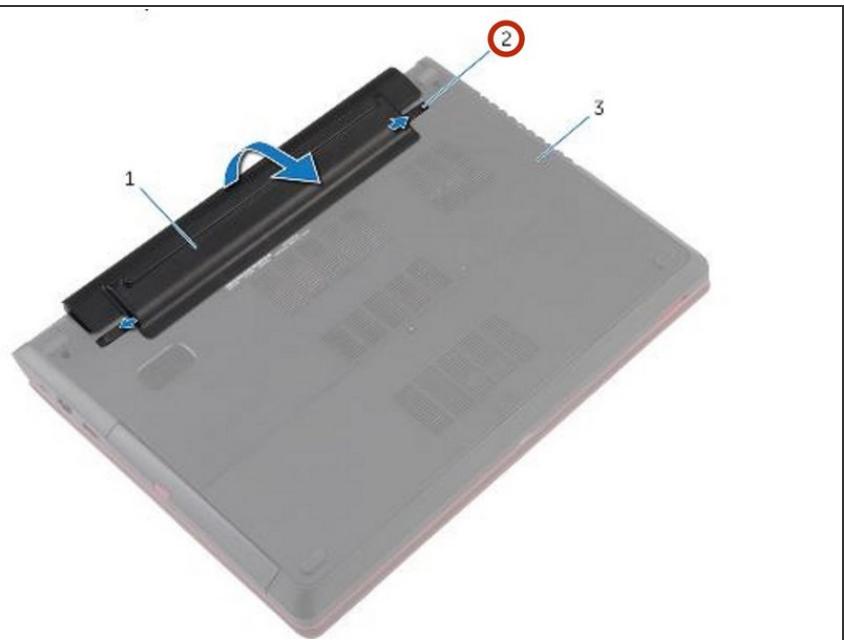

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Close the display and turn the computer over.
- Slide the battery-release latches to the unlock position.

Step 2 — Lifting the Battery

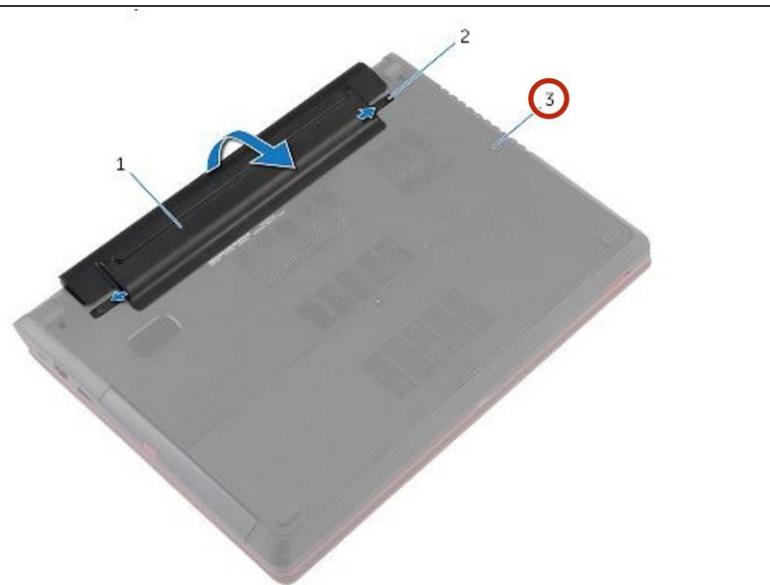

- Using your fingertips, lift the battery at an angle and remove the battery off the computer base.

Step 3 — Grounding the System Board

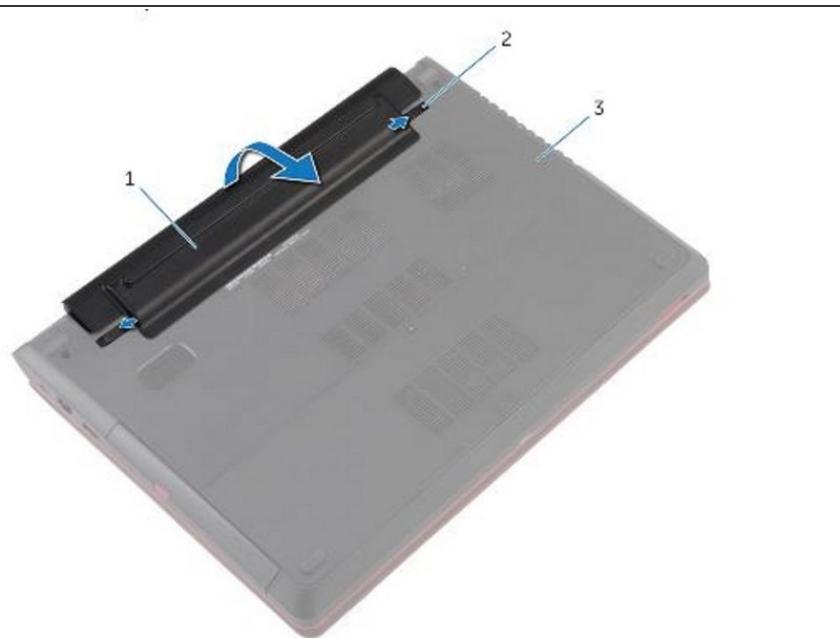


- Turn the computer over, open the display, and press the power button for five seconds to ground the system board.

Step 4 — Inserting the Battery




- Insert the **NEW** battery at an angle into the battery bay and align the tabs on the battery with the slots on the battery bay.

Step 5 — Press the Battery Down

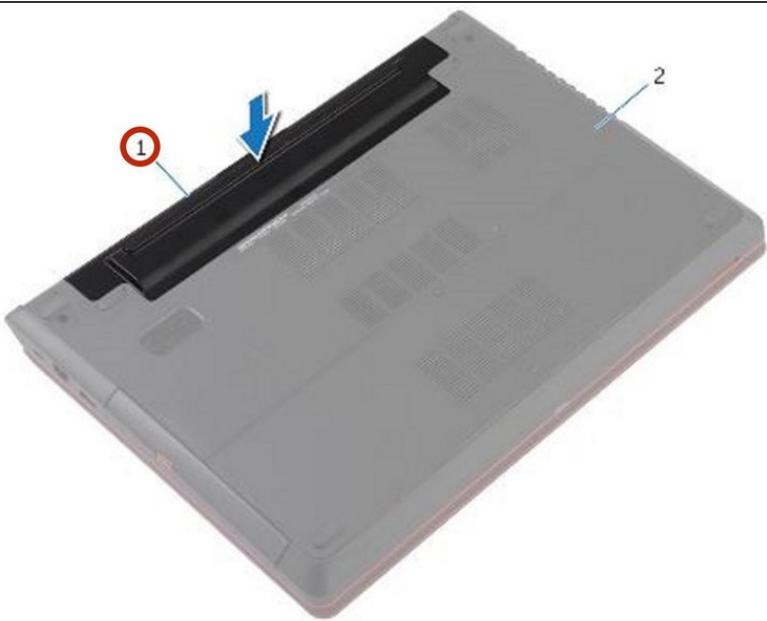

- Press the battery down until it snaps into place.

Step 6 — Opening the Display

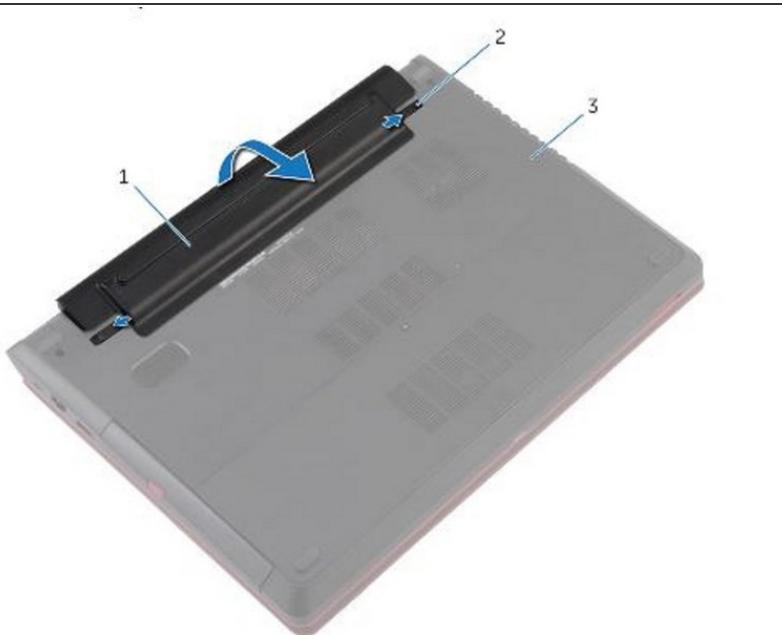

- Turn the computer over and open the display as far as possible.

To reassemble your device, follow these instructions in reverse order.