




Dell Inspiron 14 N4050 Display Assembly Replacement

Written By: Terrence15

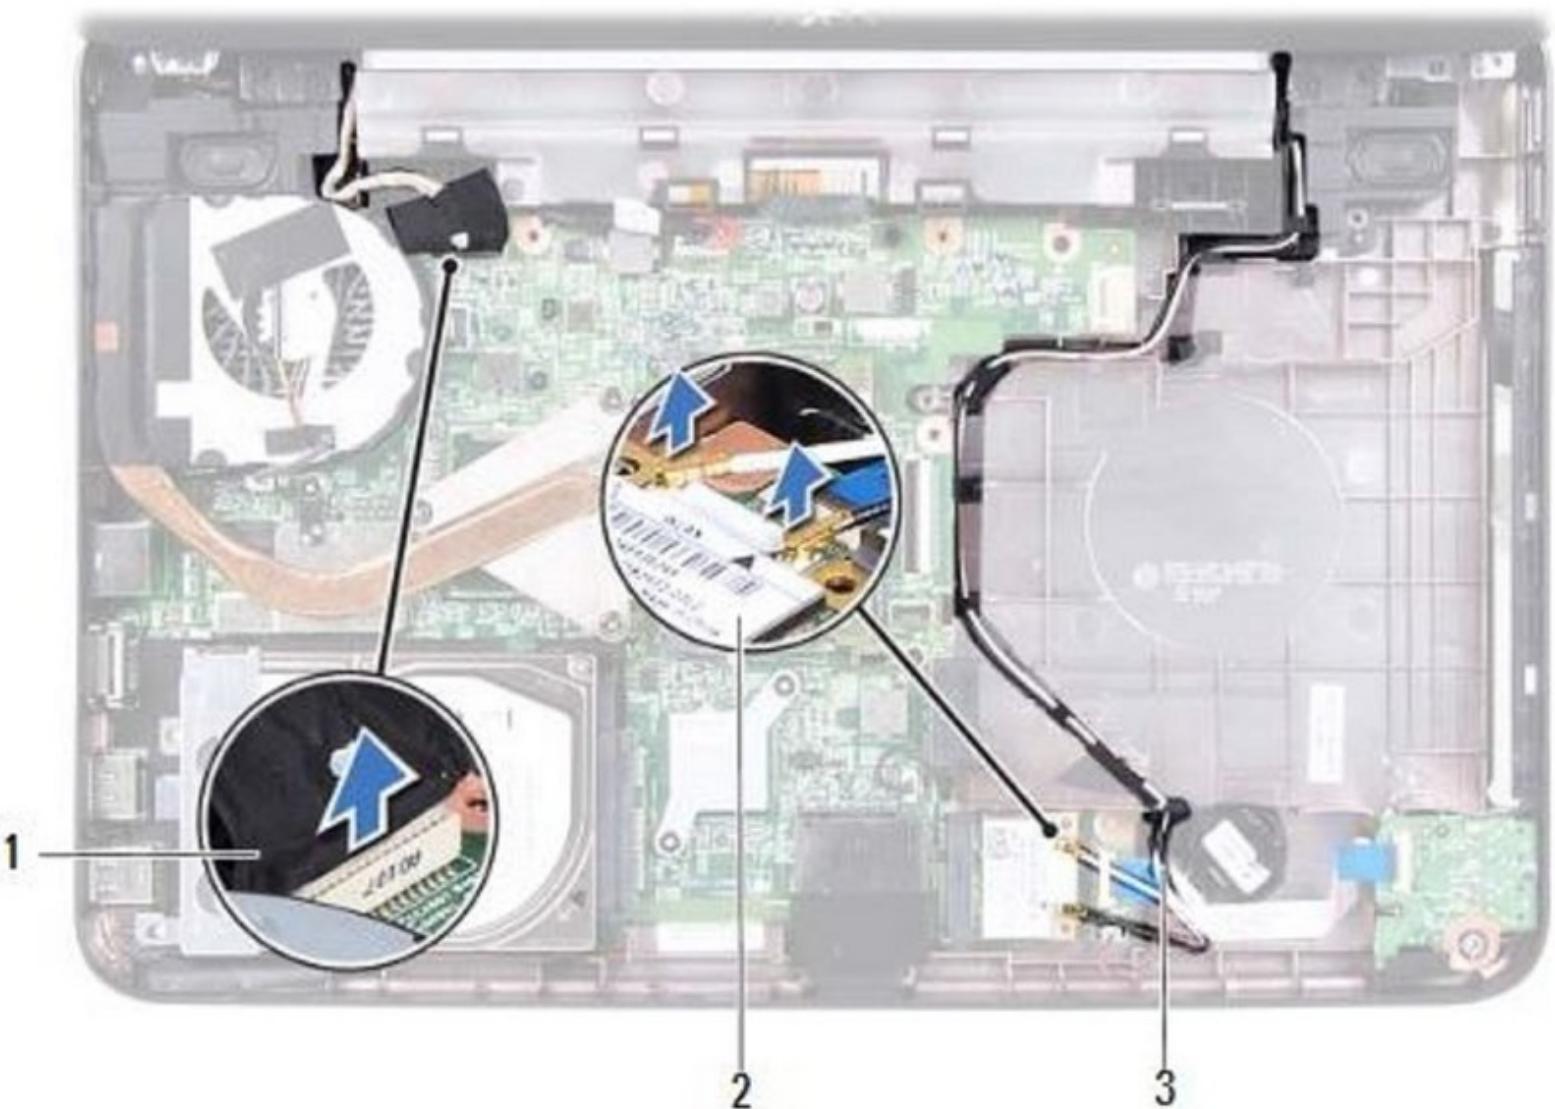

INTRODUCTION

In this guide, we will show you how to remove and replace the Display Assembly.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)

Step 1 — Disconnecting the Display Cable




⚠️ **WARNING:** Before working inside your computer, read the safety information that shipped with your computer. Follow the instructions in ["Before You Begin"](#).

⚠️ **CAUTION:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer).


- Disconnect the display cable from the connector on the system board.

Step 2 — Disconnecting the Mini-Card Antenna Cables

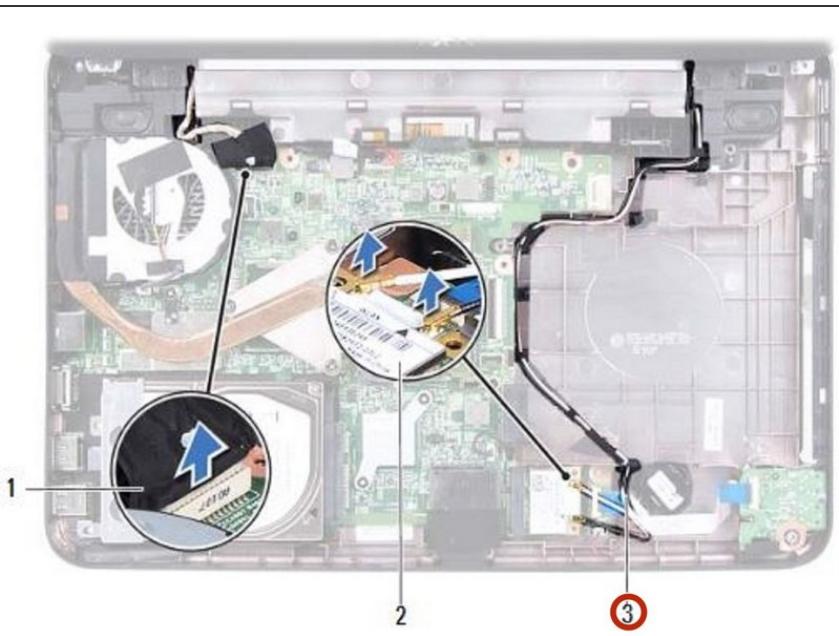


- Disconnect the Mini-Card antenna cables from the connectors on the Mini-Card.

Step 3 — Removing the Cables

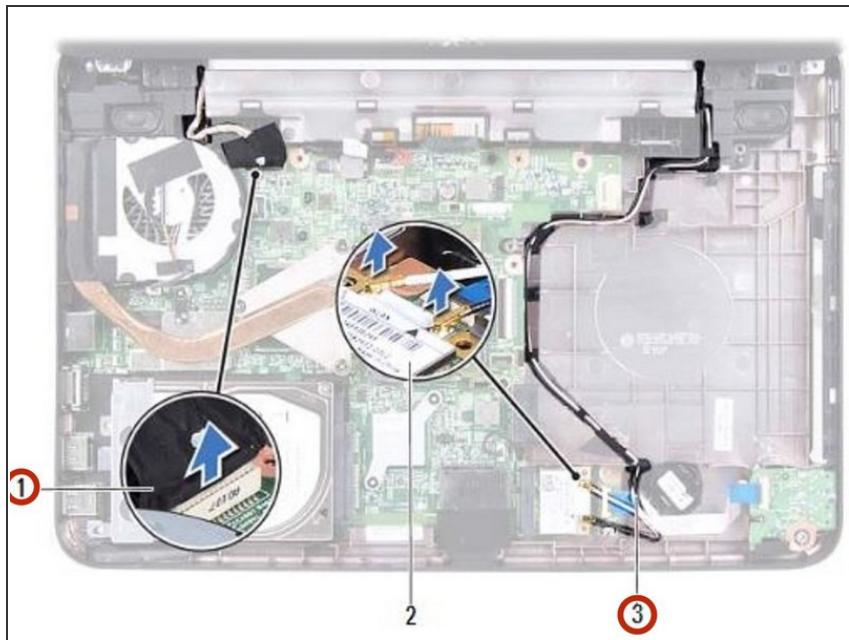


- Make a note of the display cable and Mini-Card antenna cables routing and remove the cables from the routing guides.

Step 4 — Remove the Screws

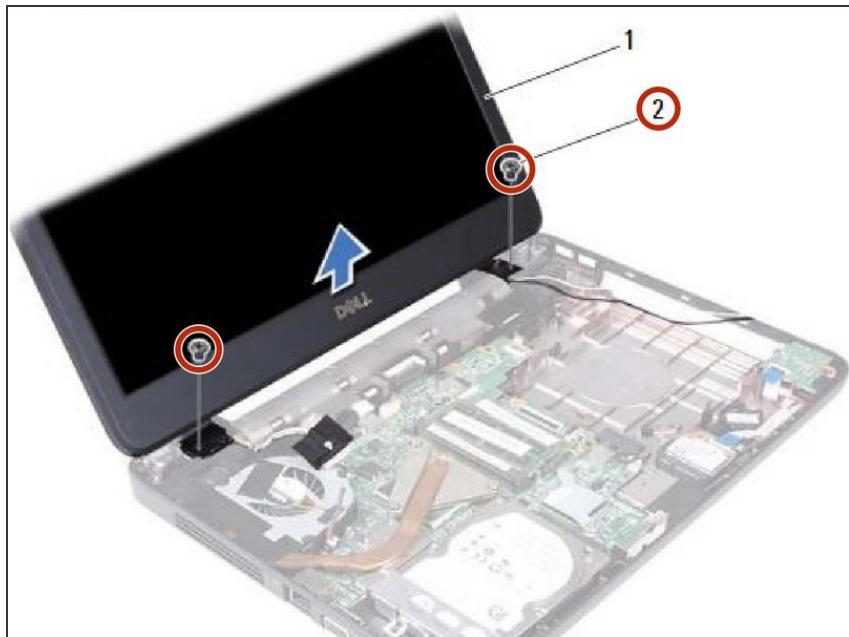


- Remove the two screws that secure the display assembly to the computer base.

Step 5 — Removing the Display Assembly

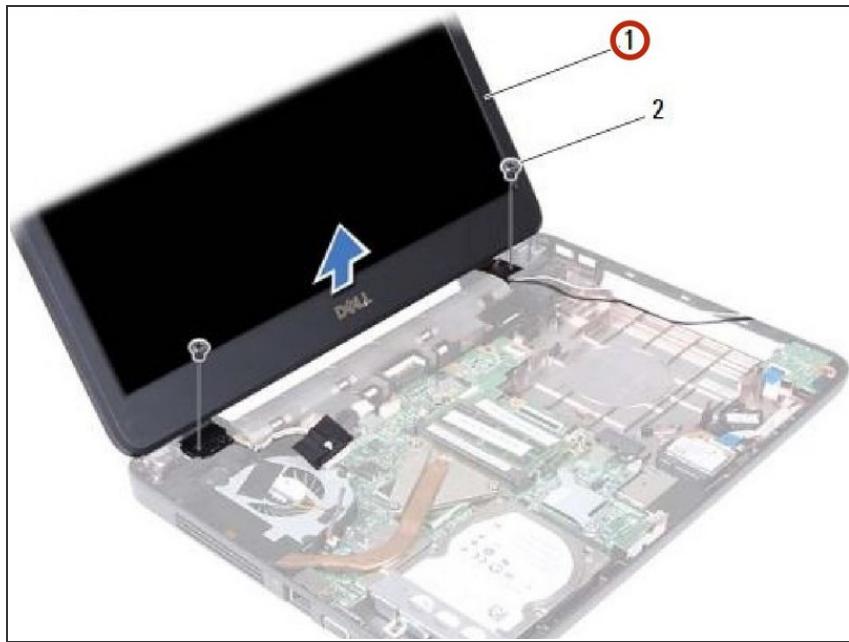

- Lift and remove the display assembly out of the computer base.

Step 6 — Placing the Display Assembly

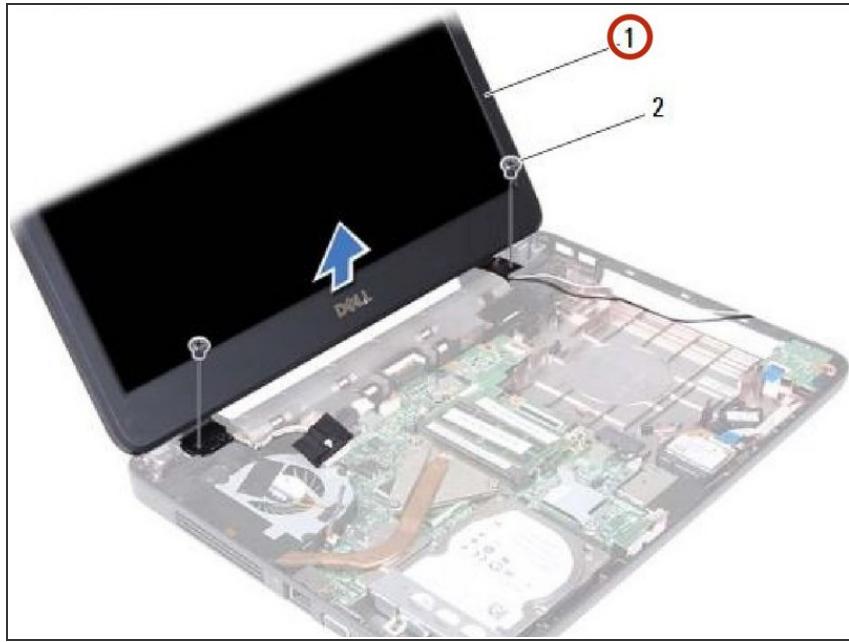

- Place the **NEW** display assembly in position and replace the two screws that secure the display assembly to the computer base.

Step 7 — Routing the Display Cable




- Route the display cable and Mini-Card antenna cables through the routing guides.

Step 8 — Connecting the Display Cable



- Connect the display cable to the connector on the system board.

Step 9 — Connecting the Antenna Cables

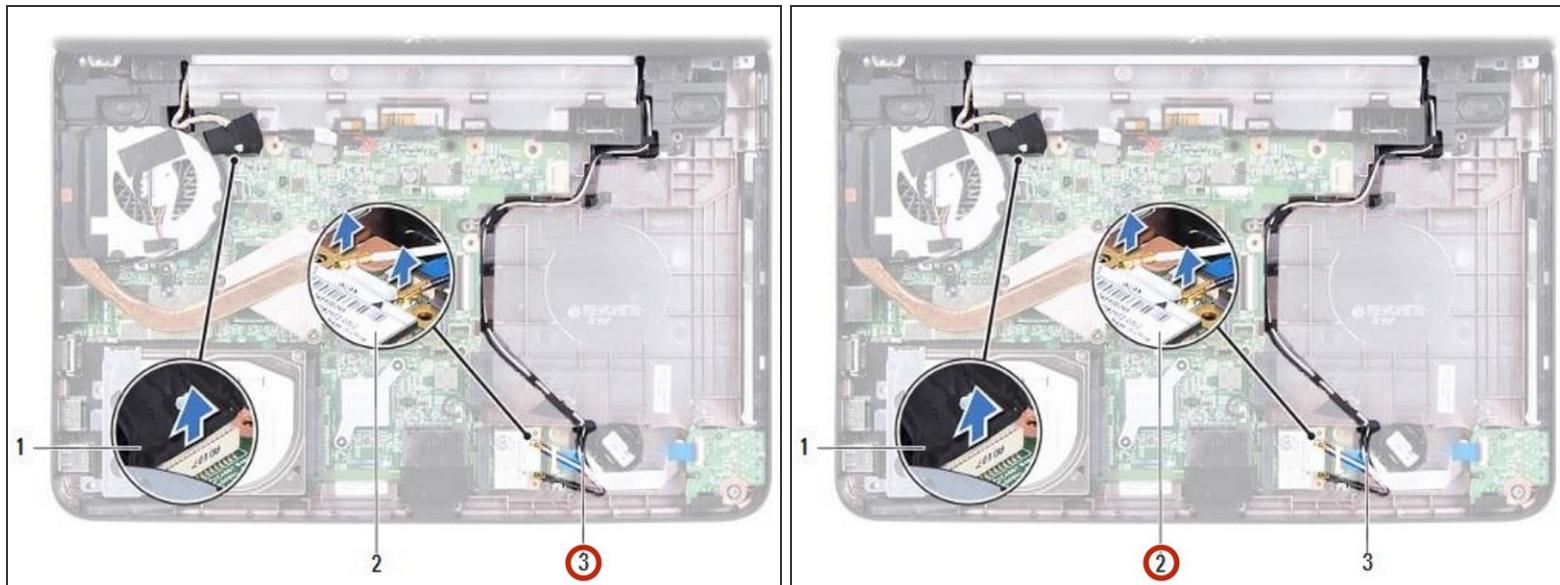

- Connect the Mini-Card antenna cables to the Mini-Card.