



Dell Inspiron 14-7437 Cooling Fan Replacement

This guide will show you how to replace the Cooling Fan inside your Dell Inspiron 14-7437.

Written By: Katelyn Remy




INTRODUCTION

The Cooling fan is used to remove heat from the laptop so it is not hot to the touch and does not burn the motherboard.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Phillips #000 Screwdriver](#) (1)

Step 1 — Base Cover

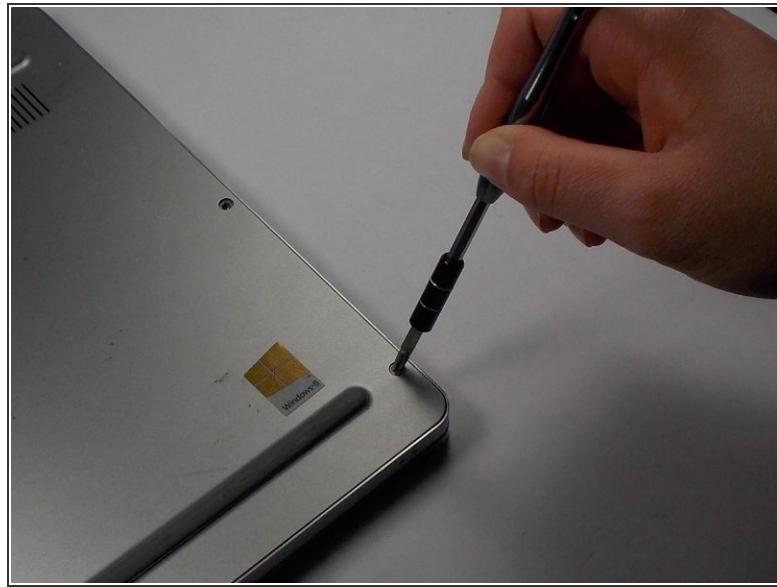

! Power off your Dell Inspiron 14-7437 before disassembling.



- Remove the eight 4.5 mm screws on the back panel of the device using the Phillips 1 Screwdriver.
- *i* The two 4.5 mm screws in the center under the rubber mount cannot be removed, but can be loosened.

Step 2




- Pry open the back cover using a spudger and slide it along the under the cover.

Step 3 — Battery

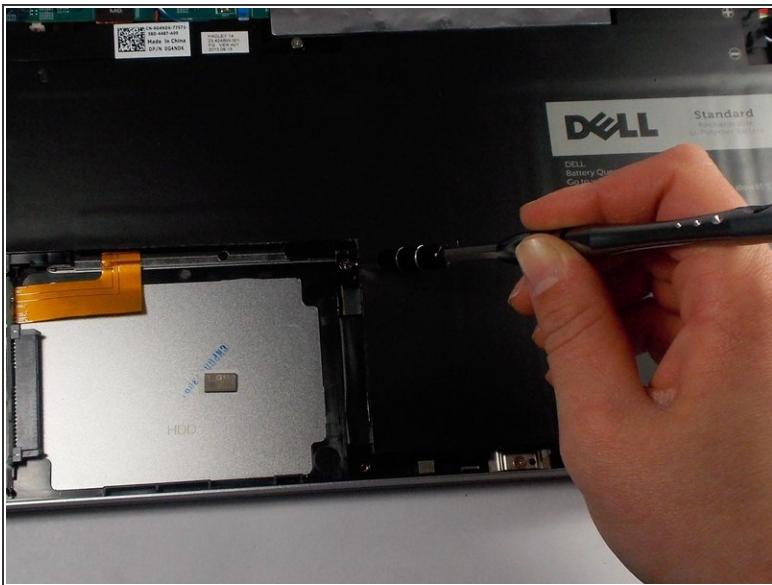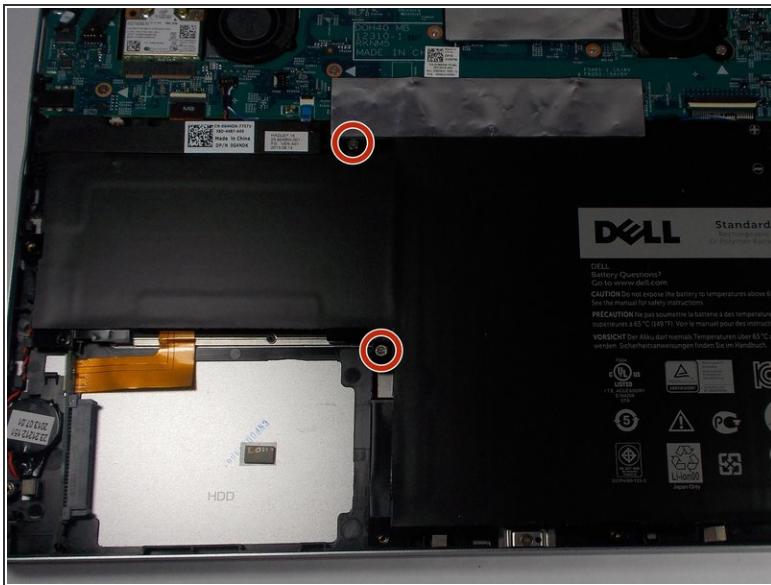

- Remove the two 2.5 mm screws holding the battery in place using the J000 Phillips Head Screwdriver.

Step 4

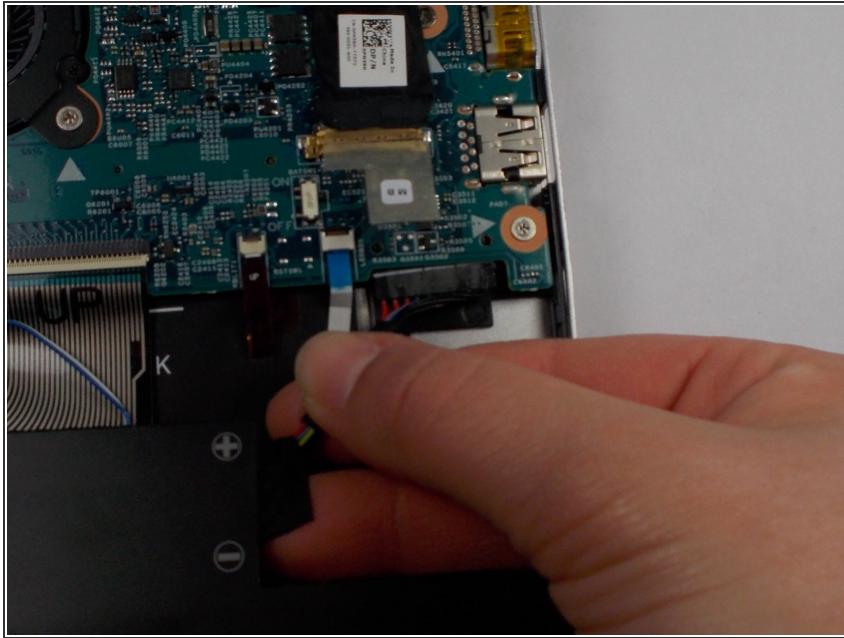


- Disconnect the ribbon cables from the motherboard.

Step 5





- Lift up and remove the Lithium-Polymer Battery.

Step 6 — Cooling Fan

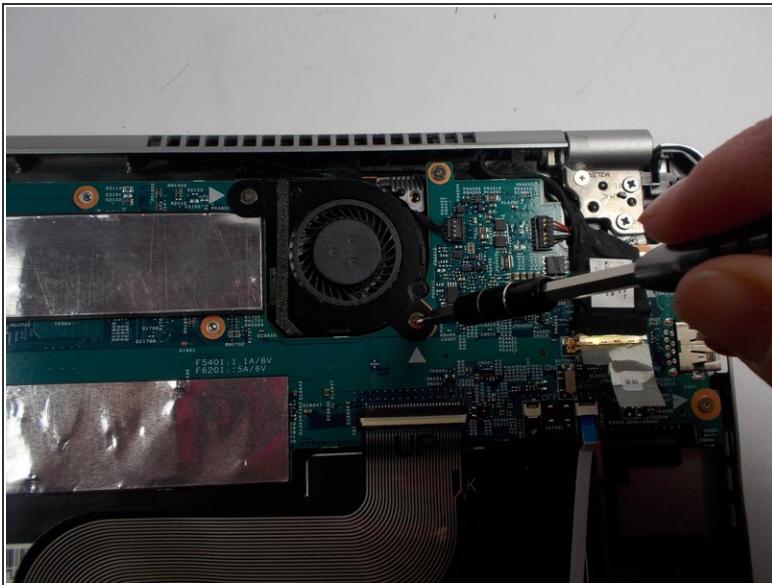

- Remove the two 2.5 mm screws using a J000 Phillips Head Screwdriver.

Step 7

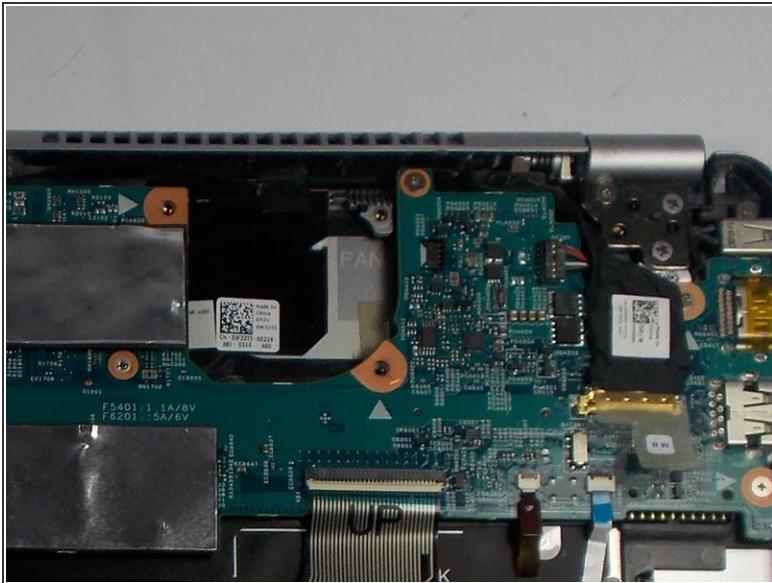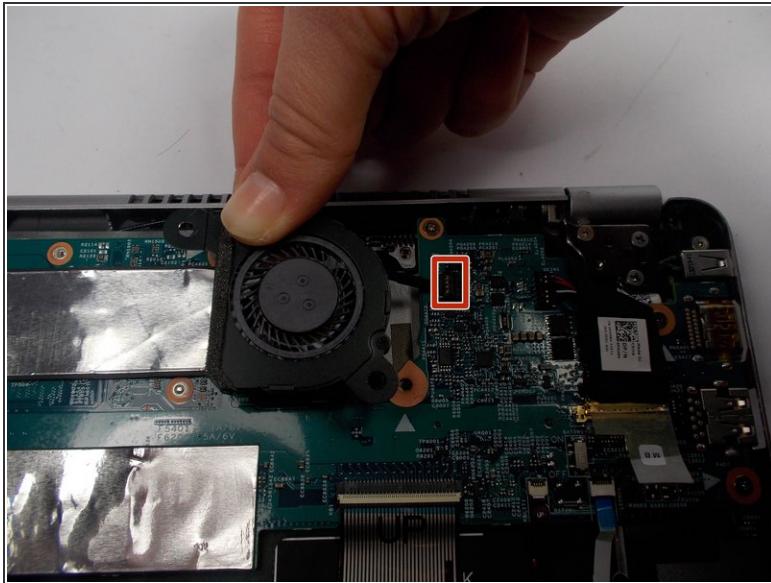

- Pull up on the wire and remove the Cooling Fan.

To reassemble your device, follow these instructions in reverse order.