




Dell Inspiron 1428 Battery Replacement


Written By: Terrence15

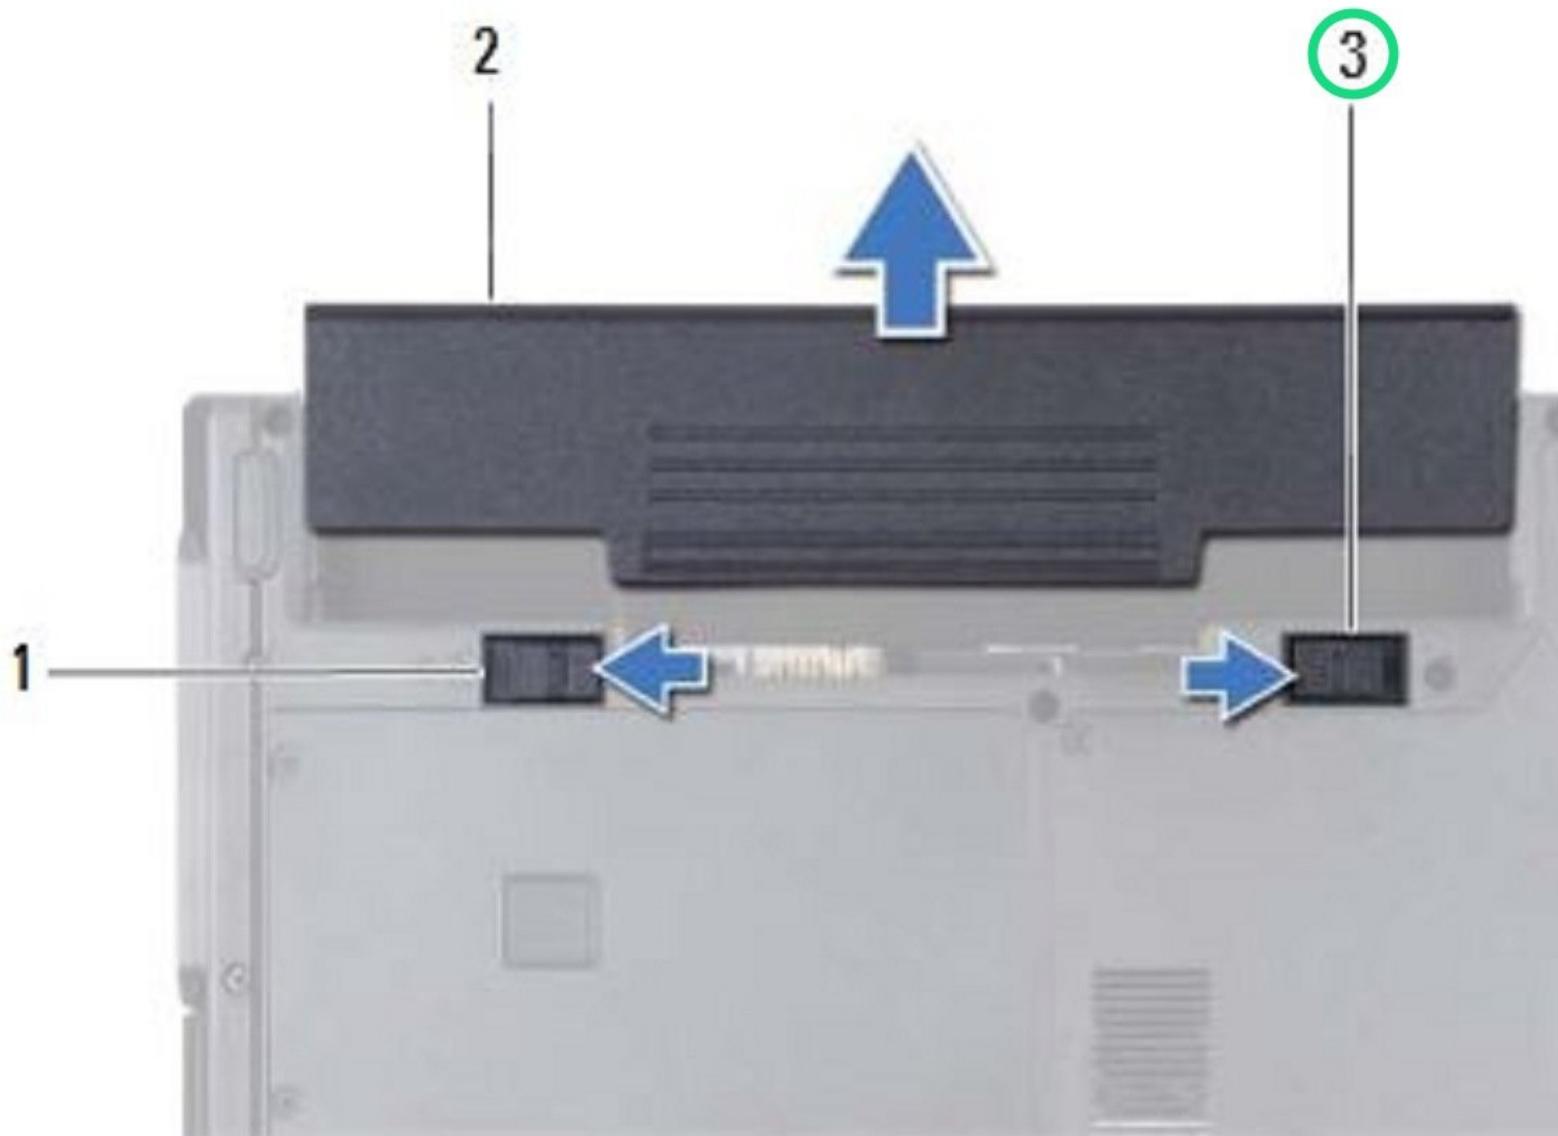

INTRODUCTION

In this guide, we will be showing you how to remove and replace the Battery.


Step 1 — Sliding the Latch

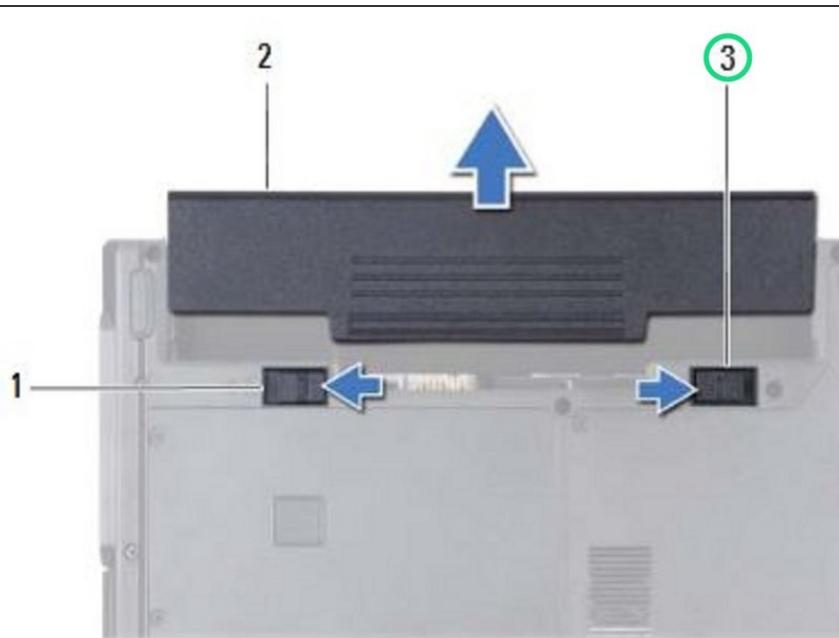

⚠️ WARNING: Before working inside your computer, read the safety information that shipped with your computer. Follow the procedures in ["Before You Begin"](#).


- Turn the computer over.
- Slide the battery lock latch to the unlock position.

Step 2 — Sliding the Release Latch

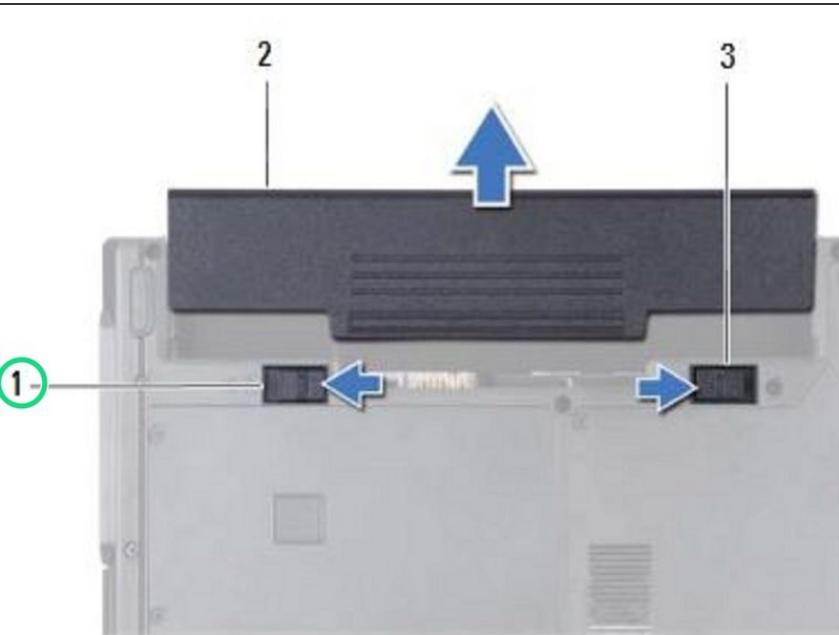


- Slide the battery release latch to the side.

Step 3 — Sliding the Battery

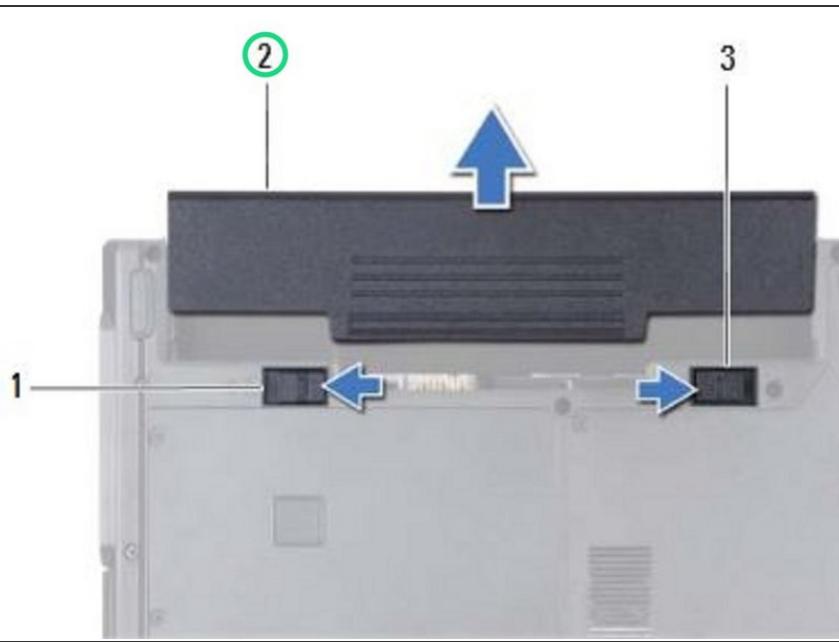


- Slide the battery out of the battery bay.

Step 4 — Sliding the Battery

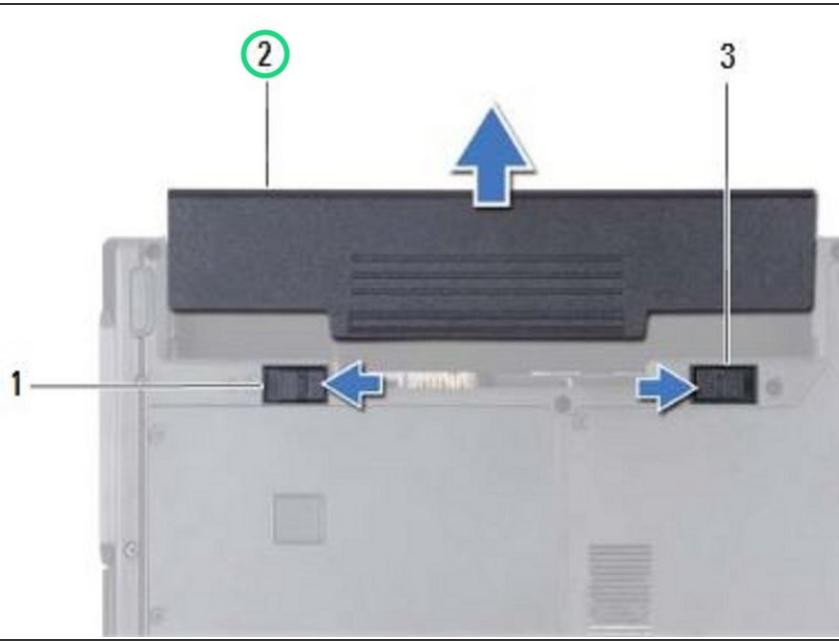

- Slide the battery into the battery bay until it clicks into place.

Step 5 — Sliding the Lock Latch

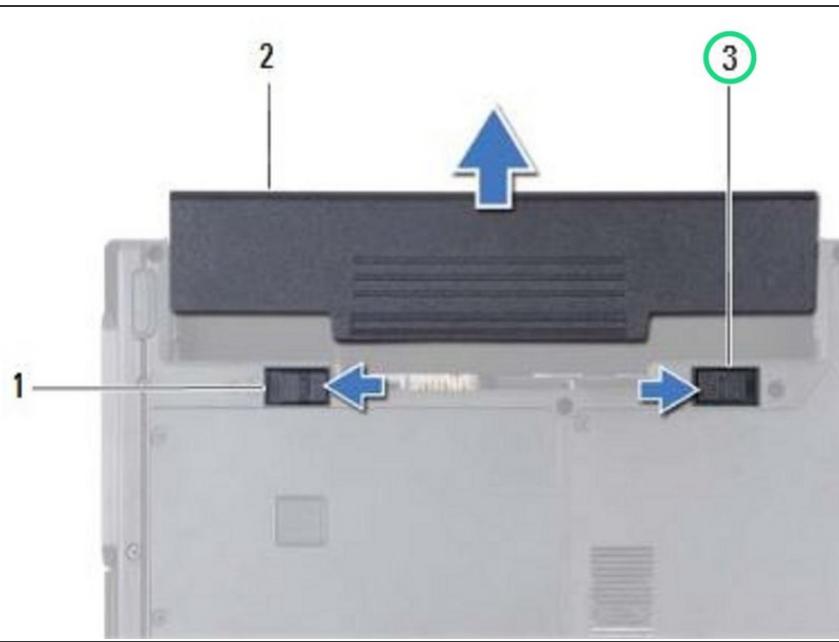

- Slide the battery lock latch to the lock position.