




Dell Inspiron 14R Memory Modules Replacement


Written By: Terrence15

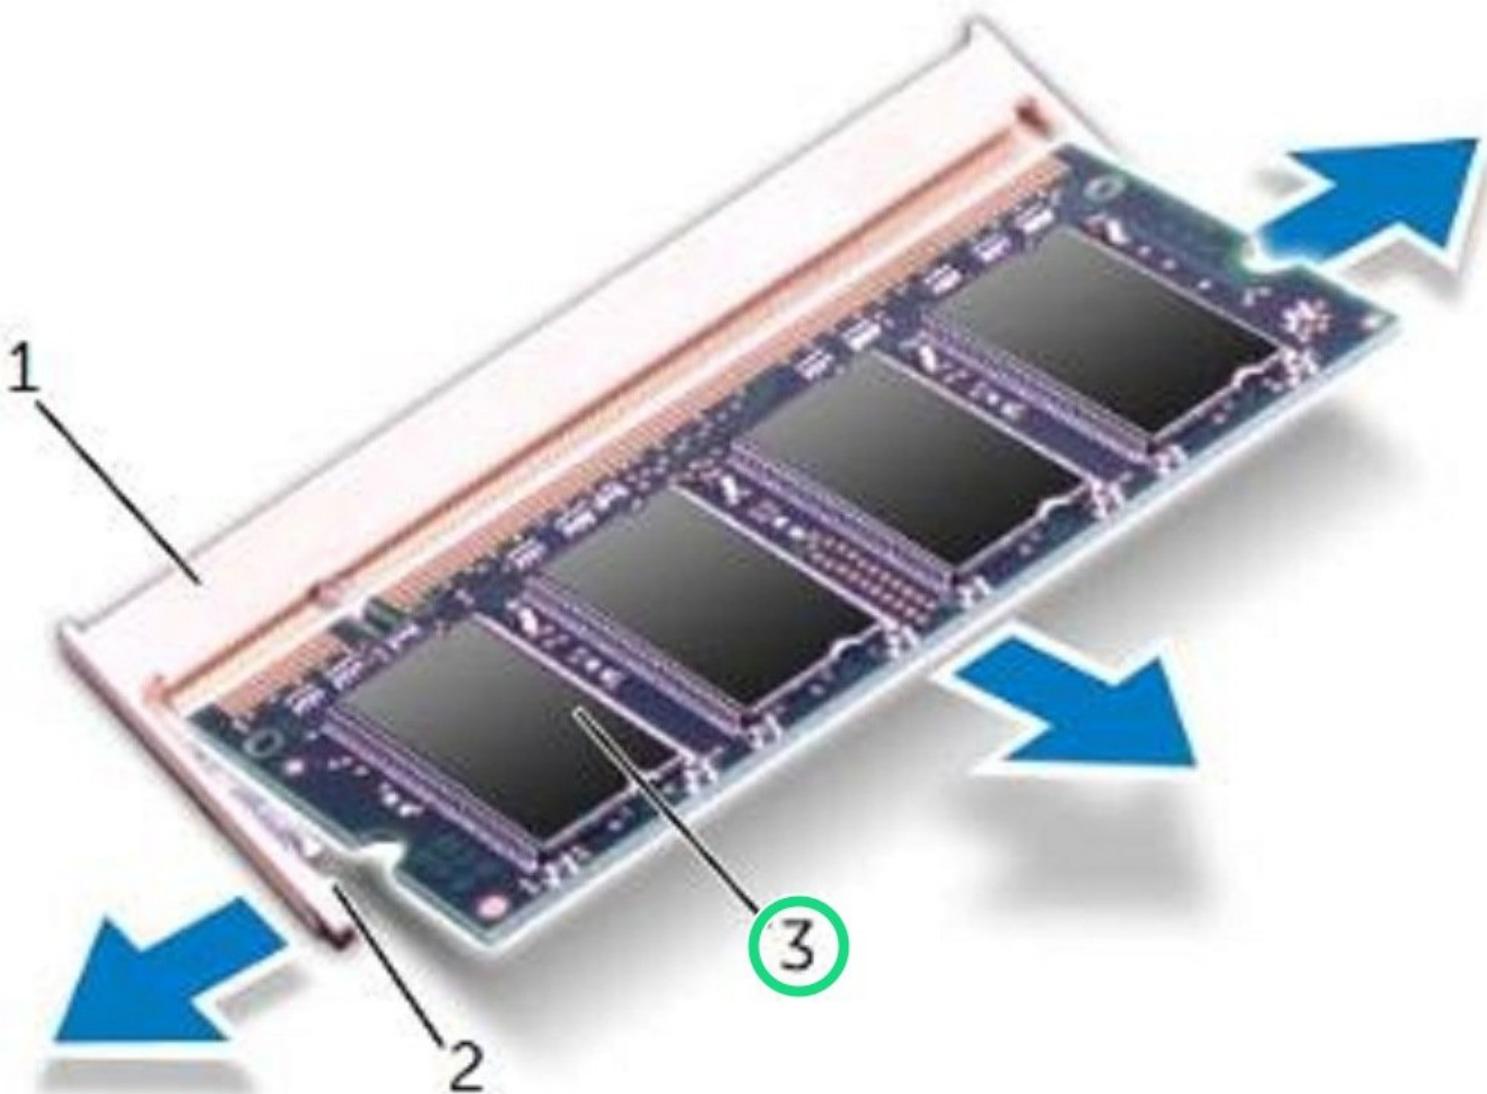

INTRODUCTION

In this guide, we will be showing you how to remove and replace the Memory Modules.

Step 1 — Popping up the Memory Module

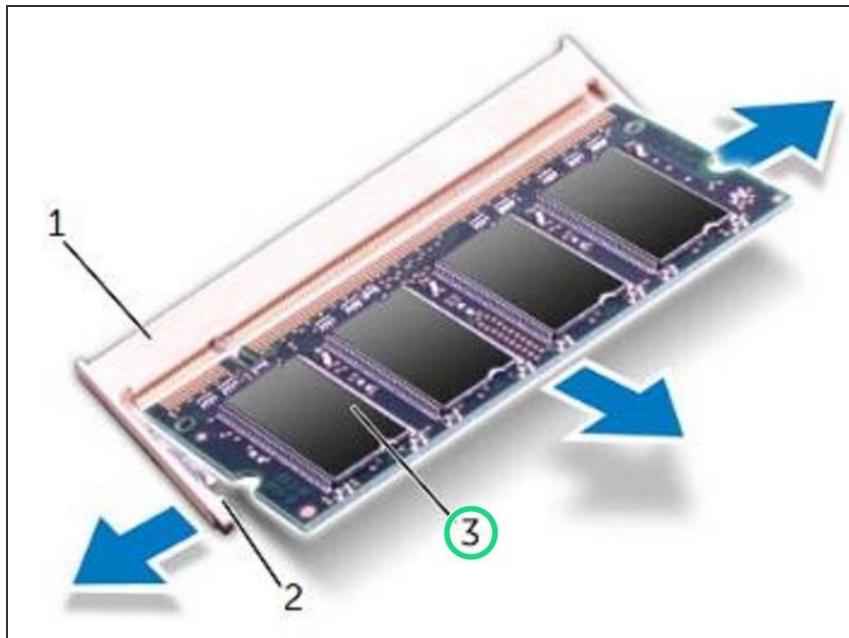


⚠️ **WARNING:** Before working inside your computer, read the safety information that shipped with your computer. Follow the instructions in ["Before You Begin"](#).

⚠️ **CAUTION:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer).

⚠️ **CAUTION:** To prevent damage to the memory module connector, do not use tools to spread the memory module securing clips.


- Use your fingertips to carefully spread apart the securing clips on each end of the memory-module connector until the module pops up.

Step 2 — Remove the Memory Module

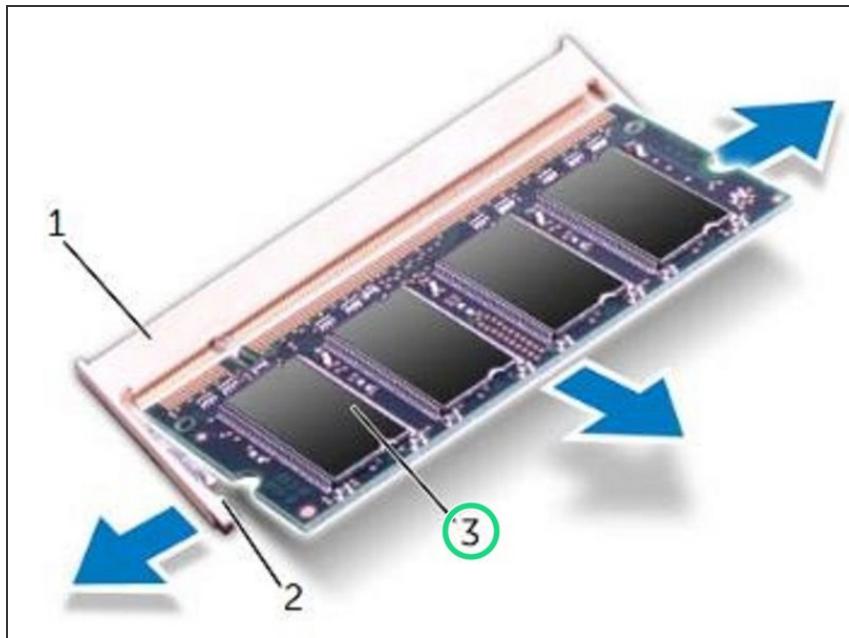


- Remove the memory module(s) from the memory-module connector.

Step 3 — Align the Notch

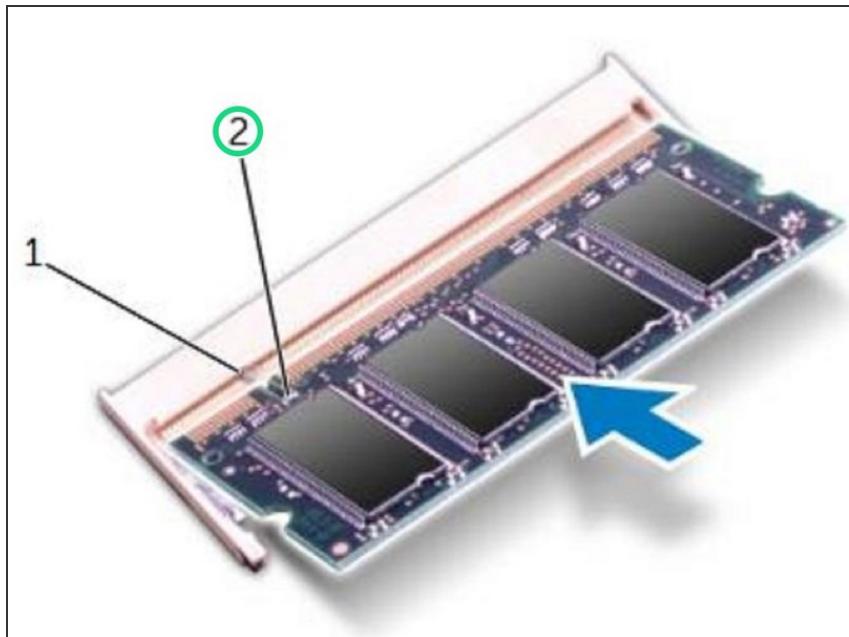

- Align the notch in the **NEW** memory module with the tab in the memory-module connector.

Step 4 — Sliding the Memory Module

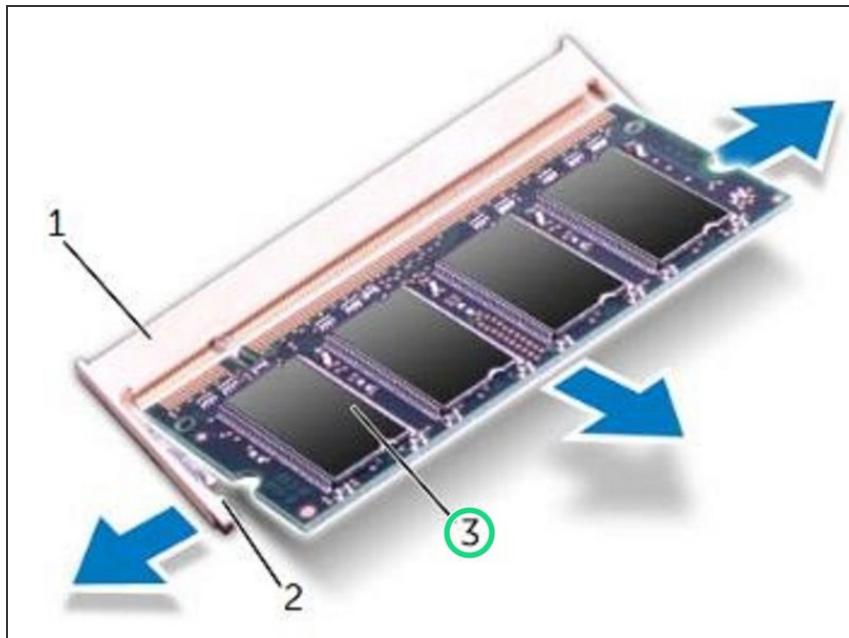

- Slide the memory module firmly into the slot at a 45-degree angle, and press the memory module down until it clicks into place. If you do not hear the click, remove the memory module and reinstall it.

⚠ NOTE: If the memory module is not installed properly, the computer may not boot.