



# Dell Inspiron 14R SE 7420 Battery Replacement

Written By: Terrence15



## INTRODUCTION

In this guide, we will be showing you how to remove and replace the Battery.

## Step 1 — Close the Display



⚠️ **WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in ["Before You Begin"](#).

- Close the display and turn the computer over.

## Step 2 — Sliding the Release Latches



- Slide the battery release latches to the unlock position.

## Step 3 — Removing the Battery



- Lift the battery out of the battery bay.

## Step 4 — Align the Tabs



- Align the tabs on the **NEW** battery with the slots on the battery bay and snap the battery until it clicks into place.