




Dell Inspiron 14R-5421 Hard Drive Replacement

replace the hard drive

Written By: Jared paiva

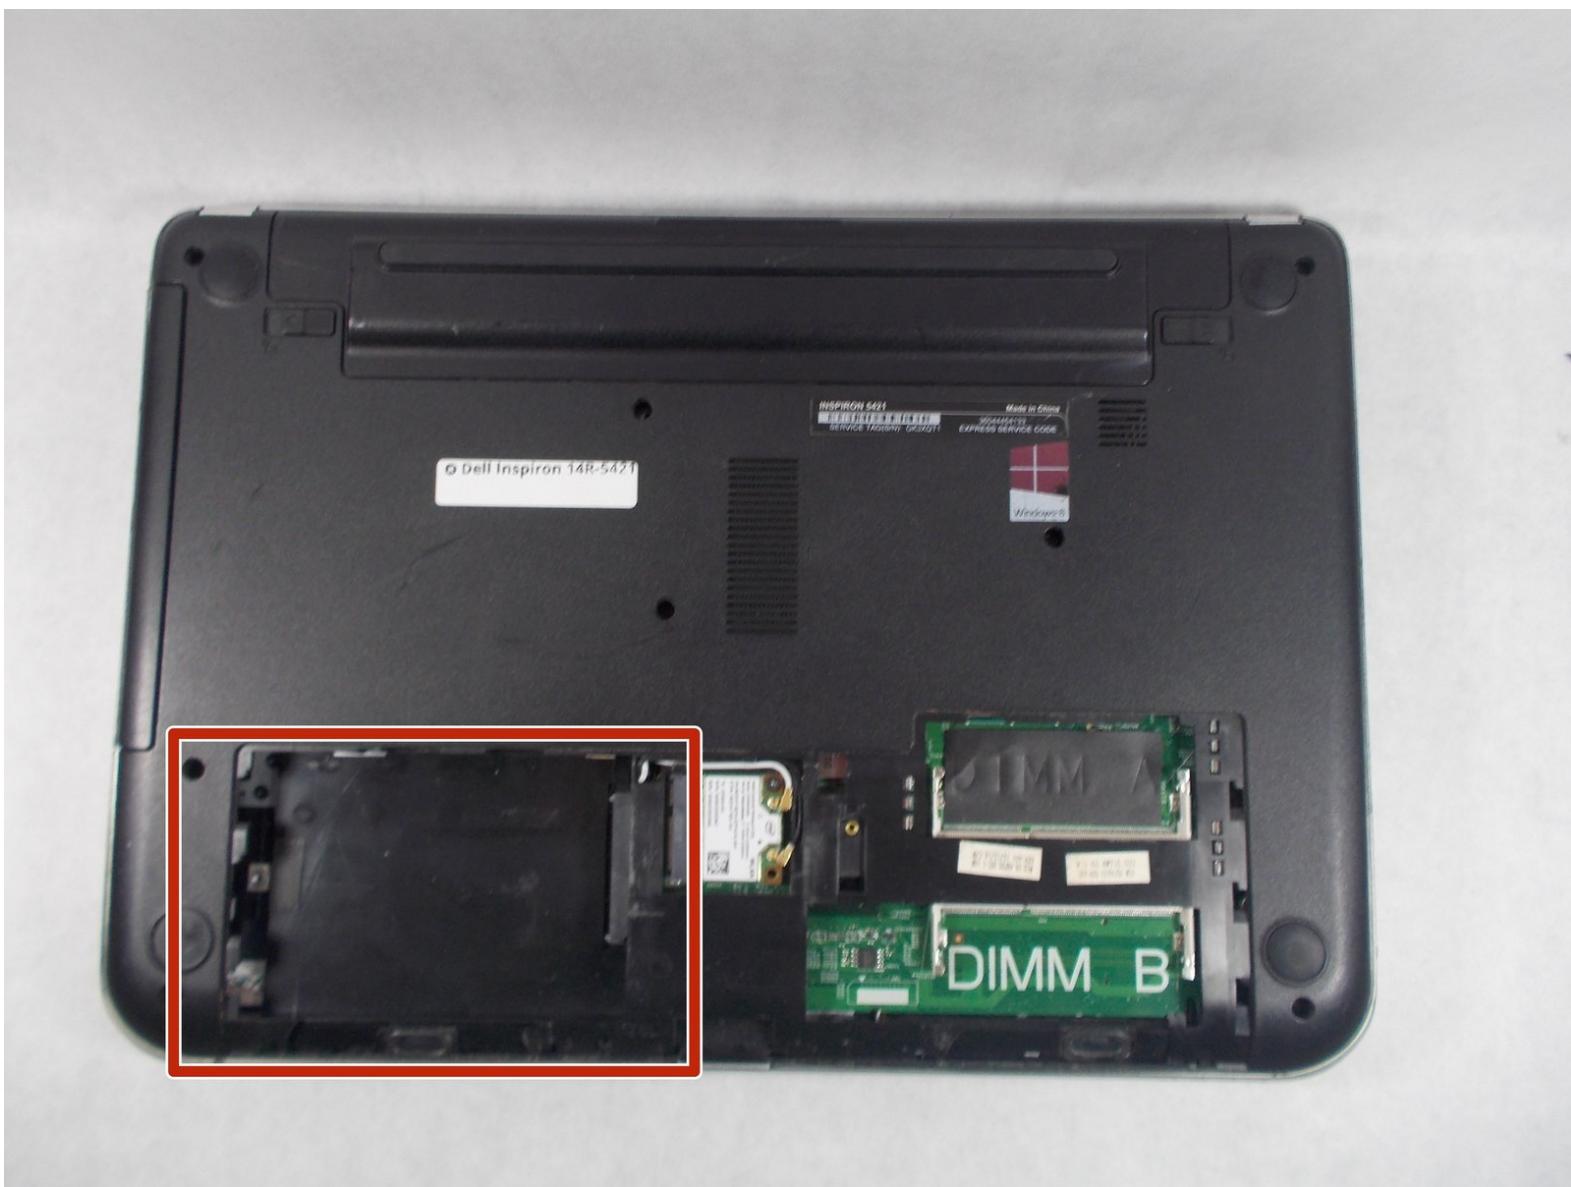

INTRODUCTION

this guide will show you how to remove the hard drive within your laptop

TOOLS:

- Phillips #0 Screwdriver (1)

Step 1 — Battery




- Push the two sliders away from the battery towards the outer edges.

Step 2



- Remove the battery when it pops up.

Step 3 — Hard Drive

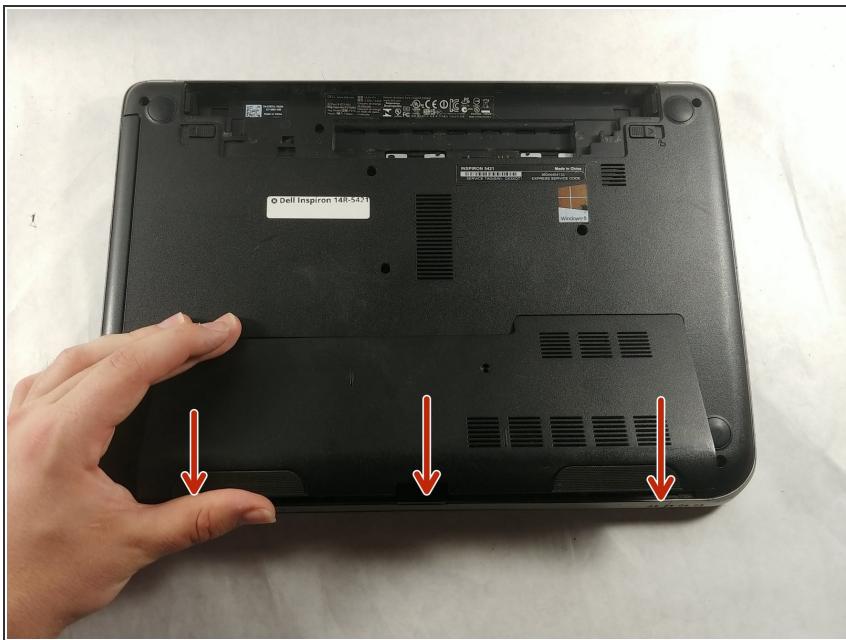

- Start by removing the cover that hides all the internal components by sliding it in the direction shown

Step 4



- Now remove the single screw that is securing the hard drive to the laptop noted by the red circle

Step 5



- Now carefully lift then pull the hard drive out to the left until it detaches

To reassemble your device, follow these instructions in reverse order.