


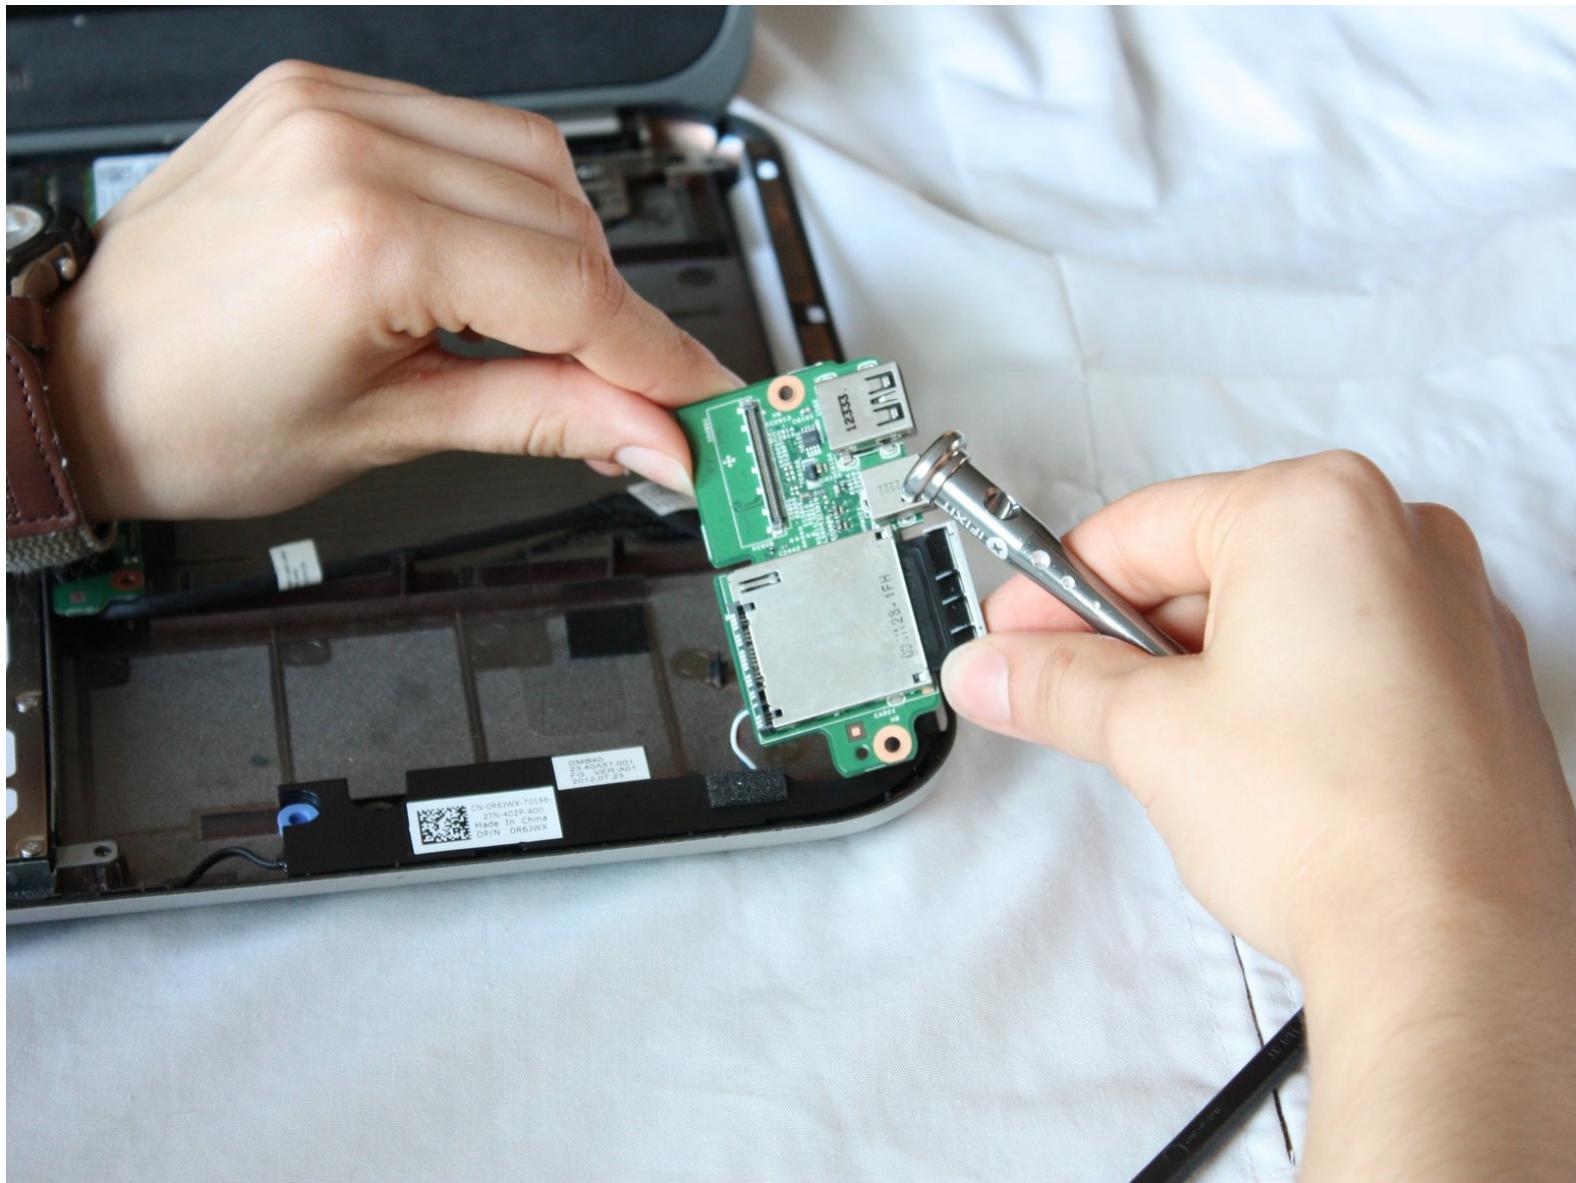

Dell Inspiron 14z-5423 Daughter Board Replacement

This guide will help users replace the daughter board

Written By: Marisol



This document was generated on 2019-10-30 03:01:25 PM (MST).

INTRODUCTION

The daughterboard is an extension of the motherboard. Follow this simple step by step replacement guide.

TOOLS:

- [JIS Driver Set \(1\)](#)
- [Spudger \(1\)](#)
- [Tweezers \(1\)](#)

Step 1 — RAM



- Close the display and turn over the computer.


 Make sure your device is powered down and unplugged before beginning the replacement.

Step 2




- Use a J0 bit tipped screwdriver to unscrew the one 6 mm Phillips screw on the RAM cover.

Step 3

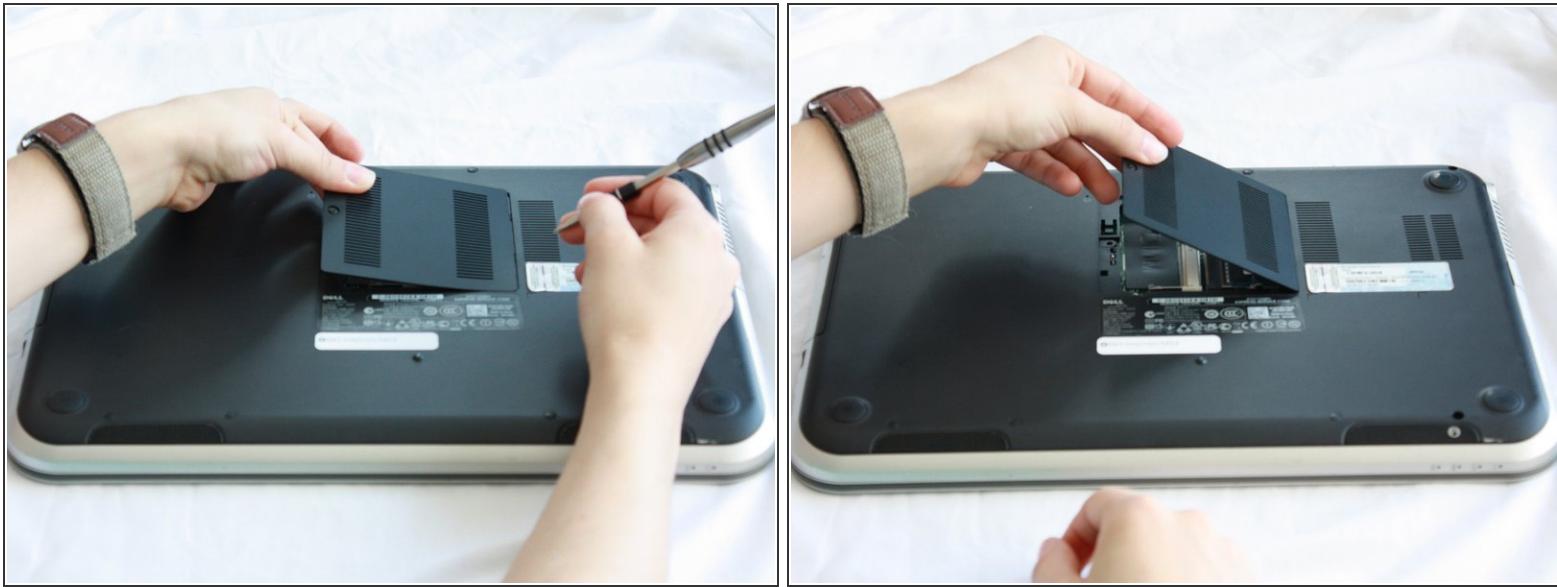

- Lightly lift the RAM cover up and at an angle, away from the computer.

Step 4

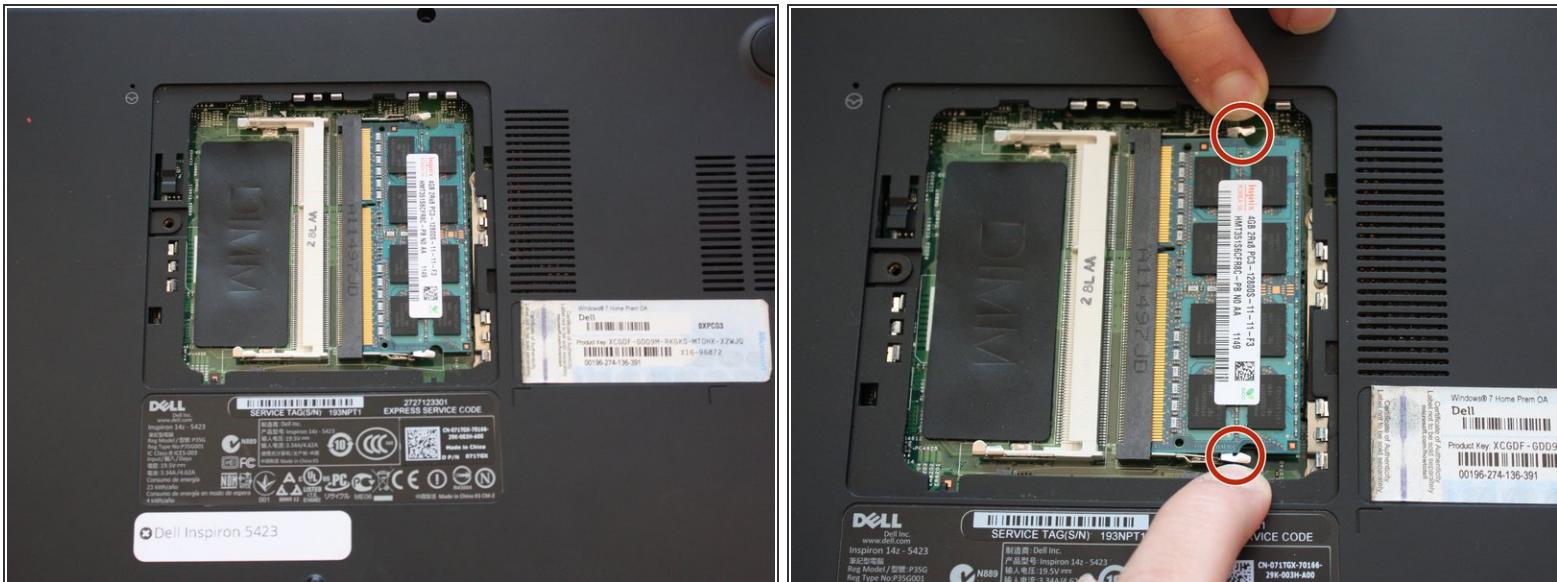


- Use your fingers to carefully pull the securing clips on the RAM away from each other.
- The RAM should pop up when the clips are released.

Step 5



- Remove the popped up RAM by pulling it away from the connection.
- *i* If it does not pop up pry it out in a steady and straight direction.

Step 6 — Optical Drive

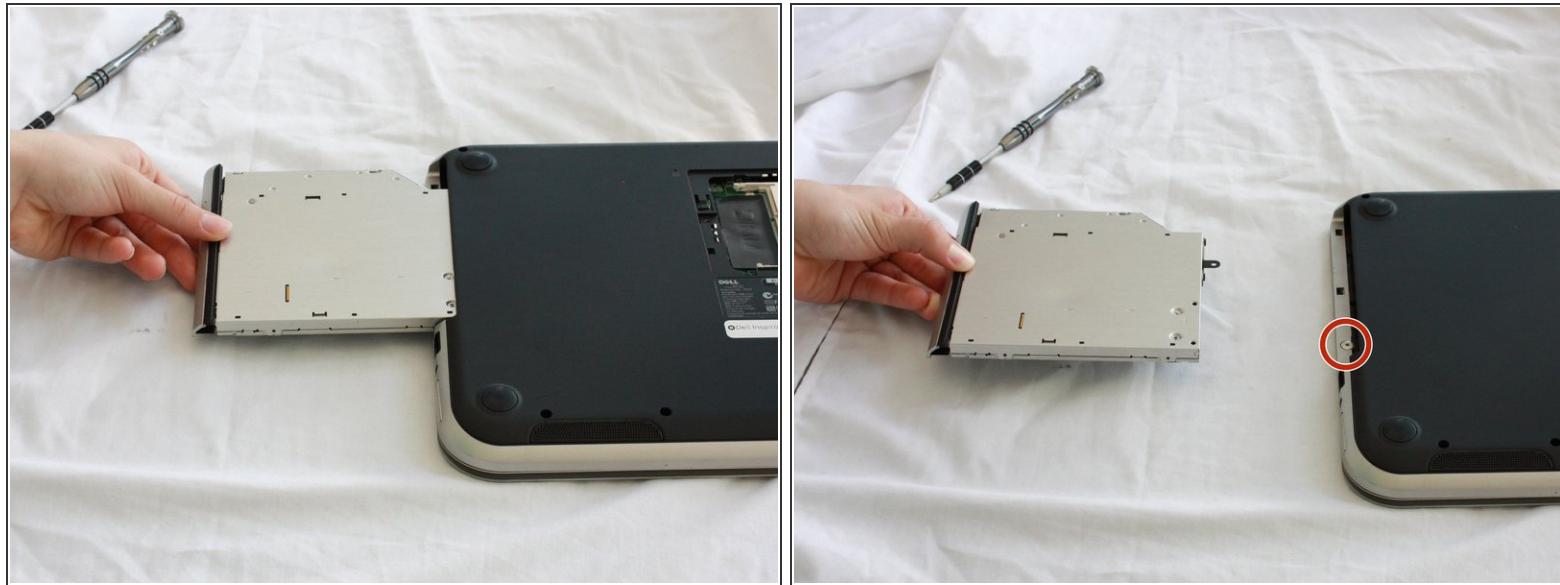

- Slide the CD/DVD drive on the side of the laptop out using your fingers.
- Using a J0 bit screwdriver, unscrew the one 2 mm Phillips screw.
- You only need to unscrew this screw if you are using this as a prerequisite guide.

Step 7 — Keyboard



- Lift the plastic yellow flap on the system board.
- Use the J0 Bit screwdriver to remove the one 6 mm Phillips screw in center of the system board that is connected to the keyboard.

Step 8



- Flip over the computer and open the display.


Step 9



- Insert a spudger next to the plastic indents located at the top of the keyboard and gently pry to release the securing clips.
- Lift the keyboard off of the computer.


⚠ Be careful not to tear the ribbon that attaches the back of the keyboard to the computer when lifting it.

Step 10

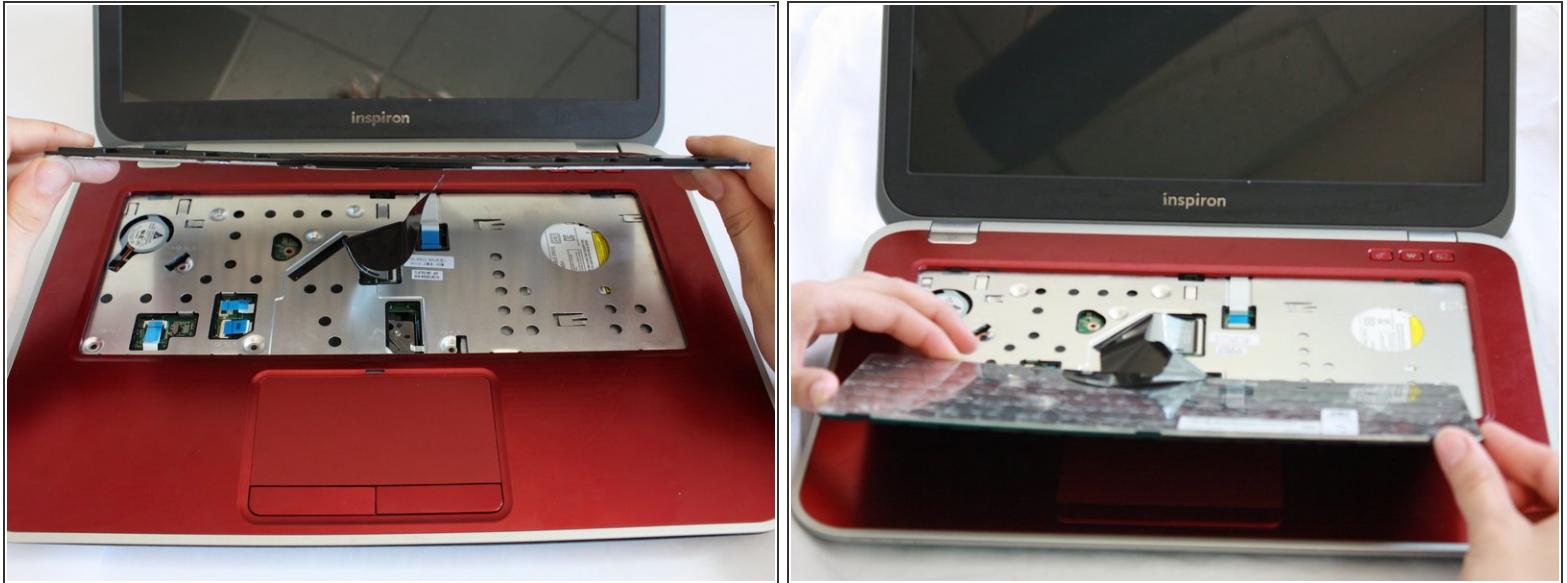

- Flip the keyboard over onto the palm-rest assembly.

Step 11

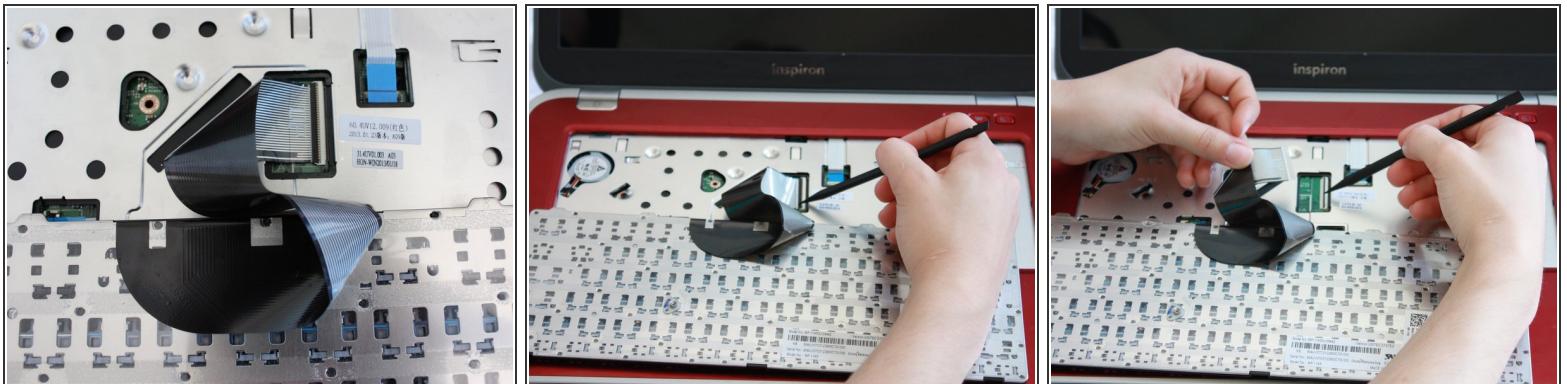

- Flip the little black securing bar near the base of the ribbon with a spudger to release the ribbon from the computer.

Step 12 — Palm Rest Assembly




- Close the display and turn over the computer.

Step 13




- Remove all 7 rubber screw caps with tweezers.
- Use a J0 Bit tipped screwdriver unscrew the seven 6 mm Phillips screws on the back casing of the laptop.

Step 14

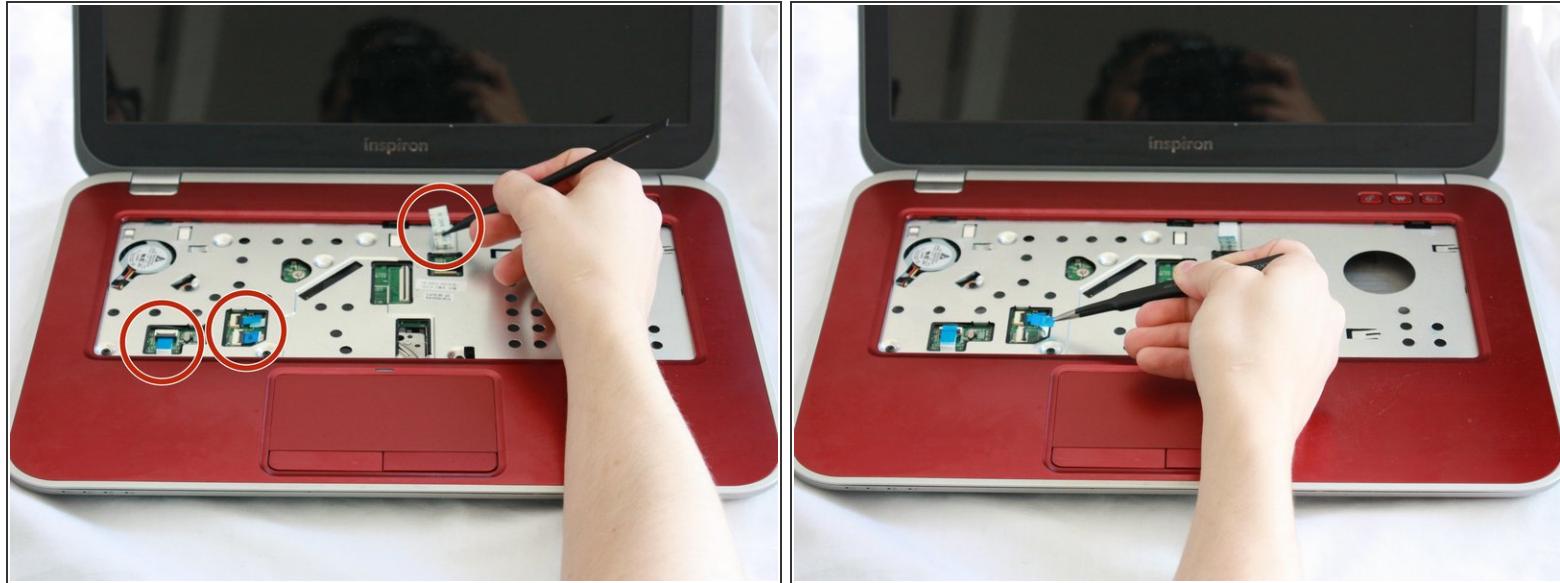

- Flip the computer over and open the display.
- Pull on the blue tabs to disconnect the palm rest assembly from the computer.

Step 15

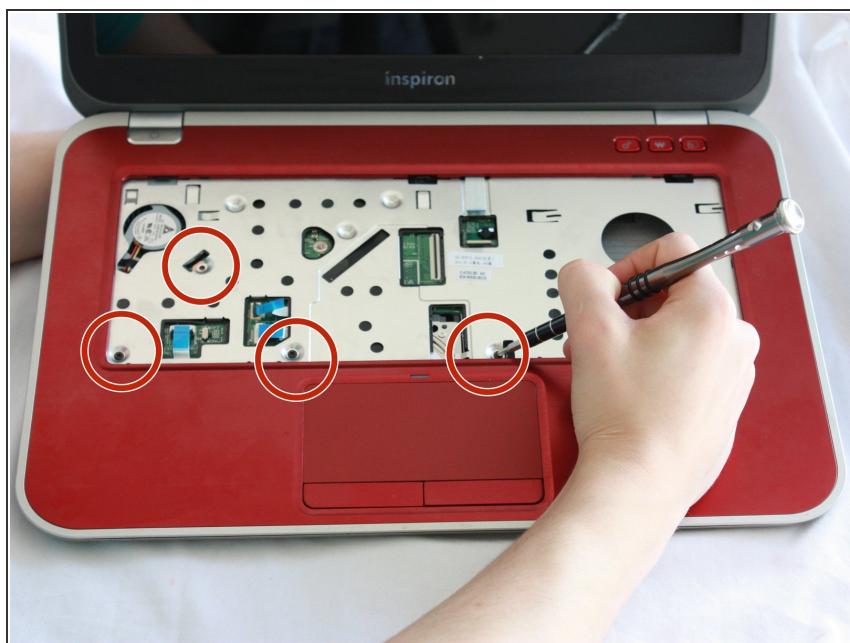

- Use J0 Bit screwdriver to remove all four 6 mm Phillips screws.


Step 16



- Gently wedge the nylon spudger underneath the palm-rest assembly to release the latches.
- Continue this process on all sides of the computer edges until the assembly pulls off.
- Remove the palm rest assembly.

(i) If you have difficulty lifting up the assembly, you might not have taken out all 7 screws on the bottom of the computer.

Step 17 — Battery

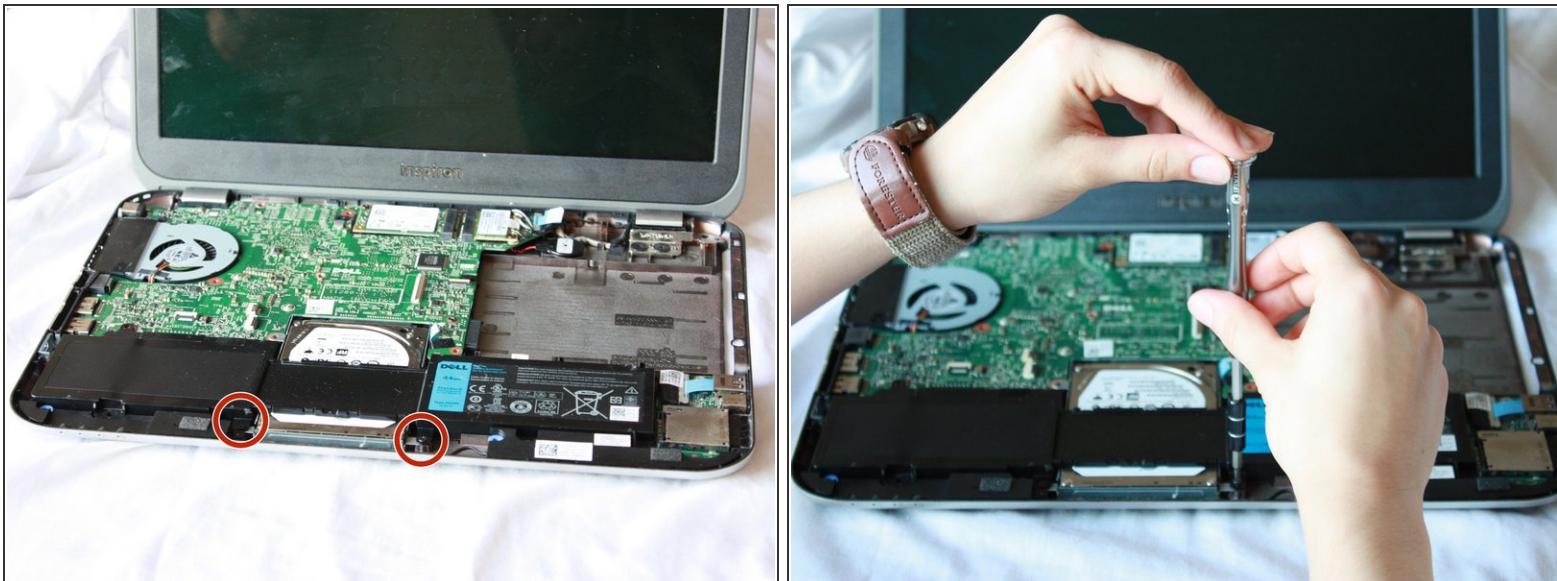


- Use a J0 Bit screwdriver to remove the two 6 mm Phillips screws securing the battery located near the bottom of the laptop.

Step 18



- Lift the tiny black tab and pull the battery out at a slight angle.


Step 19 — Daughter Board

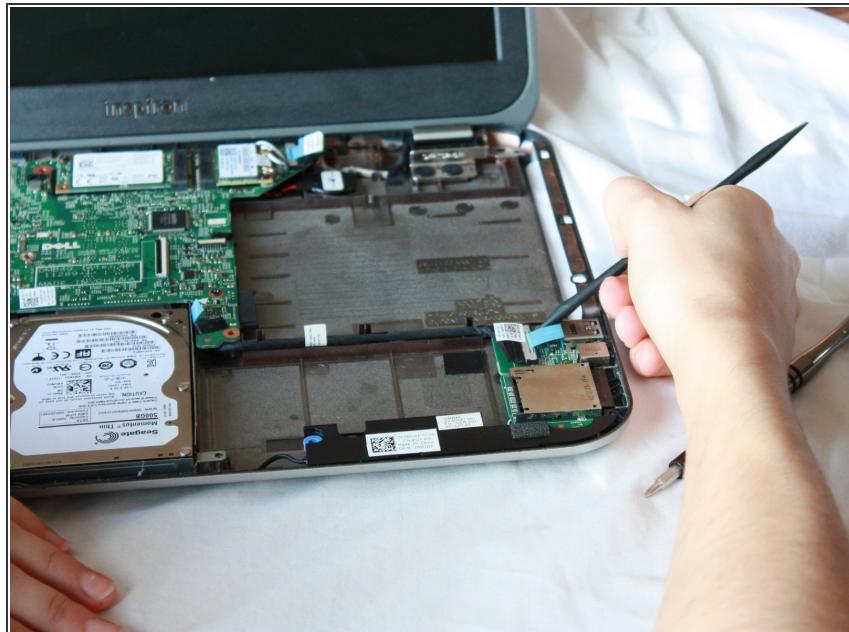

- Locate the black cord that was underneath the battery.
- Carefully lift up the chip connected to the end of the cord on the daughter board.


ⓘ Use a nylon spudger as leverage if you are having trouble.

Step 20

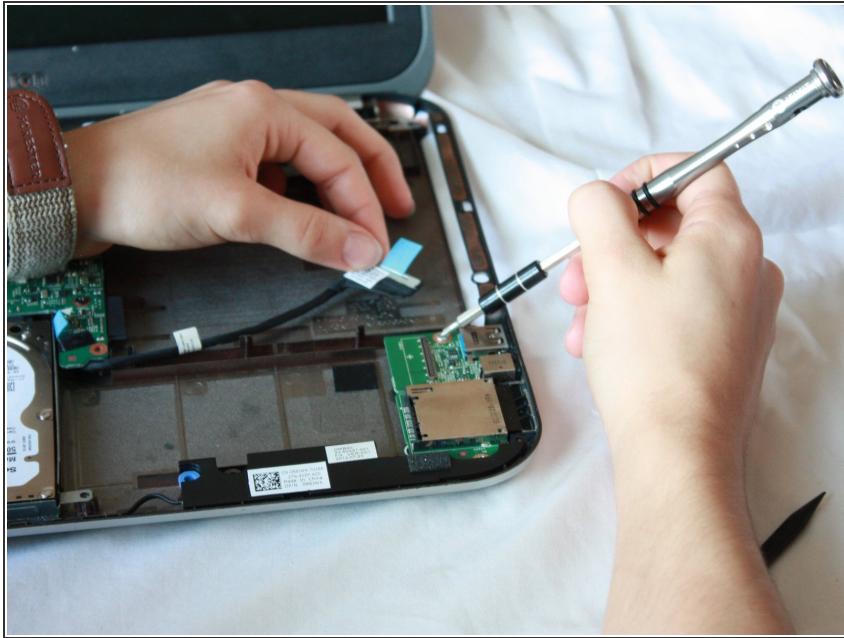


- Use a J0 Bit screwdriver to remove the two 6 mm Phillips head screw located on the daughter board.

Step 21

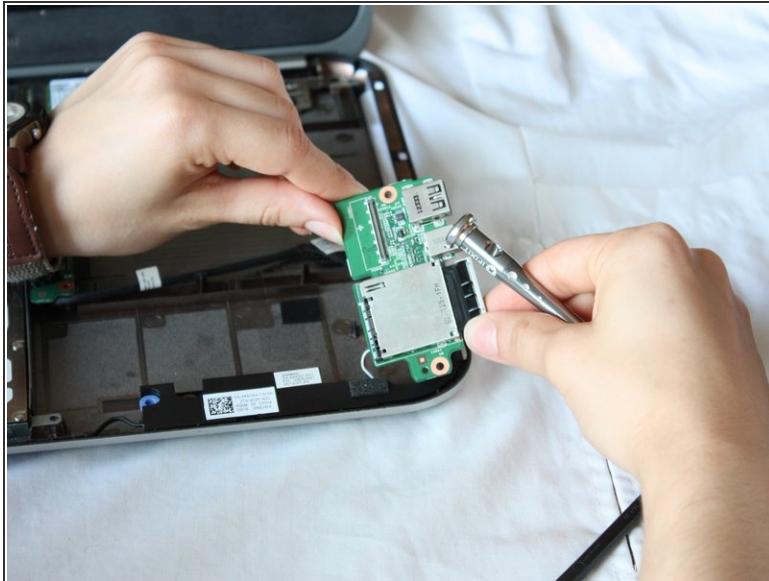

- Pick the daughter board up and flip it over.

Step 22

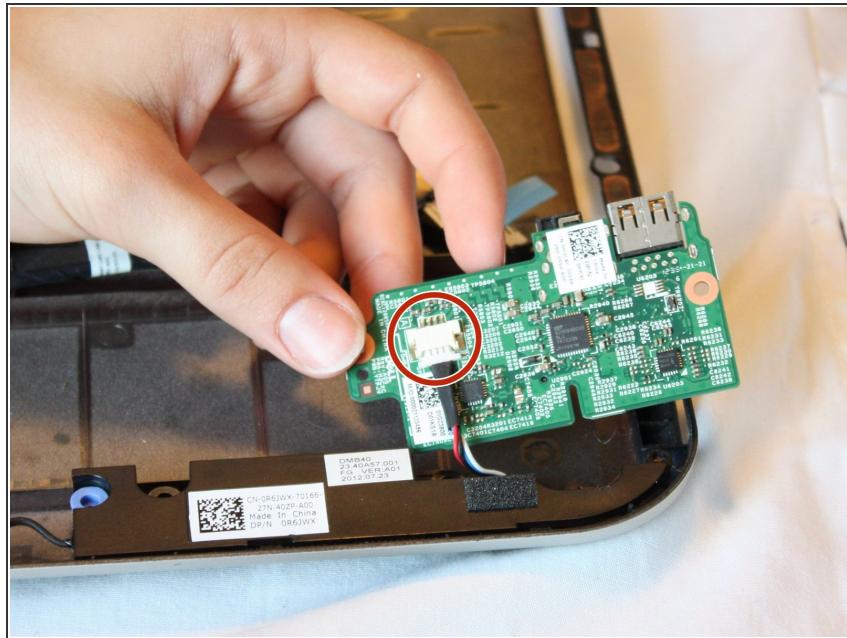

- Disconnect the black cable from the white connector by pulling the speaker cord from the daughter board.

To reassemble your device, follow these instructions in reverse order.