




Dell Inspiron 14z-5423 Optical Drive Replacement

This guide will teach how to replace the optical drive.

Written By: Marisol

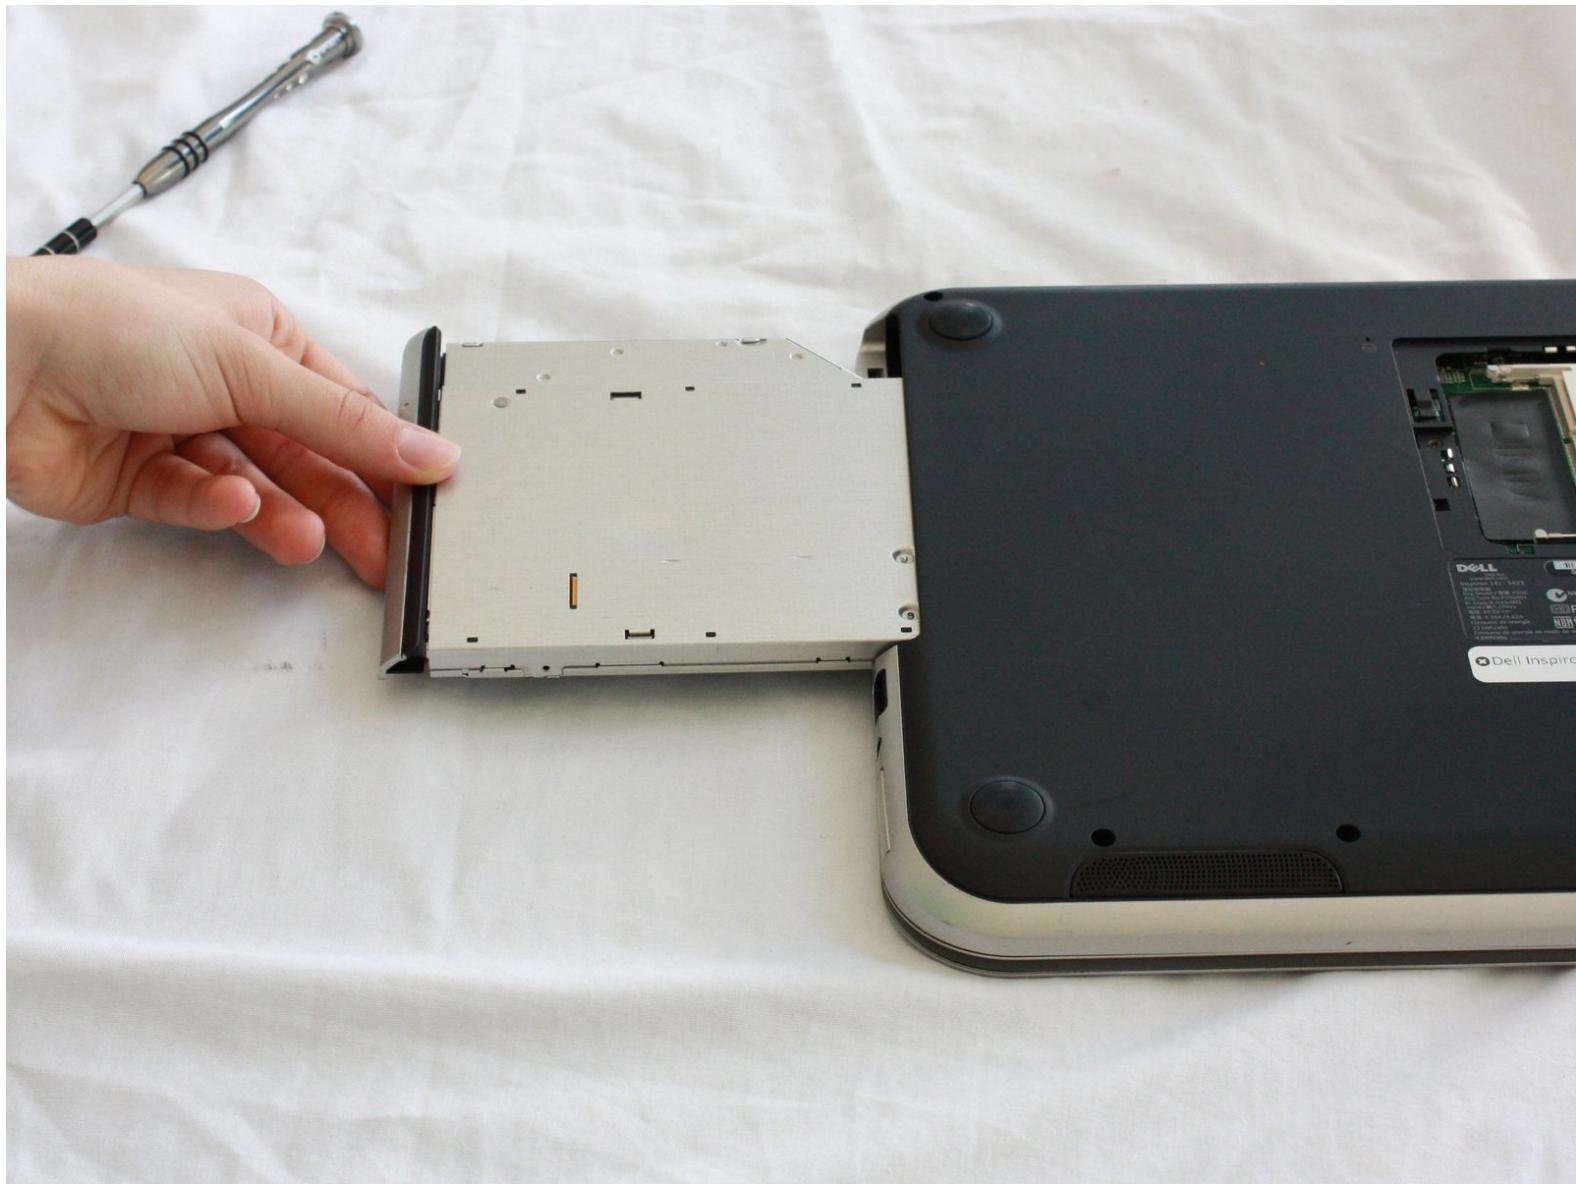

INTRODUCTION

The optical drive allows for users to play CD's and DVDs on the Dell Inspiron 14z - 5423. This easy step-by-step guide will help in replacing the optical drive.

TOOLS:

- [JIS Driver Set \(1\)](#)

Step 1 — RAM



- Close the display and turn over the computer.

 Make sure your device is powered down and unplugged before beginning the replacement.

Step 2




- Use a J0 bit tipped screwdriver to unscrew the one 6 mm Phillips screw on the RAM cover.

Step 3



- Lightly lift the RAM cover up and at an angle, away from the computer.

Step 4

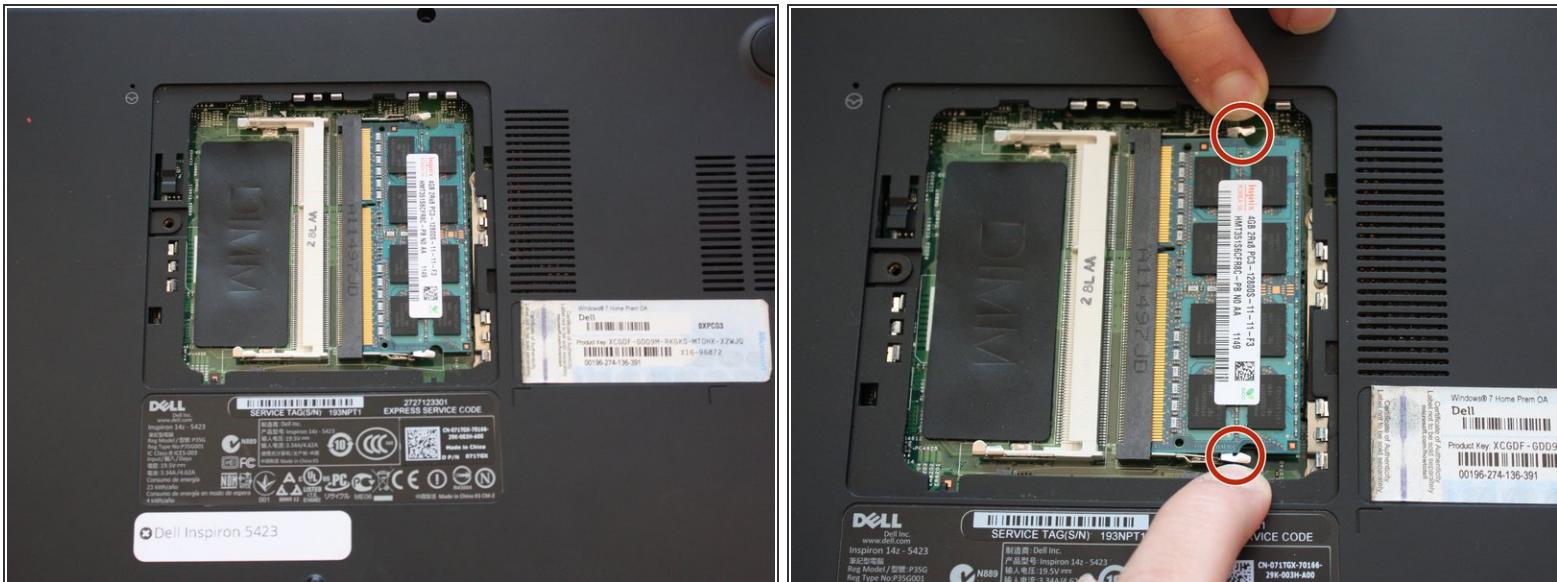


- Use your fingers to carefully pull the securing clips on the RAM away from each other.
- The RAM should pop up when the clips are released.

Step 5



- Remove the popped up RAM by pulling it away from the connection.
- *i* If it does not pop up pry it out in a steady and straight direction.

Step 6 — Optical Drive

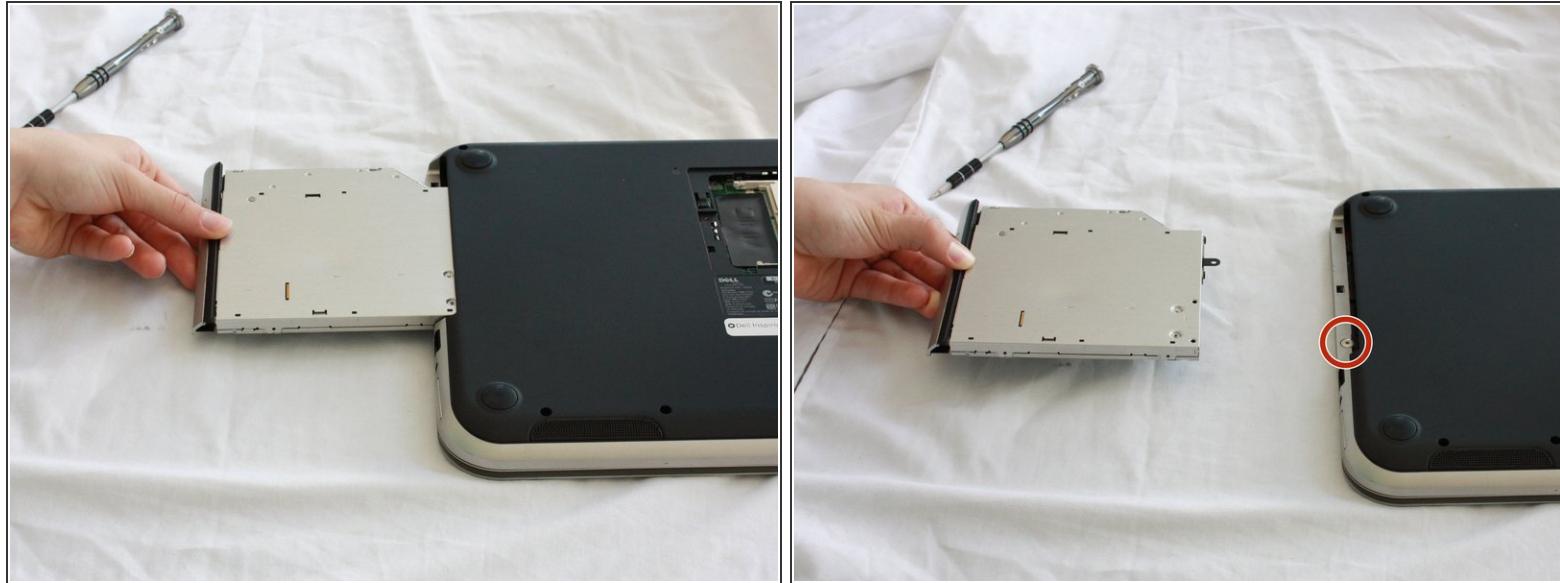

- Slide the CD/DVD drive on the side of the laptop out using your fingers.
- Using a J0 bit screwdriver, unscrew the one 2 mm Phillips screw.

(i) You only need to unscrew this screw if you are using this as a prerequisite guide.

To reassemble your device, follow these instructions in reverse order.