




# Dell Inspiron 15 5577 Gaming Battery Replacement

Written By: Terrence15

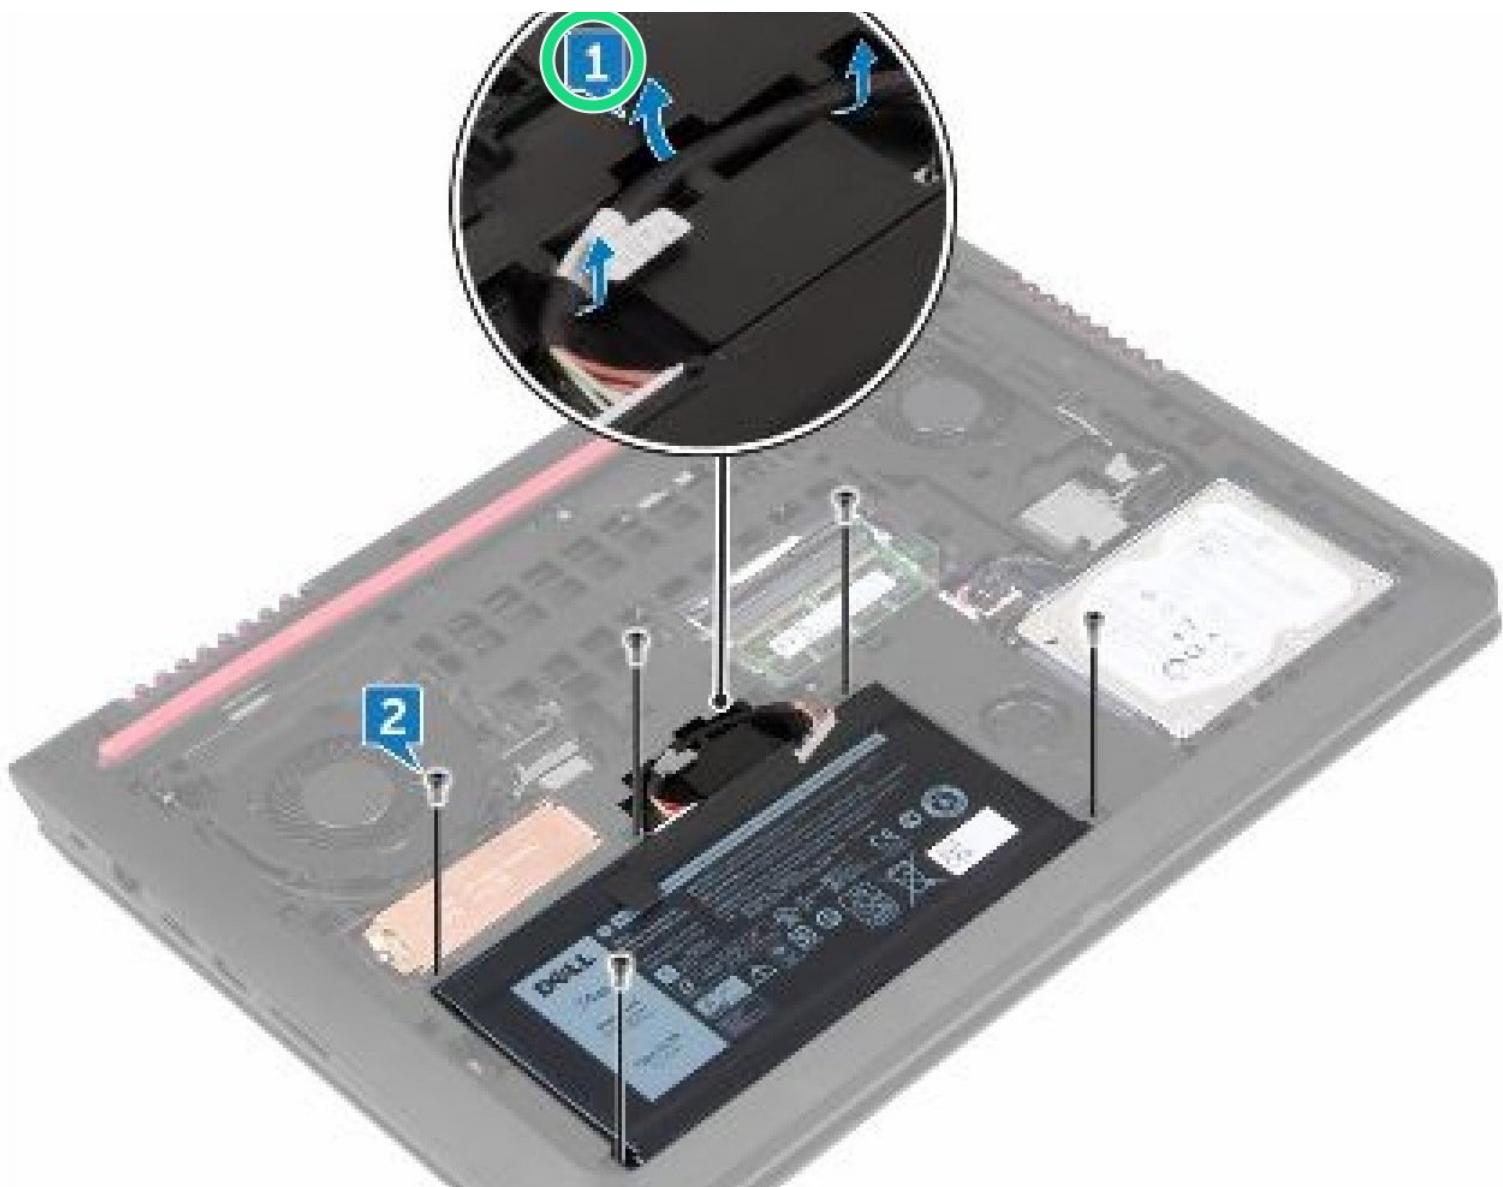


## INTRODUCTION

In this guide, we will be showing you how to remove and replace the Battery.

### TOOLS:

- Phillips #0 Screwdriver (1)


## Step 1 — Remove the Battery Cable

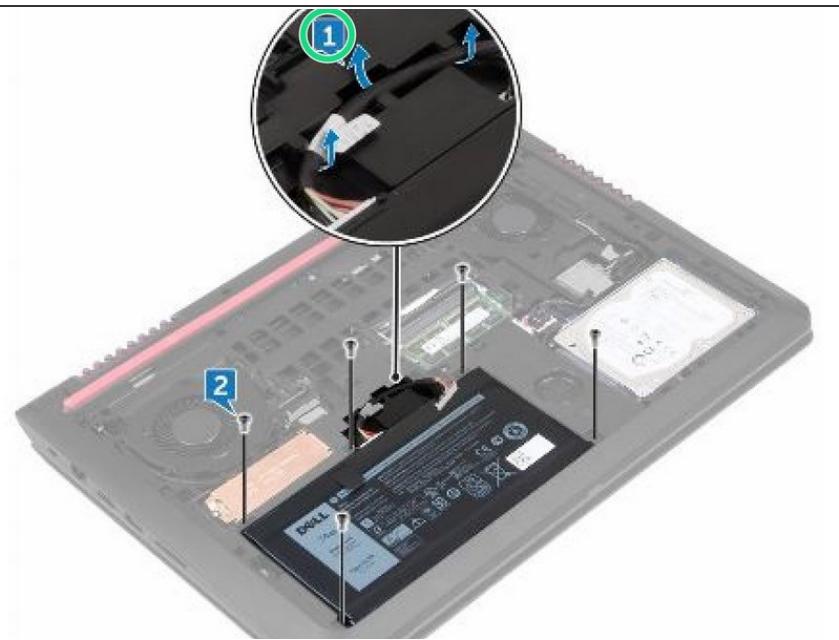

**⚠️** **WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Remove the battery cable from the routing guides on the computer base.

## Step 2 — Remove the Screws

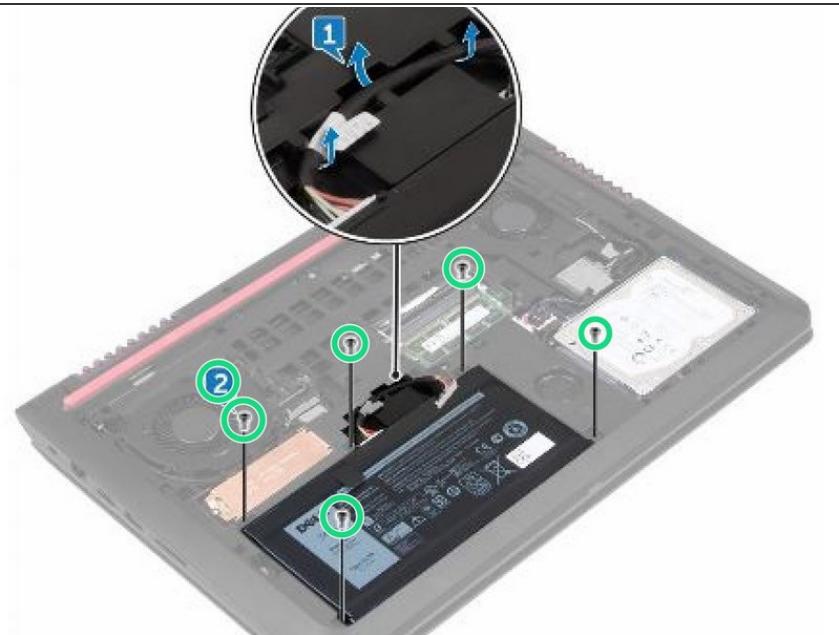

- Remove the five screws (M2x5 T8) that secure the battery to the computer base.

## Step 3 — Lifting the Battery

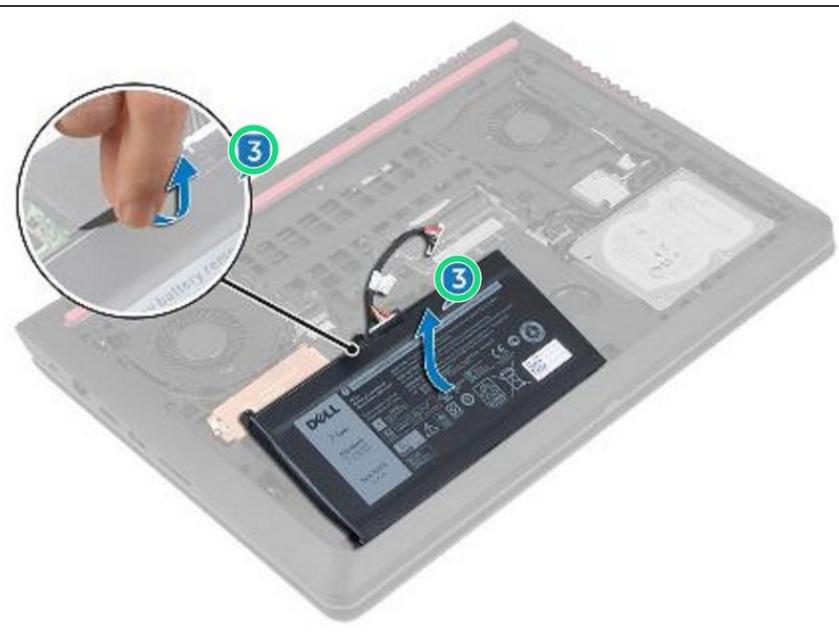


- Using the pull tab, lift the battery, along with its cable, off the computer base.

## Step 4 — Grounding the System Board




- Turn the computer over, open the display, and press and hold the power button for five seconds to ground the system board.

## Step 5 — Sliding the Battery

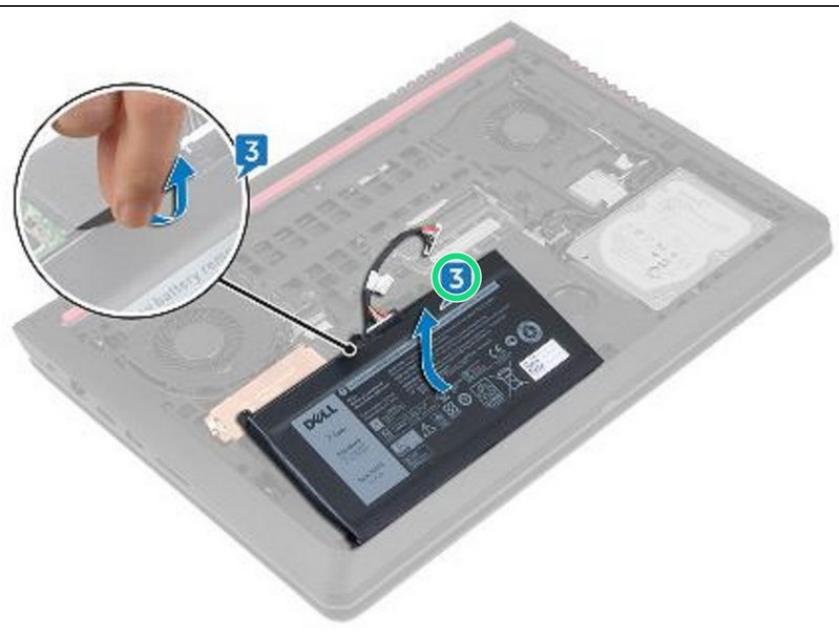


- Slide the **NEW** battery in the slot on the computer base.

## Step 6 — Align the Screw Holes

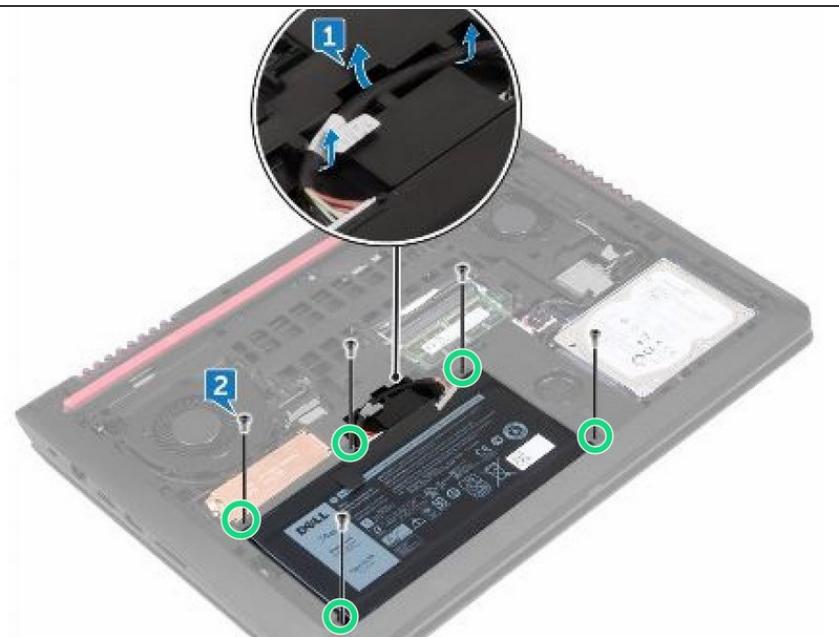


- Align the screw holes on the battery with the screw holes on the computer base.

## Step 7 — Replace the Screws

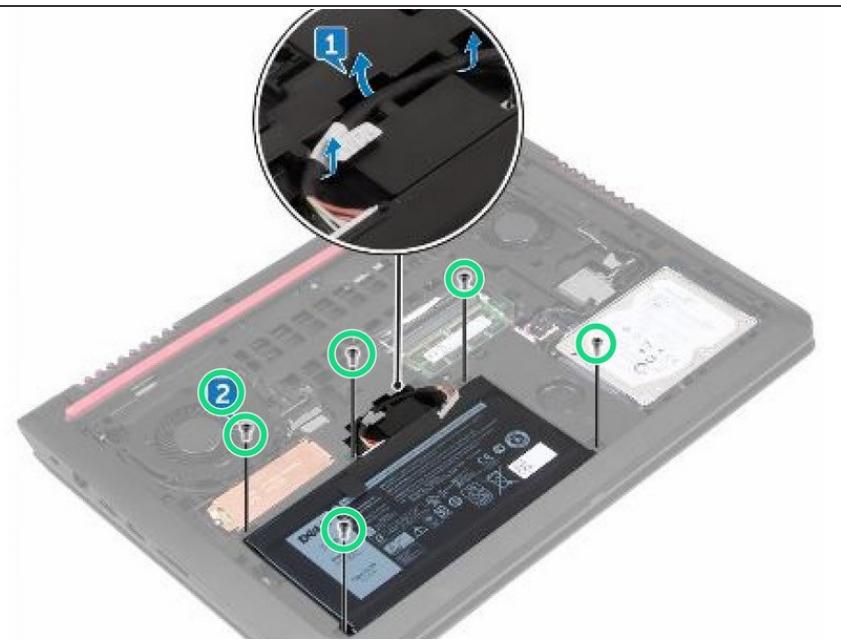

- Replace the five screws (M2x5 T8) that secure the battery to the computer base.

## Step 8 — Routing the Battery Cable

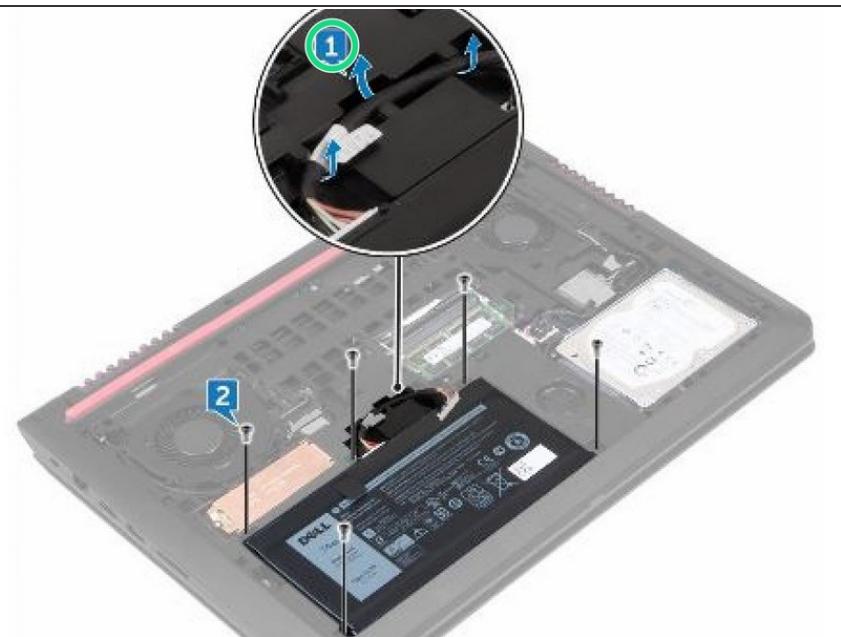

- Route the battery cable through the routing guides on the computer base.